

Guardian 6000™

Quick Start Guide









WHotkeys











Steady State Display Messages

During steady state operation, the display will show one of four typical screens as shown in the figure below.



🗹 Loading Coins

1. Depress Payout Cassette Release Latch.

6

2. Swing out Payout Cassette.

- 3. Fill the six coin tubes with the appropriate coins.
- 4. Close the Payout Cassette.

Notes

- Make sure all coins lay flat and fill each coin tube to be used with at least 5 coins.
- For the most reliable operation, do not load coin tubes above the 100% level marking.
- If not using all 6 tubes, leave all tubes installed and make sure to disable coin routing and coin level sensing for unused tubes. Use MENU/SETUP/CASSETTE/CUSTOM and set unused tubes to "---".

Coin Tube Capacitie							
	Country	Coin	Max Coin Count				
	Country	Туре	Qty.	\$			
	US	5¢	80	\$4.00			
		10¢	111	\$11.10			
		25¢	81	\$20.25			
		\$1	67	\$67.00			
		5¢	80	\$4.00			
		10¢	121	\$12.10			
	Canada	25¢	88	\$22.00			
		\$1	68	\$68.00			
		\$2	79	\$158.00			

Coin Payout Modes						
Keystrokes						
Hold down alpha key until desired coins are paid out.						
Keystrokes						
lold down alpha key until at east 4 coins are dispensed.						
Press Escrow Lever.						
Press any key.						

individual button pushes.

🗹 Payout Cassette

Coin Tube Position Designations



Guardian™ 6000 Standard Cassettes								
Cassette		Coin Denomination By Tube Position						
ID	Country	Α	в	C	D	ш	F	
BB	US	25¢	10¢	5¢	5¢	25¢	25¢	
DD	US	25¢	10¢	5¢	5¢	5¢	5¢	
BD	US / Canada	\$1	\$1	25¢	5¢	10¢	25¢	
BE	Canada	\$2	\$1	25¢	5¢	25¢	25¢	
BF	Canada	\$2	\$2	\$1	5¢	25¢	25¢	

Please contact your Coinco Sales Rep about customization of standard cassettes, or see www.coinco.com

Custom Cassette - Coin Tube Positions							
	\$2	\$1	25¢	5¢	10¢		
	Tube #1	Tube #2	Tube #3	Tube #4	Tube #6		
Possible Tube Positions	AB	ABC	ABCDEF	ABCDEF	ABCDE		
US	NA	\$1	25¢	5¢	10¢		
Canada	\$2	\$1	25¢	5¢	10¢		

TYPICAL USAGE



Set Float (optional)

- 1. You can guickly Enable Float at the current coin levels by simultaneously pressing keypad hotkevs E+F. Then press ENTER to accept the displayed Float value.
- 2. To disable or reset the Float level, simultaneously press keypad hotkeys **D+F** to **D**isable Float. To reset Float, adjust the coin levels and repeat Step 1 above.

NOTE: Disable all unused tubes.



- 1. Depress Payout Cassette Release Latch downward and swing out cassette.
- Add appropriate coins as shown on the LCD display.
- 3. Close the Payout Cassette.
- 4. Overfill Paydown (if enabled) will automatically dispense excess coins above the Float level.



1. Push MENU + MENU to begin audit reporting

Navigation Keys - Within Audit

ENTER = Pause / Resume. = Scrolls within screens.



Cycles and verifies proper feedback of changer systems.

- 1. Push MENU, then scroll to GENERAL-AUTOTEST and press ENTER.
- 2. Open Payout Cassette and Sorting Door.

Autotest begins automatically. All systems are cycled and the status of each is reported on the display.

For more information on the Guardian 6000™, please see the Operation and Service Manual, available at www.coinco.com



For technical support on this or any other Coinco product, contact your nearest Coinco Branch Office/Service Center.

> Coin Acceptors, Inc. U.S. World Headquarters 300 Hunter Avenue St. Louis, MO 63124 (314) 725-0100 1-800-325-2646

Coin Acceptors, Inc. Canadian Headquarters 1-435 Four Valley Drive Concord (Toronto), Ontario L4K 5X5 Canada Phone: (905) 738-5777 1-800-387-9300

email: techsupport@coinco.com www.coinco.com

Coinco Publication # 927979 Rev. 2 06/2007 Printed in the U.S.A.