


**AND**  
**parts**  
**services**

**S E R V I C E  
A N D  
P A R T S  
M A N U A L**

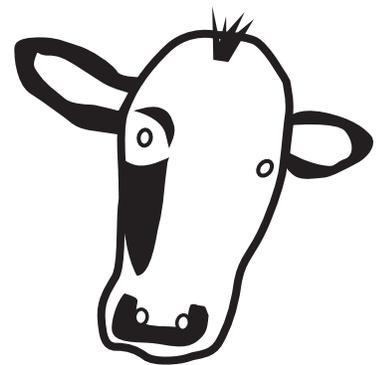

ROYAL VENDORS, Inc.  
426 Industrial Boulevard  
Kearneysville WV 25430

CUSTOMER SERVICE:  
(800) 931-9214  
(304) 728-7056



**Royal Vendors, Inc. • 426 Industrial Boulevard • Kearneysville WV 25430 • USA**

Customer Service: +1 304 728-7056 or Toll Free (800) 931-9214

Parts Fax: +1 304 725-4016 • Technical Service Fax: +1 304 725-6579

**E-mail:** [technicalinquiry@royalvendors.com](mailto:technicalinquiry@royalvendors.com)  
[parts@royalvendors.com](mailto:parts@royalvendors.com)

**Web page:** [www.royalvendors.com](http://www.royalvendors.com)

# TABLE OF CONTENTS

---

|   |           |
|---|-----------|
| <b>Safety Segment .....</b>                                   | <b>4</b>  |
| <br>  |           |
| <b>1. General Information .....</b>                           | <b>6</b>  |
| Introduction to “Milk Merchandiser” .....                     | 6         |
| “Milk Merchandiser” Features .....                            | 6         |
| Vender Identification .....                                   | 7         |
| Credit and Replacement Policy .....                           | 8         |
| <br>  |           |
| <b>2. Vender Component Explanation .....</b>                  | <b>9</b>  |
| Vender Control Board (Including Pinouts) .....                | 9         |
| Low Voltage Transformer .....                                 | 14        |
| Delivery Chute Sensor (Including Adjustment) .....            | 15        |
| Refrigeration System .....                                    | 16        |
| <br>  |           |
| <b>3. Vender Programming .....</b>                            | <b>19</b> |
| The Necessity Of Correct Programming .....                    | 19        |
| Precautions To Take When Working With The Control Board ..... | 19        |
| Introduction To Programming .....                             | 19        |
| Menu Levels .....   | 20        |
| INTERNAL (Service) MENU .....                                 | 21        |
| CASH (cash counter) Mode .....                                | 21        |
| SALE (sale counter) Mode .....                                | 21        |
| CArd (card counter) Mode .....                                | 21        |
| toKn (token counter) Mode .....                               | 21        |
| Error (errors) Mode .....                                     | 22        |
| tESt (column test vend) Mode .....                            | 22        |
| PriC(selection price) Mode .....                              | 22        |
| StoS (space to sales) Mode .....                              | 23        |
| SdEP (set vending depth ) Mode .....                          | 23        |
| Con (configurations) Mode .....                               | 24        |
| rtn (return to sales) Mode .....                              | 25        |
| OPTIONAL MENU (If Con 2 is set “1”) .....                     | 25        |
| ECO (exact change mode) .....                                 | 25        |
| CPO (coin payout) Mode .....                                  | 25        |
| tUFL (coin tube fill) Mode .....                              | 25        |
| dSAL (discounted sale counter) Mode .....                     | 26        |
| diFc (discounted differential cash counter) Mode .....        | 26        |
| SdiS (discounted selection price) Mode .....                  | 26        |
| StCL (set timer controlled selections) Mode .....             | 27        |
| tinE (time and timer settings) Mode .....                     | 27        |
| FriG (refrigeration parameters) Mode .....                    | 30        |
| PAS (External Menu password setting) Mode .....               | 31        |
| LAnG (international language setting) Mode .....              | 32        |
| rtn (return to sales) Mode .....                              | 32        |
| External Menu (accessible while in the “greeting” mode) ..... | 32        |
| SALE (sale counter) Mode .....                                | 32        |
| rtn (return to sales) Mode .....                              | 33        |
| Error (errors) Mode .....                                     | 33        |

# TABLE OF CONTENTS CONTINUED

---

|  |           |
|--|-----------|
| <b>4. Vend Cycle</b> .....                                 | <b>34</b> |
| Stand by Condition .....                                   | 34        |
| Establishing Credit .....                                  | 34        |
| Valid Selection .....                                      | 34        |
| Vend Sequence .....  | 34        |
| Product Delivery .....                                     | 34        |
| Sold Out .....   | 34        |
| Resetting Sold Out Selections .....                        | 34        |
| <br>   |           |
| <b>5. Vender Maintenance</b> .....                         | <b>35</b> |
| General Maintenance .....                                  | 35        |
| Using The Vender's Error Code System .....                 | 36        |
| Error Codes .....  | 36        |
| Troubleshooting .....                                      | 37        |
| Coin Acceptance .....                                      | 37        |
| Bill Acceptance .....                                      | 38        |
| Vending Problems .....                                     | 39        |
| Miscellaneous Problems .....                               | 40        |
| Refrigeration Problems .....                               | 41        |
| <br>   |           |
| <b>6. Exploded Views and Part Numbers</b> .....            | <b>44</b> |
| Control Board and Wiring .....                             | 44        |
| Port Assembly .....  | 46        |
| Inner Door Assembly .....                                  | 48        |
| Main Door Hinge, T-Handle And Door Lifter Assemblies ..... | 50        |
| Refrigeration System Assembly .....                        | 52        |
| Evaporator Fan Motor Assembly .....                        | 54        |
| Vend Mechanism Assembly .....                              | 56        |
| Miscellaneous Assemblies .....                             | 58        |
| Door Assembly, Front .....                                 | 60        |
| Door Assembly, Rear .....                                  | 62        |
| Select Panel Assembly, Rear .....                          | 64        |
| RVCD Vandal Resistant Door (CDC) Front .....               | 66        |
| RVCD Vandal Resistant Door (CDC) Rear .....                | 68        |
| RVCD Center Door Changer Vault .....                       | 70        |
| Flat Horizontal Display, Door Front .....                  | 72        |
| Flat Horizontal Display, Door Rear .....                   | 74        |
| Flat Horizontal Display, Select Panel .....                | 76        |
| <br>   |           |
| <b>Programming Flowchart</b> .....                         | <b>78</b> |

# SAFETY SEGMENT

---

## ROYAL VENDORS' COMMITMENT TO SAFETY

Royal Vendors is committed to safety with all of our product designs. We are committed to notifying the user of a possible danger involving the improper handling or maintenance of our venders. The servicing of any electrical or mechanical device involves **potential dangers**, both to those servicing the equipment and to users of the equipment. These dangers can occur because of improper maintenance or usage. The purpose of this safety segment is to alert everyone servicing Royal equipment of potentially dangerous areas, and to provide **basic safety guidelines** for proper upkeep.

The service manual contains various **warnings** that should be carefully read to minimize the risk of personal injury. This manual also contains service information to insure that proper methods are followed to avoid damaging the vender or making it unsafe. It is also important to understand these **warnings** provide general guidance only. Royal could not possibly know, evaluate, or advise of all of the conceivable ways in which service might be done. Consequently, Royal cannot predict all of the possible dangerous results. These outlined safety precautions are the basis for an effective safety program. Use these safety measures, along with the service bulletins, helpful hints and product specification sheets, when installing or servicing Royal equipment.

We recommend that persons servicing our equipment maintain a similar commitment to safety. **Only personnel properly trained should have access to the interior of the vender.** This will minimize the potential dangers that are inherent in electrical and mechanical devices. Royal has no control over the vender once it leaves the premises. It is the owner or lessor's responsibility to maintain the vender in a safe condition. See installation insert located in the coin box of a new vender for proper installation procedures and refer to the service manual for recommended maintenance procedures. If you have any questions, please contact the Technical Services Department at 1.800.931.9214.

## SAFETY REGULATIONS

- Read the safety segment before installation or service.
- Test for proper grounding before installing to reduce the risk of electrical shock and fire.
- Turn off or disconnect power cord from wall outlet before servicing.
- Only fully trained service technicians should service vender when vender has power.
- Remove any product before moving a vender.
- Use appropriate equipment when moving a vender.
- Always wear eye protection, and protect your hands, face, and body when working near the refrigeration system.
- Use only authorized replacement parts.
- Be aware of inherent dangers in rocking or tipping a vender.

## SECTION I: ELECTRICAL HAZARDS GENERAL ADVICE

Careless or improper handling of electrical circuits can result in injury or death. Anyone installing, repairing, loading, opening, or otherwise servicing a vender should be aware of this precaution. Apply all of the normal precautions when handling electrical circuits, such as:

- Refrigeration servicing to be performed by qualified personnel only.
- Unplug the vender before servicing.
- Replace electrical cords if there is any evidence of fraying or other damage.
- Keep all protective covers and ground wires in place.
- Plug equipment into outlets that are properly grounded and polarized (where applicable), and protected with fuses or circuit breakers of the correct size.
- All electrical connections must be dry and free of moisture before applying power.

**WARNING:**  
**ALWAYS TEST TO VERIFY PROPER GROUNDING PRIOR TO INSTALLATION IN ORDER TO REDUCE THE RISK OF ELECTRICAL SHOCK AND FIRE.**

# SAFETY SEGMENT

---

## SECTION II: ELECTRICAL HAZARDS

### A. Servicing with “Power Off”

For maximum safety, unplug the power cord from the wall outlet before opening the vender door. This will remove power from the equipment and avoid electrical hazards. Service personnel should remain aware of possible hazards from hot components although electrical power is off.

### B. Servicing with “Power On”

Some service situations may require access with power on. Only fully qualified service technicians should perform power-on servicing. Particular caution is required in servicing assemblies that combine electrical power and mechanical movement. Sudden movement (to escape mechanical action) can result in contact with live circuits and vice versa. It is therefore important to maintain maximum clearances from both moving parts and live circuits when servicing.

#### WARNINGS:

**1. ONLY FULLY TRAINED PERSONNEL SHOULD ACCOMPLISH “POWER-ON” SERVICING. SUCH SERVICE BY UNQUALIFIED INDIVIDUALS CAN BE DANGEROUS.**

**2. LIGHTING CIRCUITS CAN BE HAZARDOUS. ALWAYS DISCONNECT FROM POWER SUPPLY BEFORE REPLACING A BULB OR SERVICING THE VENDER IN THAT AREA.**

**3. NEVER USE A HOSE, PRESSURE WASHER OR ANY CLEANING METHOD THAT COULD WET ELECTRICAL COMPONENTS. SEE CLEANING SECTION OF MANUAL FOR SUGGESTED CLEANING METHODS. IF WATER CONTAMINATION OF ELECTRICAL COMPONENTS IS SUSPECTED, USE QUALIFIED ELECTRICAL TESTING EQUIPMENT AND TEST METHODS TO ASSURE THAT VENDER IS NOT A HAZARD BEFORE APPLYING POWER FOR ANY REASON.**

# SECTION 1: GENERAL INFORMATION

## General Information

### INTRODUCTION TO “Milk Merchandiser”

The Milk Merchandiser can and bottle vender is capable of vending most packages. It uses a Control Board to manage vending operations. This Control Board must be programmed correctly for the Vender to operate properly. Through the Vender’s electronic Control Board, you will find better space to sales allocations which will increase profits through fewer sold out selections and less loading frequency.

Through Milk Merchandiser’s flexibility, you will profit by using the Multi-Pricing and Space to Sales features. As you will see later in the Manual, there are other features, such as the ability to control vending by using a “built in” timer or by using an optional on/off key switch. Like most electronic equipment, the Control Board has the ability to control most items in the vending machine. It manages the operation of the lighting system, with an optional kit. Milk Merchandiser utilizes high torque 24 volt DC vend motors. Testing has proven these vend motors to be very strong and reliable.

Milk Merchandiser’s programming is done “Menu Style” with the menus consisting of “Main Items” and “Sub-Items”. Figure 1.1 is a good example of how the menu system works.

“Cash” is the first menu after pressing the mode button on the control board. You can only access menu items from the menu you are in. Just as the “ENTER” button takes you into each level, the “HOME” button takes you back to previous menu levels each time you press it. The menu system is explained in greater detail in Section 4, Vender Programming: Menu Levels.

- Field proven, reliable impact delivery sensor detects the vend to cancel vend cycle.
- Patented learning mode for quick vending.
- A “Direct drive” DC vend motor in each column drives each column’s vend rotor.
- No vend mechanism adjustments are necessary to change from 12oz. cans to 16oz. or 20oz. bottles. All that is needed is to change the depth setting in the programming and product retainers / rear spacers adjustments.
- User friendly menu style programming
- Hand Held Computer (HHC) programming and data retrieval.
- Real time clock / calendar to control “built-in” timer (can display time on LED).
- Milk Merchandiser supports Multi-Drop Bus Coin Mechanisms, bill validators and card readers.
- Allows programmable space to sales: Custom or Factory settings.
- Capable of setting full escrow to vend (even if a column jams).
- External menu allows access to sales (vend) counts and error information.

### Milk Merchandiser Features

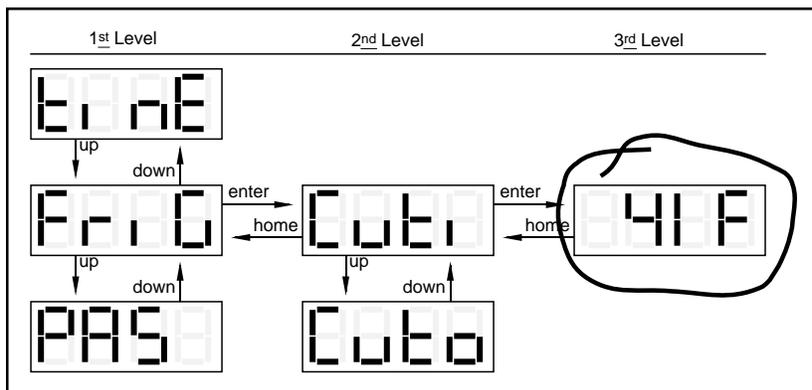


Figure 1.1

# SECTION 1: GENERAL INFORMATION

- Both total (historical) and individual (resettable) vend and cash counters.
- Milk Merchandiser can display the sale (vend) and cash totals (historical) on the LED upon opening the Vender's main door for easy access.

## VENDER IDENTIFICATION

Your Milk Merchandiser vending machine can be easily identified by taking note of the following three items:

1. Vender Serial Plate - mounted on the exterior left side of the Vender door,
2. Refrigeration Serial Plate - mounted on the "kick plate" of the refrigeration unit, and
3. Control Chip Revision Number - mounted on the right side of the Control Board.

### VENDER SERIAL PLATE

**Note:** There are two types of serial plates issued, see figure 1.2 and 1.3.

VENDER SERIAL PLATE - The vender's main serial plate (shown in figures 1.2 and 1.3) is located on the exterior left side of the vender's main door and has the following information:

- Vender model number
- Vender serial number
- Amps required by vender
- Unit charge of R134A
- Refrigeration design pressures

The vender's model number contains two important pieces of information. The machine type such as RVCDE (Royal Vendors Cold Drink Electronic). It also contains the vender model number such as 650-10 (capacity of 650 twelve ounce cans / 10 selections).

#### How to read a serial number (fig 1.2):

- The first 4 numbers represent the year the vender was produced
- The 5th and 6th numbers represent the week within the year the vender was produced
- The 1st letter represents the style of vender
- The 2nd letter represents the location the vender was built
- The last five numbers represent the model built with in that week

### REFRIGERATION SERIAL PLATE

The Refrigeration Serial Plate is located at the bottom of the Vender's cabinet in front of the Condenser coil. It is mounted to the refrigeration unit kick plate. It looks similar to the Serial Plate shown in Figure 1.2 with the exception that the model number specified is the refrigeration unit model (as shown below). There is currently one model in use:

| Model | Compressor Size      | Usage                  |
|-------|----------------------|------------------------|
| 8000W | Super 1/3 Horsepower | All Milk Merchandisers |

### CONTROL CHIP VERSION NUMBER

The Control Chip Version Number is printed on a white decal located to the top right of the main chip of the Control Board. This number is extremely important when calling for service/programming help, or for matching a replacement Control Board. See fig. 2.2

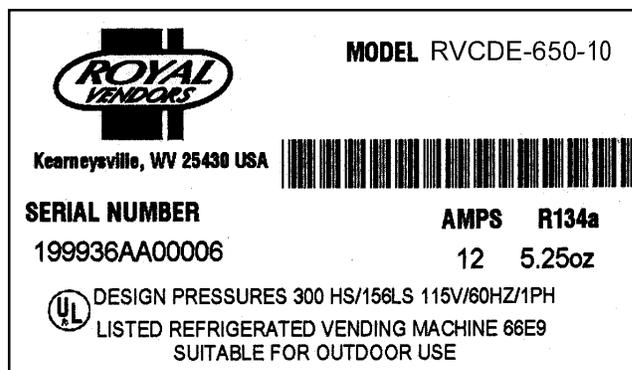


Figure 1.2

**IMPORTANT NOTE:** To serve you better, we ask you have the following items available before contacting your Royal Vendors' service representative:

- A. Your company's name
- B. Your company's phone number (area code first)
- C. Your first and last name
- D. The Vender(s) model number
- E. The Vender(s) serial number
- F. The Vender(s) Control Board revision number (if concerning a board or programming)

It is also very important to have all of the information about your problem available when you call.

# SECTION 1: GENERAL INFORMATION

---

## CREDIT AND REPLACEMENT POLICY

CREDITS OR REPLACEMENTS WILL BE ISSUED ON WARRANTY ITEMS IF THE PROPER PROCEDURES ARE FOLLOWED:

1. Royal Vendors will pay shipping charges on all parts covered under this warranty, when transportation has been made the most economical way (within the continental US regular ground UPS). An ARS (Authorized Return Service) sticker will be sent with all warranty parts. This method of shipping is preferred for returning parts to Royal Vendors.
2. Credits will only be issued to warranty parts that have been ordered in advance; not for parts ordered as stock (NO EXCEPTIONS).
3. When ordering warranty parts in advance, please have the full Vender / Unit Serial Number.
4. A copy of the Packing Slip, correct Serial Number, and complete Return Material Tag (provided with part) are required for sending back parts. Please complete the Return Material Tag, keeping the white copy for your records and sending the yellow tag back with the attached part. Make sure you have your company's name, address, phone number, serial number, and model number along with a brief explanation of the problem.
5. If the item returned is not under warranty, it will be sent back to you at your expense or it will be scrapped.
6. All warranty parts should be properly wrapped and packed securely to avoid further damage. Refrigeration units that are returned from the field and have been tapped into, tampered with, not packaged properly, or have had the serial plate removed, will void the warranty.
7. If parts are not returned within 15 working days, the invoice will be due in full.

## VOLTAGE REQUIREMENTS

The Vender is designed to operate at a voltage of 115 volts, 60 hertz. It requires a minimum of 15 amp service. The service outlet voltage must not exceed 129 VAC or fall below 103 VAC. The Vender has a three prong, three wire, grounding cord. The Vender must be plugged into a grounded electrical outlet to protect the customer from an electrical shock. If you are not sure your outlet is properly grounded, have it checked by a qualified electrician.

When you plug in the Vender, you should observe the following:

1. The florescent lights displaying the Vender sign will come on.
2. The refrigeration compressor will start to run (*if the cabinet temperature is above the thermostat's cut-in point*).
3. The LED display will light.

## VENDER POWER CORD NOTE

Extension cords are not recommended, unless they are authorized before use by a certified electrician.

## SECTION 2. VENDER COMPONENT EXPLANATION

# Vender Component Explanation

### VENDER CONTROL BOARD (Including Pinouts)

Your Milk Merchandiser Vender is equipped with a Main Control Board which is responsible for most Vender operations. In most Venders (non-CDC), it is located in the upper section of the Select Panel inside the Vender's main door. The Control Board is protected by a cover. Removing this cover will expose the Control Board in its entirety, along with all of the Control Board's wiring connections.

**IDENTIFICATION:** The Milk Merchandiser Control Board can easily be identified by noting the identification number printed on a small white decal on the Control Board's e-prom chip. The Control Board's identification number is a necessity when ordering parts for your Vender and when contacting a Royal Vendors' service representative. The Control Board identification decal is shown in "Vender Identification" of Section 1.

**OPERATION REQUIREMENTS:** The Control Board requires approximately 24 volts AC from the low voltage transformer (described later in this Section). This will allow the Control Board to function and to supply power to all the Vender's components listed below.

**OPERATION:** Upon receiving the appropriate voltage from the transformer, the Control Board will issue information to some components, receive information from some components, and communicate both ways with some components.

- The Control Board issues instructions ( and/or voltage) to:
  - LED Display
  - Vend Motor (only when vend motor is to run)
- The Control Board receives information (and or voltage) from:
  - Select Switches (logic level)
  - Door Switch (logic level)
  - Delivery Chute Sensor
  - Temperature Sensor
- The Control Board communicates both ways with:
  - Coin Mechanism
  - Bill Validator (optional)
  - Debit Card Reader (optional)
  - Hand Held Computer (optional)

**CONTROL BOARD PINOUTS:** The Milk Merchandiser Control Board has several electrical pinouts, a set-up mode button, a delivery sensor adjustment trimpot, a delivery sensor adjustment indicator lamp, and various other electronic components (all of which have designated position codes). The following section outlines all the Control Board's pinouts by showing for each:

- The pinout position code as found on the Control Board (Example: P15),
- The name/purpose of the pinout (Example: 24 volt power connection),
- A paragraph describing in detail the pinouts purpose and its function, and
- A table describing the pin number, wire number, and function of each position

The word *key* refers to the small plastic insert plugged into a position of the connector. The purpose of the key is to prevent connecting the harnessing backwards or upside-down. The "keyed position" is a blank position within the pinout (no pin) in which a key is inserted. Some pinouts may have several blank positions with a key plugged into one or more of the positions. You can use the key to determine which end of the pinout is Pin 1.

# SECTION 2. VENDER COMPONENT EXPLANATION

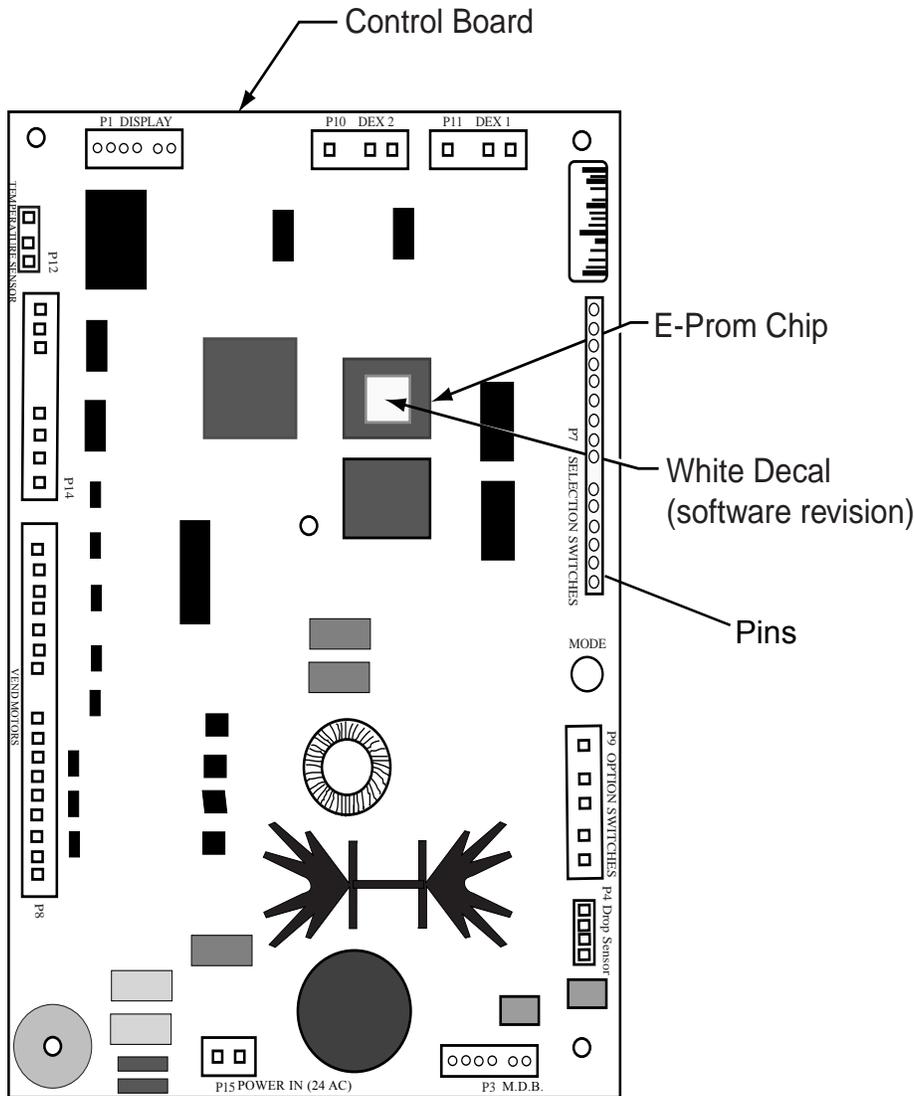


Figure 2.2

## Milk Merchandiser Control Board

Standard LED Display Interface (**Position P1**): The four (4) wire harnesses connecting to this pinout travel from the Vender's LED to the Control Board. It allows the Control Board to send power to and communicate with the LED. If this harness is cut or disconnected, the LED will go blank. If this harness is pinched, you may see "broken segments" on the LED with various segments of the display lit.

| PIN NUMBER | WIRE COLOR | FUNCTION                           |
|------------|------------|------------------------------------|
| 1          | YELLOW     | DISPLAY 5 VOLT DC POWER            |
| 2          | GREEN      | DISPLAY CLOCK                      |
| 3          | BROWN      | DISPLAY DATA                       |
| 4          | RED        | DISPLAY 5 VOLT DC RETURN TO COMMON |

## SECTION 2. VENDER COMPONENT EXPLANATION

Multi-Drop Bus (**Position P3**): The five (5) wire serial harness connecting to this pinout provides power and communications to and from the Control Board for the Coin Mechanism, the optional 24 volt Bill Validator, and/or the optional Debit Card Reader. If this harness is cut, pinched, or disconnected, you will noticeably lose power to the Coin Mechanism.

| PIN NUMBER | WIRE COLOR | FUNCTION                         |
|------------|------------|----------------------------------|
| 1          | WHITE      | MDB 35 VOLTS DC UNREGULATED      |
| 2          | BROWN      | MDB 35 VOLTS DC RETURN TO COMMON |
| 3          | KEY        | KEY                              |
| 4          | BLACK      | VMC RECEIVE/<br>MDB TRANSMIT     |
| 5          | RED        | VMC TRANSMIT/<br>MDBRECEIVE      |
| 6          | GREEN      | VMC/MDB COMMON                   |
| 7          | BLUE       | NOT USED                         |

Delivery Sensor (**Position P4**): The two (2) wire harness connecting to this pinout is a gray, shielded cable harness. It should never be cut, pinched, or spliced. This harness is formed into the impact sensor (mounted beneath the center of the delivery chute). It travels through the bottom of the Vender's main door to the Control Board.

| PIN NUMBER | WIRE COLOR | FUNCTION                               |
|------------|------------|--|
| 1          | -          | VMC COMMON (2.5DC)<br>RETURN TO GROUND |
| 2          | RED        | DROP SENSOR OUTPUT #1                  |
| 3          | BLACK      | DROP SENSOR OUTPUT #2                  |
| 4          | -          | VMC COMMON<br>RETURN TO GROUND         |

Selection Switches (**Position P7**): The wiring harness connecting to this pinout carries a logic level (ground) signal from Pin #11 of the Control Board to the common position of each Select Switch. Upon activation, the Select Switch will allow the logic level signal to travel back to the Control Board. This will tell the Control Board a particular switch is activated.

| PIN NUMBER | WIRE COLOR | FUNCTION                   |
|------------|------------|----------------------------|
| 1          | WHITE      | SELECTION SWITCH #9        |
| 2          | YELLOW     | SELECTION SWITCH #8        |
| 3          | ORANGE     | SELECTION SWITCH #7        |
| 4          | GREEN      | SELECTION SWITCH #6        |
| 5          | BLUE       | SELECTION SWITCH #5        |
| 6          | BROWN      | SELECTION SWITCH #4        |
| 7          | PURPLE     | SELECTION SWITCH #3        |
| 8          | GREY       | SELECTION SWITCH #2        |
| 9          | BLACK      | SELECTION SWITCH #1        |
| 10         | KEY        | KEY                        |
| 11         | RED        | SELECTION SWITCH<br>COMMON |
| 12         | -          | SELECTION SWITCH #12       |
| 13         | -          | SELECTION SWITCH #11       |
| 14         | PINK       | SELECTION SWITCH #10       |

## SECTION 2. VENDER COMPONENT EXPLANATION

Vend Motors (**Position P8**): The fourteen (14) wire harness connecting to this pinout provides common power from the Control Board to each vend motor. There is one wire in this harness for each vend motor to provide each motor with 24 volts DC, when a selection is made. Be sure that this harness is properly grounded.

| PIN NUMBER | WIRE COLOR   | FUNCTION                   |
|------------|--------------|----------------------------|
| 15         | GREEN/YELLOW | GROUND                     |
| 14         | BLACK        | VEND MOTOR COMMON (Source) |
| 13         | BLUE/WHITE   | VEND MOTOR #12             |
| 12         | BROWN/WHITE  | VEND MOTOR #11             |
| 11         | ORANGE/WHITE | VEND MOTOR #10             |
| 10         | KEY          | PP                         |
| 9          | YELLOW/WHITE | VEND MOTOR #9              |
| 8          | RED/WHITE    | VEND MOTOR #8              |
| 7          | GREEN/WHITE  | VEND MOTOR #7              |
| 6          | BLUE         | VEND MOTOR #6              |
| 5          | BROWN        | VEND MOTOR #5              |
| 4          | ORANGE       | VEND MOTOR #4              |
| 3          | YELLOW       | VEND MOTOR #3              |
| 2          | RED          | VEND MOTOR #2              |
| 1          | GREEN        | VEND MOTOR #1              |

Features Connection (**Position P9**): The wiring harness connecting to this pinout travels from the Vender's door switch through the bottom of the Vender's main door and to the Control Board. Pinout P9 is also used for the optional "free vend" and "no vend" key switch kits.

| PIN NUMBER | WIRE COLOR | FUNCTION                     |
|------------|------------|------------------------------|
| 1          | WHITE      | FEATURE PLUG/SWITCH COMMON   |
| 2          | -          | KEY                          |
| 3          | (OPTIONAL) | FREE VEND SWITCH INPUT       |
| 4          | (OPTIONAL) | NO VEND (VEND DISABLE) INPUT |
| 5          | (OPTIONAL) | OPTION SWITCH INPUT          |
| 6          | PURPLE     | DOOR SWITCH INPUT            |

DEX UCS Connection (**Position P10**): The three (3) wire harness connecting to this pinout comes from the Hand Held Computer jack, located inside the Vender's main door (near the Control Board). The Hand Held Computer (HHC) plugs into this jack to read and write information from the Vender's Control Board. If the HHC is not operating properly, check this harness for bad connections at the solder joints. Also check to ensure the insulator is not cracked from over tightening.

| PIN NUMBER | WIRE COLOR | FUNCTION                             |
|------------|------------|--------------------------------------|
| 1          | RED        | VMC TRANSMIT/DEX RECEIVE DATA (TIP)  |
| 2          | -          | KEY                                  |
| 3          | WHITE      | VMC RECEIVE/DEX TRANSMIT DATA (RING) |
| 4          | GREEN      | DEX COMMON                           |

DEX UCS Connection (**Position P11**): The three (3) wire harness connecting to this pinout comes from the external Hand Held Computer jack located on top of the welded port assembly. The Hand Held Computer plugs directly into this jack while the Vender's main door is closed to read information from the Vender's Control Board. Information cannot be written to the Vender's Control Board unless the Vender's door switch is in the "door open" position. If the HHC does not operate properly, check the harness for bad connections at the solder joints. Also check to ensure the insulator at the jack is not cracked from over tightening.

| PIN NUMBER | WIRE COLOR | FUNCTION                             |
|------------|------------|--------------------------------------|
| 1          | RED        | VMC TRANSMIT/DEX RECEIVE DATA (TIP)  |
| 2          | -          | KEY                                  |
| 3          | WHITE      | VMC RECEIVE/DEX TRANSMIT DATA (RING) |
| 4          | GREEN      | DEX COMMON                           |

## SECTION 2. VENDER COMPONENT EXPLANATION

Primary Temperature Sensor (**Position P12**): The wiring harness connecting to this pinout travels from the Temperature Sensor to the Control Board. The Temperature Sensor is mounted at the top of the cabinet above the vend mechanism assembly. This harness is molded into the Temperature Sensor and should never be cut, pinched, or spliced together if cut. If the harness is cut, pinched, or improperly grounded, the sensor may give the Control Board false temperature readings.

| PIN NUMBER | WIRE COLOR | FUNCTION                            |
|------------|------------|-------------------------------------|
| 1          | BLACK      | TEMP. SENSOR 5 VOLT DC SUPPLY       |
| 2          | KEY        | KEY                                 |
| 3          | WHITE      | TEMP. SENSOR, SIGNAL                |
| 4          | RED        | TEMP. SENSOR 5 VOLT RETURN TO COMM. |

| PIN NUMBER | WIRE COLOR | FUNCTION                |
|------------|------------|-------------------------|
| 8          | -          | 24 VOLT REGULATED DC    |
| 7          | -          | IMPULSE COUNTER         |
| 6          | 2X6        | FLUORESCENT LIGHT RELAY |
| 5          | KEY        | FAN RELAY OUT           |
| 4          | 2X4        | FAN RELAY               |
| 3          | 2X3        | NOT USED                |
| 2          | 2X2        | HEATER RELAY            |
| 1          | 2X1        | 24 VDC                  |

24 Volt AC Power In (**Position P15**): The two (2) wire harness connecting this pinout come from the Low Voltage Transformer. It is imperative the correct harness be connected to this pinout. If this harness is not connected (or if power is lost to this connection), you will noticeably lose all Vender functions (except main door lighting and refrigeration unit), including power to your LED display. Power to your Coin Mechanism will not accept coins. With this connector, the wire harness can be in either position and the Control Board will not be affected.

| PIN NUMBER | WIRE COLOR | FUNCTION   |
|------------|------------|------------|
| 1          | -          | 24 VOLT AC |
| 2          | -          | NEUTRAL    |

## SECTION 2. VENDER COMPONENT EXPLANATION

---

### Low Voltage Transformer

The Milk Merchandiser Vender uses a low voltage (75 VA) transformer which reduces 110 volts AC (conventional voltage) to 24 volts AC, to power the Vender's Control Board. The transformer is a major contributor to the Vender's operation. Without the transformer, the Control Board cannot function.

**LOCATION OF TRANSFORMER:** In a CDC (Center Door Changer) Vender, the transformer is located below the Control Board. The fuse is fastened to the Changer Plug Bracket. In a non-CDC Vender, the transformer and fuse are located at the top of the main door.

**OPERATION:** The transformer has a three (3) amp external fuse on a secondary circuit to protect the Control Board and the Coin Mechanism. If the transformer fuse blows, you will lose power to the Control Board, noticeably losing power to the LED Display, and also losing power to the Coin Mechanism (Coin Mechanism will not accept coins and Bill Validator will not accept a bill). If you have a problem similar to this, follow the procedures listed below.

**OPERATION REQUIREMENTS:** The transformer operates by receiving 110 volts AC from the Vender (black and red wires). It transforms the 110 volts AC into 24 volts AC which is what the Control Board requires for its operation.

**CHECK THE TRANSFORMER AND FUSE:** If upon arriving at a Vender, the LED display is not lit and the coin changer does not take coins or payout coins, make sure the Vender is plugged in. Next check the transformer's external fuse for visual damage. Check for continuity across the fuse with a voltage meter or similar device. If defective, replace the external fuse.

1. Check the power going into the transformer at the connected red and black wires. It should register 110 volts AC. If not, you need to check all wiring leading up to this point from the bottom of the Vender's main door. The transformer may not be the problem. You may have a broken wire or a bad connection.
2. If 110 volts is registered during Step 1, you want to measure voltage at the other end of the transformer. The two (2) pin connector at the Control Board connected to position P15 should register approximately 24 volts AC at this end of the harness. If so, check the Control Board; the transformer is good.
3. If 110 volts is registered during Step 1 and 24 volts AC is not registered during Step 2, you probably have a bad transformer. Unplug the Vender and transformer connections at the transformer (110 volt side). Unplug the transformer from the Control Board and remove it from the Vender's main door by locating the side of the transformer that has two (2) "built-in" wires going into the plastic housing.
4. Test the sensor by hitting the center of the delivery chute while watching the Control Board's Sensor Adjustment Indicator Lamp. The light should blink solidly upon impact.

## SECTION 2. VENDER COMPONENT EXPLANATION

# Delivery Chute Sensor

### (Adjustment)

ADJUSTMENT: Located below the Sensor Connector is the Sensor Adjustment Trimpot, which includes an adjustment screw. The trimpot is used to adjust and fine tune the sensor. It is capable of turning both clockwise and counter-clockwise. Located directly above the trimpot is the Sensor Adjustment LED Indicator Light. The indicator light is mainly used to aid in adjusting the sensor but can also be used to test its operation during product impact.

1. Turn the adjustment screw clockwise until the indicator light comes on.
2. Turn the screw counter-clockwise until the light just goes out.
3. Continue to turn the screw counter-clockwise one and a half (1½) turns. *Note: Slight adjustments may be needed outside the factory set 1½ turns. Turning the adjustment screw clockwise makes the sensor more sensitive and counter clockwise makes it less sensitive. Test vend after every 1/4 turn.*

For Multiple Vending from all columns, make sure the sensor is adjusted to the Factory specifications as listed above. Next, turn the adjustment screw clockwise 1/4 turn to increase sensitivity. Test vend 7-12 columns, watch light on the board for a good on and off flash. If still Multiple Vending, turn the adjustment screw an additional 1/4 turn clockwise until proper adjustment is made.

For Dry Vending from all columns, make sure the sensor is adjusted to the Factory specifications as listed above. Next, turn the adjustment screw counter-clockwise 1/4 turn to decrease sensitivity. Test vend all columns. If still Dry Vending, turn the adjustment screw an additional 1/4 turn counter-clockwise until proper adjustment is made.

TESTING THE DELIVERY CHUTE SENSOR: Make sure the Vender is plugged in and the Controller has power (the LED display on the front of the Vender will be lit and the Coin Mechanism will accept coins). The Sensor Indicator Lamp will blink upon impact on the delivery chute. Lightly tap the chute with a tool, or your

fist, to simulate a can drop.

1. Locate the Sensor Adjustment Indicator Lamp on the lower right corner of the Vender's Control Board. Under normal conditions (as in stand-by), the lamp should be off.
2. Test the sensor by vending from column 7 and 12 while watching the Control Board's Sensor Adjustment Indicator Lamp. The light should blink solidly upon impact. If not, turn the sensor adjustment screw clockwise in 1/4 turn increments (to increase the sensitivity) and test after each turn. If the indicator lamp still does not light, turn the adjustment screw clockwise for many turns. If the indicator lamp does not light, change the sensor (assuming the Control Board has power and is working).
3. If the Sensor Adjustment Indicator Lamp lights properly during Step 2, change the Control Board.

## SECTION 2. VENDER COMPONENT EXPLANATION

### Refrigeration System

Your Vender's Refrigeration System comes as a completely sealed unit and should never be cut or tapped into or the warranty will be voided.

**IDENTIFICATION:** The refrigeration unit is responsible for the cooling of your sealed cabinet and the products loaded within it. The refrigeration unit's base plate (compressor, condenser coils and condenser fan motor), are mounted in the bottom (warm) section of the Vender's cabinet. The heat exchange or suction line extends into the upper (cold) section of the Vender's cabinet, where the evaporator coil is mounted in front of the evaporator fan motor.

**OPERATION REQUIREMENTS:**

The Refrigeration System requires 110 volts AC from the main wiring harness for it to operate. The refrigeration lead will get its voltage from the thermostat (conventional control).

**Important Information:**

**HEALTH TIMER OPERATION:** *The rising temperature in the cooling compartment is reported to the Control Board from the Temperature Sensor. (See Figure 2.3) At power up the controller will check for the temperature. If the temperature is above 41 degrees, it will go to out of order. Once the error is cleared, a 30-minute clock will start. At the end of the 30 minutes if the temperature is 41 degrees or below, the vender will stay in normal operating mode. If the vender is 41 degrees or below upon power up it will stay in normal operating mode. If the door is open after power up and the temperature is 41 or below and stays at 41 or below. A 30-minute timer will start after the door is closed. If the temperature is above 41 degrees at the end of 30 minutes, the vender will go out of order. Anytime the vender is in a normal operating mode and the temperature reaches above 41 degrees, a fifteen-minute timer will start. If after fifteen minutes the temperature remains above 41 degrees, the vender will go out of order.*

When the Compressor is powered, it circulates refrigerant throughout the system by pulling low pressure refrigerant vapor from the Evaporator Coil through the suction line into the Compressor. The Compressor compresses it, and forces it through the discharge line into the Condenser Coil.

The Condenser, aided by the Condenser Fan Motor, removes heat from the refrigerant as it flows through the Condenser Coil and releases it to the outside environ-

ment. The dropping of the refrigerant temperature changes the vapor to liquid.

The Evaporator Coil allows the liquid refrigerant to absorb heat from the cooling compartment as it evaporates in the coil. The falling temperature in the cooling compartment is caused by the continual circulation of refrigerant through the system, removing heat from the cooling compartment, and transporting it to the outside environment.

**REFRIGERATION COMPONENTS:** The Refrigeration System is a sealed system. Cutting or tapping into it will void all the manufacturer's warranty. Described in this section are explanations of the Refrigeration System's major components.

**Cooling Compartment -** The Cooling Compartment is the sealed area of the Vender holding the product for delivery. This area is designed to allow free flowing air to circulate throughout the product.

**Compressor -** The Compressor is a hermetically sealed unit located beneath (outside) the cooling compartment. The Compressor is a pump, driven by the Compressor motor which draws low pressure vapor (refrigerant) from the Evaporator Coil, compresses it, and forces it into the Condenser under high pressure. The motor is started and controlled by the thermostat.

**Condenser -** The Condenser is located beneath (outside) the cooling compartment next to the Compressor (it can be seen from the front with the door open). The Condenser removes heat from the high pressure vapor discharged from the Compressor and condenses it to a high pressure liquid. The Condenser and Evaporator Coils have aluminum fins attached to effectively increase heat exchange surfaces.

**Starting Relay -** The Starting Relay is mounted on the side of the Compressor Housing. The Compressor Motor has two windings: a start and a run winding. To give the motor torque when it first starts, the Starting Relay Switches in the additional start winding. After the motor gets up to speed, the relay opens the start winding and the motor continues using only the run winding.

**Thermal Overload -** The Thermal Overload is a heat sensitive device mounted on the side of the Compressor Housing. If the Compressor Motor gets too hot, or draws an excessive amount of current, the Thermal Overload will open, breaking the circuit to the Compressor. After the Compressor cools to a safe operating temperature, the

## SECTION 2. VENDER COMPONENT EXPLANATION

Thermal Overload will close allowing the Compressor and Condenser fan motors to restart.

**Condenser Fan and Motor** - The Condenser Fan and Motor, located beneath the cooling department, are a forced air device using outside ambient air to cool the surface of the Condenser Coil. The Condenser Fan and Motor run while the Compressor operates.

**Evaporator Coil** - The Evaporator Coil is located in the cooling compartment. As low pressure liquid passes through the Evaporator Coil, it absorbs and removes heat from the compartment as it changes to vapor. The Condenser and Evaporator Coil have aluminum fins attached to effectively increase their heat exchange surfaces.

**Evaporator Fan and Motor** - The Evaporator Fan and Motor are a forced air device circulating air throughout the cooling compartment and over the heat exchange surface of the Evaporator Coil. The Evaporator Fan and Motor run continually.

**Capillary Tube** - The Capillary Tube is located in the refrigerant line, between the Condenser and Evaporator Coil. The small diameter tube is used as a metering device to control the flow of liquid refrigerant to the Evaporator Coil. This creates low pressure causing the refrigerant to vaporize and absorb heat as it passes through the Evaporator Coil.

**Drier** - The Drier is located in the refrigerant line between the Capillary Tube and Condenser. It traps and removes moisture from the Refrigeration System while allowing oil and refrigerant to pass through the system.

**Accumulator** - The Accumulator is located in the refrigerant line between the Evaporator Coil and Compressor. The Accumulator traps any liquid refrigerant which did not vaporize before it reached the Compressor.

**Cold Control - Routine Cleaning** - Insure the best operation and appearance from your Milk Merchandiser.

**Condenser and Evaporator Coils:** For efficient operation, the condenser and evaporator coils must be kept of any dirt or foreign materials. Clean dirt and lint from the condenser and evaporator coils with a brush, vacuum cleaner or compressed air.

**What to Adjust:** Temperature Control has been pre-set at the factory to maintain the specified temperature of the product. If you wish to

change this setting, turn the control screw clockwise to make the product colder and counter-clockwise to make it warmer. When making an adjustment, turn the control in 1/8 increments in the required direction. Wait at least two hours and check the product temperature again before making further adjustments.

**Altitude Adjustment:** 1/8 of a turn clockwise for every additional 2000 feet.

**Note:** To prevent bodily injury never plug or unplug any electrical connectors with power applied

### REFRIGERATION CYCLE:

1. The rising temperature in the cooling compartment is reported to the Control Board through the Temperature Sensor.
2. The Control Board registers the current temperature inside the Vender's cabinet. When it rises equal to, or above the pre-programmed cut-in temperature, the Control Board will complete the circuit to the Refrigeration Relay to energize its coil.
3. The Refrigeration Relay coil closes the contact between the common and normally open positions allowing 110 volts to travel to the main wiring harness to start the Compressor.
4. The Compressor circulates refrigerant throughout the system by pulling low pressure refrigerant vapor

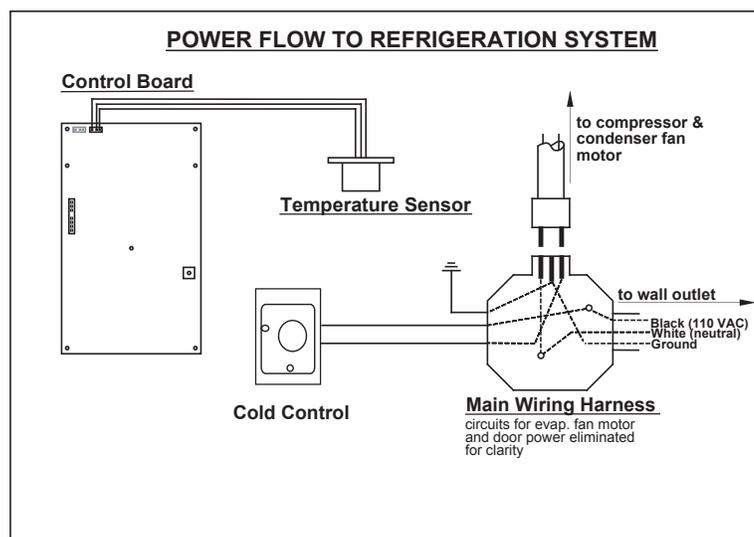


Figure 2.3

## SECTION 2. VENDER COMPONENT EXPLANATION

from the Evaporator Coil, compressing it, and forcing it into the Condenser. The Condenser, aided by the Condenser Fan Motor, removes heat from the refrigerant as it flows through the Condenser and releases it to the outside environment. The dropping of the refrigerant temperature changes the vapor to liquid.

5. The Evaporator Coil allows the liquid refrigerant to absorb heat from the cooling compartment as it evaporates in the coil.
6. The falling temperature in the cooling compartment is caused by the continual circulation of refrigerant through the system, removing heat from the cooling compartment and transporting it to the outside environment. When the temperature drops, the Temperature Sensor reports this to the Vender's Control Board.

### TESTING THE REFRIGERATION SYSTEM:

The sealed refrigeration unit can be tested by unplugging it from the top of the main wiring harness and plugging it directly into a power source. If the unit still does not operate, a problem exists within the sealed unit.



### ELECTRIC SHOCK DANGER

When plugging in the refrigeration unit directly to a wall outlet or other power source, always ensure that the vender itself is also plugged in to a grounded electrical outlet. Failure to do so could cause an electrical shock, possibly resulting in **severe injury or even death**.

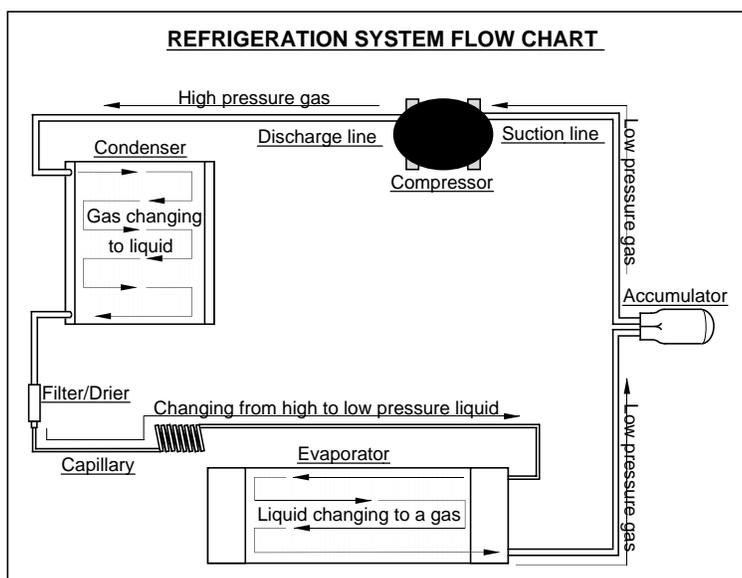


Figure 2.4

# SECTION 3. VENDER PROGRAMMING

## Vender Programming

### THE NECESSITY OF CORRECT PROGRAMMING

Your Milk Merchandiser Vender must be programmed correctly for it to operate properly. There are other modes that may not interfere with normal operation of the Vender; or you may not notice the abnormal operation (if they are not programmed properly). As a whole, improper programming could cause the following problems:

| MODE | PROBLEMSEEN   |
|------|---|
| Pric | Wrong prices, even free vending                                     |
| StoS | Columns not vending or wrong columns vending                        |
| Con  | Vender options such as forced vend/escrow not working properly      |
| SdEP | Vender multiple vending or "long" vend cycles                       |
| StCL | If enabled with use of timer or key switch will disable selections  |
| tinE | Will disable selections or Refrigeration System if turned on        |
| FriG | Will keep the unit from running or allow warmer/colder temperatures |
| PAS  | Will keep you from accessing the external password mode             |
| LAnG | Will display different languages for display messages               |

### PRECAUTIONS TO TAKE WHEN WORKING WITH CONTROL BOARD

As with any printed circuit board, our electronics are very sensitive to Electrostatic Discharge (ESD). Simply walking across a tile, or carpeted floor, can generate a range of 30,000 to 50,000 volts of electricity. One ESD can be enough to seriously damage your Control Board; or at least weaken it enough that "erratic problems" could occur in the future. Even a discharge surge under 100 or 200 volts is enough to create shorts, or problems, within the circuitry of the electronics. It is advised when storing the electronics that they be kept in their anti-static bags, even if the electronics are thought to be defective. If a Control Board is thought to be defective and is really not, it soon will be after being charged with ESD. The ideal prevention against ESD is to use anti-static conductive wrist straps which ground you to the machine before

touching the electronic boards. If it is not possible to use these, at least ground yourself before handling the electronic boards. Whatever method you use, always handle the electronic boards by the edges. Be careful not to touch the components on the Control Board.

### INTRODUCTION TO PROGRAMMING

As mentioned earlier in "The Necessity Of Correct Programming," it is very important your Vender is programmed properly. To do this, you must understand how the system works and what it takes to program your Vender. As you will see, after you are able to program one or two modes, you will be able to use similar procedures to program all modes.

**MANEUVERING THROUGH LEVELS** - The first step to understanding Milk Merchandiser programming is to learn how to negotiate through and around the menu levels to accomplish your task. To maneuver through the menu levels you must use the select buttons on the front of your Vender. Certain buttons have different meanings. You will use these buttons to move "up" or "down" through the menus. You will also use certain buttons to enter onto a new menu level or to home back to a previous level. These four (4) meanings that we have just mentioned are listed below, along with the active button for each.

*NOTE: Programming Flowchart located in rear of manual.*

| BUTTON | MEANING   | FUNCTION                      |
|--------|---|-------------------------------|
| 1      | UP  | Increase, Next, Etc.          |
| 2      | DOWN  | Decrease, Previous, Etc.      |
| 3      | ENTER<br>[press and release,<br>less than two (2)<br>seconds] | Save, Accept, OK, Etc.        |
| 3      | HOME<br>[press & hold<br>for two (2) seconds<br>or greater]   | Exit, Escape, Return,<br>Etc. |

**MENU SYSTEM** - When programming, you must first use the three programming buttons listed above to maneuver through menus and sub-menus before you will be allowed to accomplish your task. Each menu consists of various items, or modes, such as the "Pric" Mode (Selection Price Setting Mode) or the "StoS" Mode (Space to Sales Setting Mode). There are currently two different main menus available.

1. **INTERNAL (Service) MENU:** This menu is available only with the Vender's main door open. It is accessed

## SECTION 3. VENDER PROGRAMMING

upon pressing the Control Board's mode button. This menu contains all the programming modes, such as the Selection Price Setting Mode and Space to Sales Mode.

- OPTIONAL MENU: This mode is available when Con 2 is set to "1".

### Menu Levels

#### INTERNAL (Service) MENU

##### MODE DESCRIPTION

|       |  |
|-------|--|
| CASH  | Cash Counter Mode: Used to access the total and individual cash counts.                |
| SALE  | Sale Counter Mode: Used to access the total and individual vend counts.                |
| Error | Errors Mode: Used to read and clear Vender errors.                                     |
| tEST  | Test Vend Mode: Used to free test vend from columns .                                  |
| Pric  | Price Setting Mode: Used to program selection prices.                                  |
| StoS  | Space to Sales Mode: Used to program columns to vend from select buttons.              |
| SdEP  | Set Vending Depth: Used to program vending depth per selection.                        |
| Con   | Configurations Mode: Used to set Vender options.                                       |
| rtn   | Return to Sales: Used to return to the sales (greeting) mode (if Con 2 is set to "0"). |

#### Optional Menu (if Con 2 is set to "1")

|      |  |
|------|--|
| ECO  | Exact Change Only Mode: This mode controls the Exact Change Only light.              |
| CPO  | Coin Payout Mode: Used to payout coins from Coin Mechanism.                          |
| tUFL | Tube Fill Mode: Used to fill Coin Mechanism tubes.                                   |
| dSAL | Discounted Sale Counter: Used with discount prices or free vend switch.              |
| diFc | Discounted Differential Cash Counter: Used with discount prices or free vend switch. |

|      |  |
|------|--|
| SdiS | Set Discount Pricing: Automatically reduces vend prices during the day (uses timer).   |
| StCL | Set Timer Controlled Selections: Used to choose the selections to turn on / off.       |
| tinE | Timer Mode: Used to program on / off times for selections, refrigeration and lighting. |
| FriG | Refrigeration Mode: Used to test temperature sensor accuracy.                          |
| PAS  | External Password Mode: Used to set a password to access External Menu                 |
| LAnG | Language Mode: Used to change the display to international languages.                  |
| rtn  | Return to Sales: Used to return to the sales (greeting) mode (door closed state).      |

#### EXTERNAL MENU

##### MODE DESCRIPTION

|       |   |
|-------|---|
| SALE  | Sale Counter Mode: Used to access the total and individual vend counts.           |
| rtn   | Return to Sales: Used to return to the sales (greeting) mode (door closed state). |
| Error | Errors Mode: Used to read and clear Vender errors.                                |

# SECTION 3. VENDER PROGRAMMING

## Internal Menu

Opening the Vender's main door and pressing the Control Board's mode button will allow you to access the Internal Menu. This section completely outlines all the Internal Menus, including descriptions and operation instructions for each mode. *After five (5) minutes without activity, the Control Board will revert to the Sales Mode (the LED will show the greeting).*

### Cash Counter Mode (CASH)

This mode allows you to manually extract the amount of cash taken into the Vender through product sales (up to \$999,999.99). The Cash Counter Mode consists of a total count which is non-resettable. Individual selection counts are resettable, depending upon the proper configuration setting (see Configurations). The counts will be preceded by the count type (CL=cash level) and can be displayed in one (1) or two (2) sets of four (4) digits. Examples for both types of cash counters are:

| Count Type           | Actual Count | 1 <sup>st</sup> Display | 2 <sup>nd</sup> Display | 3 <sup>rd</sup> Display |
|----------------------|--------------|-------------------------|-------------------------|-------------------------|
| Total Cash Count     | \$56,789.10  | "CASH"                  | "567"                   | "89.10"                 |
| Selection Cash Count | \$6,789.10   | "CL [number]"           | "67"                    | "89.10"                 |

**OPERATION:** If <enter> is pressed when the display shows "CASH", the Controller will enter the Cash Counter Mode. The display will flash "CASH" and the total amount of cash taken into the Vender. This can be shown in two (2) sets of four (4) digits (see Example 1 above). Using <up> or <down> will cycle through individual selection cash counts for each. The display will flash individual selection counts (as shown in Example 2 above). If <home> is pressed anytime during this operation, the Controller will return to the "CASH" display. From "CASH" pressing <down> will take you to "rtm". Pressing <up> will take you to "SALE".

**CLEARING INDIVIDUAL COUNTERS:** If the Configurations Mode is set to allow the individual counters to be reset, the individual counters will reset upon reading at least one of them and closing the Vender's main door (actuating the Vender's door switch).

### Sale Counter Mode (SALE)

This mode is very similar to the Cash Counter Mode. The Sale Counter Mode allows you to manually extract the amount of product vended from your Vender (up to 99,999,999 vends). The Sale Counter Mode consists of a non-resettable total count and individual selection counts which are resettable, depending upon the proper configuration setting (see Configurations). The counts will be preceded by the count type (SL=sale level) and can be displayed in one (1) or two (2) sets of four (4) digits. Examples for both types of sale counters are:

| Count Type           | Actual Count | 1 <sup>st</sup> Display | 2 <sup>nd</sup> Display | 3 <sup>rd</sup> Display |
|----------------------|--------------|-------------------------|-------------------------|-------------------------|
| Total Sale Count     | 5,678,910    | "SALE"                  | "567"                   | "8910"                  |
| Selection Sale Count | 678,910      | "SL [number]"           | "67"                    | "8910"                  |

**OPERATION:** If <enter> is pressed when the display shows "SALE", the Control Board will enter the Sales Counter Mode. The display will flash "SALE" and the total amount of sales made by the Vender. This can be shown in two (2) sets of four (4) digits (see Example 1 above). Using <up> or <down> will cycle through individual selection sale counts. The display will flash individual selection counts (as shown in Example 2 above). If <home> is pressed anytime during this operation, the Controller will return to the "SALE" display. From "SALE" pressing <down> will take you to "CASH". Pressing <up> will take you to "CARD".

**CLEARING INDIVIDUAL COUNTERS:** If the Configurations Mode is set to allow the individual counters to be reset, the individual counters will reset upon reading at least one of them and closing the Vender's main door (actuating the Vender's door switch).

### Card Counter Mode (CARD)

If <enter> is pressed at the "CARD" prompt, the controller will enter the Card Counter Mode. The display will show "CASH" and the total historical amount of money made by sales using a debit or credit card (in the same fashion as shown in Cash Counter Mode, above). Press <up> or <down> to cycle to the card vend counter display, where the display will show "SALE" and the total historical amount of product sold using a debit or credit card. Note that individual counts for each selection are not available in the Card Counter Mode. If <home> is pressed anytime during this operation, the controller will return to the "CARD" display. From "CARD" pressing <down> will take you to "SALE." Pressing <up> will take you to "toKn."

### Token Counter Mode (toKn)

If <enter> is pressed at the "toKn" prompt, the controller will enter the Token Counter Mode. The display will show "CASH" and the total historical amount of money made by sales using a vend token (in the same fashion as shown in Cash Counter Mode, above). Press <up> or <down> to cycle to the token vend counter display, where the display will show "SALE" and the total historical amount of product sold using a vend token. Note that individual counts for each selection are not available in the Token Counter Mode. If <home> is pressed anytime during this operation, the controller will return to the "toKn" display. From "toKn" pressing <down> will take you to "CARD." Pressing <up> will take you to "Error."

## SECTION 3. VENDER PROGRAMMING

**Error**

### Errors Mode (Error)

This mode was designed to help diagnose Vender problems. Upon opening the Vender's main door, the LED will flash any possible errors. (For a list, refer to Section 6, Vender Maintenance: Error Codes.) If there are no errors, the display will flash "none" and after five (5) minutes of no activity will revert to the sales greeting (ICE COLD). The Errors Mode was designed to give a detailed description of each error and allow you to clear errors.

**OPERATION:** If **<enter>** is pressed when the display shows "Error", the Controller will enter into the errors descriptive display mode. At this point, the display will show any and all current Vender errors followed by the descriptive errors for each. If no errors exist, "none" will appear on the display but will revert back to the sales greeting after five (5) minutes of no activity. If **<home>** is pressed anytime during this operation, the Controller will return to the "Error" display. From "Error" pressing **<down>** will take you to "toKn" and pressing **<up>** will take you to "tEST".

**CLEARING ERRORS:** To clear an error, wait until the error to be cleared is shown on the LED display. Then immediately press the **<up>** or **<down>** button and hold it in for at least two (2) seconds and the error will disappear. Follow this procedure for each error.

**tEST**

### Column Test Vend Mode (tEST)

This mode is used to vend test by column, not by selection. After entering into this mode, you will have to pick the column which is desired to be tested. By pressing the **<enter>** button, the Control Board will vend from that column. No money is needed. This mode will test the Control Board's ability to distribute 24 volts DC to the proper vend motor upon command. It will also test the mechanical part of the vending circuit, such as the vend motor and rotor. It does not test the Control Board's coin acceptance/credit/payout circuit.

**OPERATION:** If **<enter>** is pressed when the display shows "tEST" the Controller will enter the Column Vend Test Mode. The display will show "CO 1" (Column 1). Using **<up>** or **<down>** will cycle you through all the available columns to be test vended (the display may show some columns that are not in your Vender; nothing will happen if a test vend is attempted from these columns.). If **<enter>** is pressed, the Controller will attempt to test vend from the column which is being displayed. If a vend is not in progress, pressing **<home>** will return you to the "tEST" display. From "tEST", pressing **<down>** will take you to "Error". Pressing **<up>** will take you to "PriC".

*Note: Test vends will not affect cash or sale counters.*

**PriC**

### Selection Price Mode (PriC)

This mode is used to set vend prices. Depending on the Configurations Mode (discussed later in this Section), this mode will allow you to set either single or multi-pricing. When the configurations are set to allow single pricing, only one price has to be set in the "PriC" Mode (not individually). The current price will be displayed on the LED display during the greeting. If the configurations are set to allow multiple pricing (per selection), the display will not show the vend price during the greeting unless all selections are set to the same price. You will have two options when setting prices:

- Multiple Pricing – "ALL" Pricing – Gives you the option to set one price for all selections.
- Individual Pricing – Allows you to set a different vend price for each selection.

If a free vend key switch is in use (turned-on), the display will scroll "FREE" during the greeting instead of the normal vend price. (That is, if all selections are assigned in StCL mode.)

**OPERATION:** If **<enter>** is pressed when the display shows "PriC", the Controller will enter the price setting mode.

- Single Price Operation: The display will flash "SPri" and the current single price setting. This will be the single price viewing level. If **<enter>** is pressed again, the display will show the current single price only. If **<up>** is pressed or held, the price will increase in .05 increments. If **<down>** is pressed or held, the price will decrease in .05 increments. After the desired price has been set, press **<home>** to save your setting and return to the single price viewing level. Pressing **<home>** from the single price viewing level will return you to the display of "PriC".
- Multiple Price Operation: The display will flash "ALL" followed by the last price set for all selections. If **<enter>** is pressed at this point, the display will steadily show the current "ALL" price. If **<up>** is pressed or held, the price will increase in .05 increments. If **<down>** is pressed or held, the price will decrease in .05 increments. After the desired price has been set, press **<home>** to save your setting and return to where the display flashes "ALL" followed by the new "ALL" price. You may now set a few, all, or different individual prices if desired.

## SECTION 3. VENDER PROGRAMMING

- Individual Pricing: If **<up>** or **<down>** is pressed when the display flashes “ALL” followed by the current majority price setting, the display will cycle through the individual price settings for each selection. The display will flash the selection number followed by the price for that selection. Example: If selection one is set at fifty cents, the display will flash “P 1” followed by “.50”. Pressing **<enter>** while a individual selection is being displayed will cause the display to steadily show the vend price for that selection to allow a change to the price. Press **<up>** to increase the price value in .05 increments or **<down>** to lower it in .05 increments. After the desired price has been set, press **<home>** to save your setting and return to where the display flashes “P X” followed by the new selection price. From “PriC”, pressing **<down>** will take you to “tESt”. Pressing **<up>** will take you to “StoS”.



### Space to Sales Mode (StoS)

This mode is a very important part of programming. It will determine what column will vend upon pressing a particular select button. You will use this mode to program column assignments by assigning a column (or columns) to each selection button that you desire to use. You may also decrease the number of the Vender selections. Example: Your Vender has a total of ten (10) select buttons on the front panel. If you wish, you may program the controller to only use eight (8), seven (7), or six (6) selections (or even less). This is done by assigning all additional columns to one of the popular selections being used. A benefit of doing this is you will be allowed to allocate the “extra” columns to a “faster moving” flavor. Space to Sales Mode will come factory set for your type of Vender. Upon entering the Space to Sales Mode two different types of settings are available:

- Factory Standard Space To Sales: There are eight (8) factory preset settings from which to choose. These settings depend on how the “Con 12” Mode is set (for 12 or 10 columns, see Appendix A in the rear of the Manual).
- Custom Space To Sales: Allows you to custom configure any column to any selection

**OPERATION:** If **<enter>** is pressed when the display shows “StoS”, the Controller will enter the Space to Sales Setting Mode. The Control Board will always enter at the current Space to Sales Setting. If your Vender is programmed for custom Space to Sales, or if programmed with a Hand Held Computer, you will enter at “CStS”. If **<up>** or **<down>** is pressed at this point, you will be allowed to cycle through all Space to Sales Settings.

- Factory Standard Space To Sales: Pressing **<enter>** at any Factory Standard (“Opt”) Setting will “lock in,” or reprogram, the Control Board for that particular Space to Sales Setting. Upon doing this, the display will automatically start sequencing through each selection followed by all the columns that are assigned to each (see Example below). After each selection has been shown, the display will return to “StoS”.

*Example: If after entering a Factory Standard*

*Setting the display flashes “SL 1”, and then flashes “1”, then flashes “2”, selection one has been assigned to Columns 1 and 2 only. This will occur for each selection.*

- Custom Space To Sales: Pressing **<enter>** at “CStS” will allow you to enter the Custom Space To Sales Mode. Upon entering this mode, the display will always start by flashing “SL 1” (Selection 1) followed by flashing each column number assigned to this selection. Example: The display flashes “SL 1”, then flashes “1”, and then flashes “2”. Selection 1 has Columns 1 and 2 assigned to it only. Pressing **<up>** or **<down>** at this point allows you to cycle through Selections 1 through 12, with each selection showing the columns assigned to it. If **<enter>** is pressed at a selection, the display will show “Co 1”. This stands for Column 1 for that particular selection. Pressing **<up>** or **<down>** at this point will allow you to cycle through Columns 1 through 12 for the selection entered. If any column is flashing, this means it is assigned to the selection. If a column is *not* flashing, then it is *not* assigned to the selection. Pressing **<enter>** will change a column’s flashing condition. This allows you to assign or un-assign columns. If no changes are made, pressing **<home>** will return you to the Space to Sales Setting list at “CStS”. If a change to a selection is made, pressing **<home>** will return you to the selection level where the display flashes the selection number followed by the columns assigned to that selection. Follow this same procedure for all selections that you wish to program.

**Important Note:** Anything done in this mode will override any previously assigned Factory Standard or Custom Settings.

When completely finished in Custom Space to Sales Mode, pressing **<home>** will return you to “StoS” display. From “StoS” pressing **<down>** will take you to “PriC”. Pressing **<up>** will take you to “SdEP”.



### Set Vending Depth Mode (SdEP)

Since the vend motors on a MERLIN IV Vender do not have cams or switches, programming electronically the vending depth is extremely necessary. With older style Electro-Mechanical Venders, it was necessary to adjust the vend timing cam by either filling notches or rotating part of the cam to change the vending depth from triple or double to single depth. With the Milk Merchandiser, you have a choice of either single or double depth for each selection **and not by column**. It is necessary to program

## SECTION 3. VENDER PROGRAMMING

the correct depth for each selection to prevent multiple or slow vends. For instance, if your actual vending depth is two and you program this selection for single depth, it will double vend every time.

**OPERATION:** If **<enter>** is pressed when the display shows “SdEP”, the Controller will enter the Set Vending Depth Setting Mode. The display will show “ALL”. From this point, two types of settings are available: the “All” depth setting enables you to set all depths the same (such as “ALL” of the price mode) and “Individual” depth setting gives you the option to set all depths individually for each selection.

- “ALL” Setting: If **<enter>** is pressed when the display shows “ALL”, the Controller will enter the Depth Setting Mode for “ALL” selections. The display will steadily show “ALL” and flash the current depth setting. Pressing **<up>** or **<down>** allows you to change the flashing depth setting between 1 or 2. Pressing **<enter>** will save changes and return you to where the display will show “ALL”. At this time, you will be able to cycle through each individual depth setting. Pressing **<home>** from this level will return you to the “SdEP” display.

***Note:** If you have selection depth settings that are different, but a majority of the settings are the same, it is advised to set the majority setting from within the “ALL” setting first. You will then be able to program the few settings that are individually different. This will cut down on program time.*

- Individual Setting: If **<up>** or **<down>** is pressed when the display shows “ALL”, the Controller will cycle through each individual setting showing the selection number and the current setting. If **<enter>** is pressed while the display is showing an individual depth setting, the current setting starts flashing. Pressing **<up>** or **<down>** allows you to change the flashing depth setting between 1 or 2. Pressing **<home>** locks in your setting and returns you to the individual level at the point where you entered it (at the setting just changed). At this time, you will be able to cycle through each individual setting. Pressing **<home>** from the individual level returns you to the “SdEP” display. From “SdEP” pressing **<down>** will take you to “StoS”. Pressing **<up>** will take you to “Con”.



### Configurations Mode (Con)

This mode is used to set Vender options dealing with pricing, acceptance, payback, and a few other optional features. While in the Configurations Mode, the display will show the configuration followed by the current setting. If the display shows “C 1 0”, this means Configuration 1 is currently set to 0. In other words, the Vender is set for single pricing. The configurations are as follows:

| CONFIG.# | SETTINGS  |
|----------|---|
| C1       | 0 = Single Pricing<br>1 = Multiple Pricing  |
| C2*      | 0 = Hide Optional Menu Items<br>1 = Show Optional Menu Items  |
| C4       | 0 = Display errors or “nonE”<br>1 = Display Sales, Cash Values, and existing error or “nonE”  |
| C5       | 0 = No reset of individual counters<br>1 = Allow reset of individual counts upon reading and door switch actuation  |
| C6       | 0 = Credit will be returned if proper change cannot be made<br>1 = Allow vend regardless of changer tube levels (change may not be paid)  |
| C7       | 0 = Will allow bill acceptance regardless of payout availability<br>1 = Will only accept a bill if coin tubes have enough coins to cover the difference between the bill value and the maximum vend price |
| C8       | 0 = Escrow to vend (will act as a bill changer)<br>1 = Forced attempt (will not act as a bill changer)  |
| C9       | 0 = Change is automatically returned to customer after a valid vend<br>1 = Will hold the customer’s change in escrow to allow a multiple purchase   |
| C10      | 0 = Bill escrow disabled<br>1 = Bill escrow enabled   |
| C11      | 0 = All errors displayed<br>1 = Certain errors displayed  |
| C12      | 0 = 12 column mode<br>1 = 10 column mode  |

## SECTION 3. VENDER PROGRAMMING

OPERATION: If <enter> is pressed when the display shows “Con”, the Controller will enter the Configurations Mode. The display will show Configuration 1 and its setting (as listed in the Configurations Description). If <up> or <down> is pressed at this point, the display will cycle through each configuration. Pressing <enter> while the display shows a configuration, allows the current configuration setting to start flashing. Pressing <up> or <down> while the current configuration setting is flashing, allows you to toggle the configuration setting between 0 and 1. If changes are made to a configuration, pressing <enter> will return you to the Configuration List Level and save any change. Follow the above process for all configurations which you wish to set. When done, pressing <home> will return you to the “Con” display. From “Con”, pressing <down> will take you to “SdEP”. Pressing <up> will take you to “rtn” if C2 is set to “0”, or to “ECO” if C2 is set to “1”.



### Return to Sales / Greeting Mode (rtn)

This mode is used to exit the Service Menu and return to the Sales Mode, where the display flashes the greeting (ICE COLD) along with any other display options.

OPERATION: If <enter> is pressed when the display shows “rtn”, the Controller will revert to the Sales Mode and the greeting will be displayed. From “rtn”, pressing <down> will take you to “Con”. Pressing <up> will take you to “CASH”.

## Optional Menu Items



### Exact Change Value Mode (ECO)

This mode controls the Exact Change Only light. If the machine cannot make change for the value (or lower) specified in this mode, the Exact Change Only lamp will light.

*Note: 67100-X Board and later versions*

OPERATION: If <enter> is pressed when the display shows “ECO”, the Controller will enter the Exact Change Value Setting Mode. The display will show the exact change value. Pressing <up> or <down> allows you to adjust the value. Pressing <home> will save the currently displayed value and return you to the “ECO” display. From “ECO”, pressing <down> will take you to “Con”. Pressing <up> will take you to “CPO”.



### Coin Payout Mode (CPO)

This mode allows you to payout coins from the Coin Mechanism’s Tubes through the Control Board. This mode is mainly used because some types of coin mechanisms do not have payout buttons (switches) on them. This can also be used as a test to confirm the Control Board’s ability to payout coins (will payout the same as after a sale).

OPERATION: If <enter> is pressed when the display shows “CPO”, the Controller will enter the coin payout mode and display the lowest coin value (.05). Using <up> or <down> will allow the user to cycle through all coin values available for payout. If <up> or <down> is pressed and held at this point, a coin of the displayed value will be paid out. The word “PAY” will be displayed as coins are paid out. Coins will continue to payout as long as <up> or <down> is held. If <home> is pressed anytime during this operation, the Controller will return to the “CPO” display. From “CPO”, pressing <down> will take you to “ECO”. Pressing <up> will take you to “tUFL”.

*Note: If you are using the “tUFL”, you must use the “CPO” Mode to payout coins.*



### Coin Tube Fill Mode (tUFL)

This mode is used to keep inventory of the exact coin tube levels as each coin is inserted. During this mode, the LED display will register each coin as it is inserted (in no particular order) and report its value to the Vender’s Control Board. The Control Board will in turn remember the Coin Mechanism’s coin tube levels and automatically deduct a coin each time a coin is paid out (through “CPO” Mode or during a vend.). This mode can only be used if a Multi-Drop Bus Coin Mechanism is in use.

OPERATION: If <enter> is pressed when this display shows “tUFL”, the Controller will enter the Coin Tube Fill Mode. The LED display will go blank allowing the deposit of nickels, dimes, or quarters through the coin insert or coin acceptor inlet chute. If <home> is pressed anytime during this operation, the Controller will return to the “tUFL” display. From “tUFL”, pressing <down> will take you to “CPO”. Pressing <up> will take you to “dSAL”.

## SECTION 3. VENDER PROGRAMMING

*Note: The use of the Coin Mechanism's Manual Coin payout buttons is discouraged to keep from corrupting the coin counts. As long as the sales greeting is scrolling, the manual buttons cannot be used.*

### Discounted Sale Counter Mode (dSAL)

This mode is very similar to the Sale Counter Mode. It allows you to manually extract the amount of product dispensed through your Vender during the discounted sales periods (up to 99,999,999). The Sale Counter Mode consists of a non-resettable total count and individual count per selection which are resettable, depending upon the proper configuration setting (see Configurations). The counts can be displayed in up to two (2) sets of four (4) digits. Examples for both total and individual counters are:

| Discount Count Type  | Actual Count | 1st Display   | 2nd Display | 3rd Display |
|----------------------|--------------|---------------|-------------|-------------|
| Total Sale Count     | 5,678,910    | "SALE"        | "567"       | "8910"      |
| Selection Sale Count | 678,910      | "SL [number]" | "67"        | "8910"      |

**OPERATION:** If **<enter>** is pressed when the display shows "dSAL", the Controller will enter the Discounted Sales Counter Mode. The display will flash "SALE" and the total amount of discounted sales made by the Vender. This can be shown in two (2) sets of four (4) digits (as shown in Example 1 above). Using **<up>** or **<down>** will cycle through individual discounted sales counts for each selection. The display will flash individual counts (as shown in Example 2 above). If **<home>** is pressed anytime during this operation, the Controller will return to the "dSAL" display. From "dSAL" pressing **<down>** will take you to "tUFL". Pressing **<up>** will take you to "diFc".

**CLEARING INDIVIDUAL COUNTERS:** If the Configurations Mode is set to allow the individual counters to be reset, the individual counters will reset upon reading at least one (1) of them and closing the Vender's main door or actuating the Vender's door switch.

### Differential Cash Discounted Counter Mode (diFc)

This mode is comparable to the Cash Mode. It allows you to monitor the difference between discounted prices and regular prices. The Differential Cash Discounted Counter Mode is a non-resettable total count. If product is sold for less than the vend price, the counts will be preceded by a negative symbol (-). If product is sold for greater than the vend price, the counts will be shown normally. Examples for both are:

| Differential Count Type            | Actual Count | 1st Display | 2nd Display | 3rd Display |
|------------------------------------|--------------|-------------|-------------|-------------|
| Differential Cash Count (Negative) | -\$789.10    | "CASH"      | "-7"        | "89.10"     |
| Differential Cash Count (Positive) | \$789.10     | "CASH"      | "7"         | "89.10"     |

**OPERATION:** If **<enter>** is pressed when the display shows "diFc", the Controller will enter the Differential Cash Discounted Counter Mode. The display will flash "CASH" and the total difference between regular vend prices and discounted prices (as shown in Example 1 above). Pressing **<home>** anytime during this operation will allow the Controller to return to the "diFc" display. From "diFc", pressing **<down>** will take you to "dSAL". Pressing **<up>** will take you to "SdiS".

**CLEARING INDIVIDUAL COUNTERS:** This is a non resettable counter.

### Set Discount Pricing Mode (SdiS)

This mode is used to set discount prices for each selection. This mode works in conjunction with the built-in timer in the "tinE" Mode. Before entering "tinE" Mode, you must set the selections to "1" in StCL Mode. After the StCL Mode you may set the discounted price for each desired selection. Then, set the time you wish the discounted selection to be activated by using the "dScn" settings in the "tinE" Mode under the day function.

## SECTION 3. VENDER PROGRAMMING

OPERATION: If **<enter>** is pressed when the display shows “SdiS”, the Controller will enter the Discount Price Setting Mode. The display will flash “ALL” (for all selections) and flash the last discount price value that “ALL” was set at. This is referred to as the selection level. If **<enter>** is pressed at this point, the display will steadily show the discount value for all selections. Press **<up>** to increase the discount price value in .05 increments or **<down>** to lower it in .05 increments. If **<home>** is pressed after adjusting the price, your new discount price will be saved and the display will return to the selection level. You may now set a few, all, or different individual discount prices if desired. If **<up>** or **<down>** is pressed when the display flashes “ALL” (for all selections) then flashes the last discount price value that “ALL” was set at, the display will cycle through the individual discount price settings for each selection. The display will show the selection number followed by the discount price for that selection. Example: If selection one is set at fifty cents, the display will flash “P 1” followed by “.50”. Pressing **<enter>** while an individual selection is being displayed will cause the display to steadily show the discounted vend price for that selection to allow a change to it. Press **<up>** to increase the discount price value in the same fashion as above or **<down>** to lower it. Pressing **<home>** after adjusting a price will save that price and return you to the selection level. Pressing **<home>** while at the selection level will return you to the “SdiS” display. From “SdiS”, pressing **<down>** will take you to “diFc”. Pressing **<up>** will take you to “StCL”.



### Set Timer Controlled Selections Mode (StCL)

This mode is used to choose the selections to turn off either using the built-in timer or with the optional key switch kit. This mode must be set to enable one or all of the selections for the timer or the key switch to operate. The timer or key switch will control any selections set to “1”. Selections set to “0” will function normally.

OPERATION: If **<enter>** is pressed when the display shows “StCL”, the Control Board will enter the Set Timer Controlled Selections Mode at the selection level and the display will show “ALL”. From this point, two types of settings are possible:

- “ALL” Setting: If **<enter>** is pressed when the display shows “ALL and the current setting”, the Control Board will enter the “ALL” Setting Mode. The display will steadily show “ALL” and flash the

current “StCL” setting. Pressing **<up>** or **<down>** allows you to change the flashing setting between 0 and 1. Pressing **<enter>** saves any change and returns you to the selection level where the display steadily shows “StCL” and the new setting. At this time you will be able to cycle through each selection to set individual settings. If completely done, pressing **<home>** from the selection level (display shows “ALL and current setting”) will return you to the “StCL” display.

- Individual Setting: If **<up>** or **<down>** is pressed when the display shows “ALL and the current setting”, the Controller will cycle through each selection showing the selection number and the current setting for that selection. Example: If the display shows “t 3 1” (for selection 3, the timer is set to on). If **<enter>** is pressed while the display is showing an individual selection timer setting, the current setting for that selection will start flashing. Pressing **<up>** or **<down>** allows you to change the flashing timer setting between 0 and 1. Pressing **<enter>** saves any change and returns you to the selection level. At this time you will be able to cycle through each selection to set other individual Timer Controlled Selection Settings. Pressing **<home>** from the selection level will return you to the “StCL” display. From “StCL”, pressing **<down>** will take you to “SdiS”. Pressing **<up>** will take you to “tinE”.



### Time and Timer Settings Mode (tinE)

This mode is used mainly to turn selections, lighting, and/or refrigeration off and back on during predetermined times of the day and days of the week. In the “tinE” Mode, you must set the current year, date, hour and day of the week for the timer to operate. The “tinE” Mode is also used to set each “on” and “off” time in which the timer will operate. Within the “tinE” Mode, there are several different functions listed below with a meaning and example for each.

## SECTION 3. VENDER PROGRAMMING

| FUNCTION | PROGRAM MEANING                 | DISPLAY EXAMPLE<br>(After Entering Mode)  |
|----------|---------------------------------|---|
| YEar     | Current Year                    | “1998”                                    |
| datE     | Current Month/Day               | “06.08” (June 8)                          |
| hour     | Current Hour/Min.               | “13.30” (1:30 pm)<br><i>military time</i> |
| SEtd     | Set Day of the Week             | “SUN”                                     |
| StOP     | Disable Clock*                  | “CLOC” then<br>“StOP”                     |
| daY      | Timer On/<br>Off Days and Times | “ALL”                                     |
| dSt      | Display Time On<br>LED          | “dSt” with setting<br>flashing            |
| dLt      | Daylight Savings<br>Time        | “dLt” with setting<br>flashing            |

*\* This feature is used to conserve the Control Board's built-in battery if Vender is in storage for long periods of time. The Lithium battery shelf life is three (3) years with the clock turned on and ten (10) years with it off.*

OPERATION: If **<enter>** is pressed when the display shows “tinE”, the Controller will enter the Time and Timer Settings Mode and the display will show “YEar”. Pressing **<up>** or **<down>** allows you to cycle through each “tinE” function. Pressing **<home>** while the display is showing any of the earlier listed “tinE” functions will return you to the “tinE” display. When completely finished with all “tinE” functions, pressing **<home>** from the “tinE” functions menu returns you to the code level where the display shows “tinE”. Pressing **<down>** will take you to “StCL”. Pressing **<up>** will take you to “FriG”.

- Year Function (“YEar”): If **<enter>** is pressed when the display shows “YEar”, the Controller will enter the year setting “tinE” function and the display will show the year, with the first two numbers of the year flashing (Example: 19.98). Pressing **<up>** or **<down>** allows you to change the first two digits of the year. If **<enter>** is pressed at this point, the first two numbers of the year lock in and the second set of digits start to flash (Example: 19.98). Pressing **<up>** or **<down>** allows you to change the second two digits of the year. Pressing **<home>** saves any change and returns you to the beginning of the year “tinE” function where the display shows “YEar”. From “YEar”, pressing **<down>** will take you to “dLt”. Pressing **<up>** will take you to “datE”.

- Date Function (“datE”): If **<enter>** is pressed when the display shows “datE”, the Controller will enter the date setting “tinE” function and the display will show the current date, with the first two numbers of the date flashing to indicate the month (Example: 03.00). Pressing **<up>** or **<down>** allows you to change the first two numbers of the date. If **<enter>** is pressed from this point, the first two numbers of the date lock in and the second set of two digits will start flashing to indicate the day (Example: 03.28). Pressing **<up>** or **<down>** allows you to change the second two numbers of the date. Pressing **<home>** anytime during this process saves any change and returns you to the beginning of the date “tinE” function where the display shows “datE”. From “datE”, pressing **<down>** will take you to “YEar”. Pressing **<up>** will take you to “hour”.
- Hour Function (“hour”): If **<enter>** is pressed when the display shows “hour”, the Controller will enter the hour setting “tinE” function and the display will show the current hour in military time with the first two numbers of the hour flashing (Example: 14.00). Pressing **<up>** or **<down>** allows you to change the hour. If **<enter>** is pressed from this point, the first two numbers of the hour lock in and the second set of two digits will start flashing to indicate the minutes (Example: 14.31). Pressing **<up>** or **<down>** allows you to change the second two numbers of the hour. Pressing **<home>** after making a change will return you to the beginning of the hour “tinE” function where the display shows “hour”. From “hour”, pressing **<down>** will take you to “datE”. Pressing **<up>** will take you to “SEtd”.
- Set Day Function (“SEtd”): If **<enter>** is pressed when the display shows “SEtd”, the Controller will enter this mode displaying a day of the week. Pressing **<up>** or **<down>** allows you to change the day of the week. When the desired day is selected, press **<home>** to select and bring you to “SEtd”. From “SEtd”, pressing **<down>** will take you to “hour”. Pressing **<up>** will take you to “StOP”.
- Stop Function (“StOP”): If **<enter>** is pressed when the display shows “StOP”, the Controller will enter the Stop Clock Setting “tinE” function and the display will flash “CLOC” and “StOP”. Pressing **<enter>** will turn off the clock to reserve the Controller’s built-in battery. The display will flash “Off” and automatically exit back to the display of

## SECTION 3. VENDER PROGRAMMING

“StOP”. Pressing **<home>** anytime during this process will return you to the beginning of the Stop Clock “tinE” function where the display shows “StOP”. From the “StOP” display, pressing **<down>** will take you to “hour”. Pressing **<up>** will take you to “dAY”.

- Day Function (“dAY”): If **<enter>** is pressed when the display shows “dAY”, the Controller will enter the “tinE” function to allow you to set the timer on/off times for each day of the week. The display will show “ALL”. From this point you have two different options: the All Day Timer Setting will enable you to set all days the same in which the timer operates (such as “ALL” of the price mode) and Individual Day Timer Settings will give you the option to set all the timer operations different daily. Pressing **<up>** or **<down>** allows you to cycle from “ALL” to each day of the week. If **<enter>** is pressed, either at “ALL” or a week day, the Controller will enter into that particular day. The display will show “SC-1”, then “On”, and then the current first “Off” time for selections as listed below. From here on, this will be referred to as the Timer Setting Mode Viewing Only Level. If **<up>** or **<down>** is pressed at the Timer Setting Mode Viewing Only Level, the display will cycle to all other available Timer Setting Modes:

| SETTING MODE    | PROGRAM MEANING   |
|-----------------|---|
| “SC-1”... “On”  | 1 <sup>st</sup> <b>OFF</b> time for selections                      |
| “SC-1”... “Off” | 1 <sup>st</sup> <b>ON</b> time for selections                       |
| “SC-2”... “On”  | 2 <sup>nd</sup> <b>OFF</b> time for selections                      |
| “SC-2”... “Off” | 2 <sup>nd</sup> <b>ON</b> time for selections                       |
| “SC-3”... “On”  | 3 <sup>rd</sup> <b>OFF</b> time for selections                      |
| “SC-3”... “Off” | 3 <sup>rd</sup> <b>ON</b> time for selections                       |
| “dScn”... “On”  | <b>ON</b> time for discounted selections                            |
| “dScn”... “Off” | <b>OFF</b> time for discounted selections                           |
| “FriG”... “On”  | <b>OFF</b> time for Refrigeration System                            |
| “FriG”... “Off” | <b>ON</b> time for Refrigeration System                             |
| “Lt-1”... “On”  | 1 <sup>st</sup> <b>OFF</b> time for illumination (ballast lighting) |
| “Lt-1”... “Off” | 1 <sup>st</sup> <b>ON</b> time for illumination (ballast lighting)  |
| “Lt-2”... “On”  | 2 <sup>nd</sup> <b>OFF</b> time for illumination (ballast lighting) |
| “Lt-2”... “Off” | 2 <sup>nd</sup> <b>ON</b> time for illumination (ballast lighting)  |

|                 |   |
|-----------------|---|
| “Lt-3”... “On”  | (ballast lighting)<br>3 <sup>rd</sup> <b>OFF</b> time for illumination (ballast lighting) |
| “Lt-3”... “Off” | 3 <sup>rd</sup> <b>ON</b> time for illumination (ballast lighting)                        |

To set “On” and “Off” times for the timer, you must press **<enter>** upon reaching the desired Timer Setting Mode. After doing this, the Controller will enter into that particular Timer Setting Mode. The display will show the current setting with the hour flashing. This indicates that the hour can now be changed. Pressing **<up>** or **<down>** allows you to change the hour of this particular setting. Pressing **<enter>** will lock in the hour setting and start the minutes flashing (which will indicate to you the minutes can now be changed). Pressing **<up>** or **<down>** allows you to change the minutes of this setting. Pressing **<home>** anytime during this process will lock in your changes and bring you back to where the display shows the Timer Setting Mode and the time set for that mode (Timer Setting Mode Viewing Only Level).

At this point, **<up>** or **<down>** allows you to access all Timer Setting Modes listed earlier. From this Timer Setting Mode Viewing Only Level, pressing **<home>** again will return you to the day of the week level. Press **<home>** again to return to the display of “dAY”. From “dAY”, pressing **<down>** will take you to “StOP”. Pressing **<up>** will take you to “dSt”.

*Note: If you are setting certain selections to go off and come back on at a programmed time, you must first enter “SC-1 On” to set the first off time for selections. When done programming the first off time, you must then program the first return on time for the selections by entering into “SC-1 Off” and programming your return on time. For the timer to be able to control the selections, you must set the selections to be controlled in the “StCL” Mode of the Password Protected Menu.*

- Display Time Function (“dSt”): If **<enter>** is pressed at this display, the Controller will enter the Display Time Setting Mode and the display will show “dSt” while flashing the current setting. Pressing **<up>** or **<down>** allows you to change the flashing setting back and forth between 0 and 1. If set to “1”, the time of day will be displayed on the LED during the greeting. If set to “0” the time will not be displayed during the greeting. Pressing **<home>** anytime

# SECTION 3. VENDER PROGRAMMING

during the process will save changes and return you to the “dSt” display. From this point, pressing <down> will take you to “dAY”. Pressing <up> will take you back to “dLt”.

- Daylight Savings Time Function (“dLt”): This option allows for the automatic adjustment of Daylight Savings Time. If enabled, the time will automatically be adjusted forward one hour at 2:00 a.m. (2:02 a.m. at the latest) on the first Sunday of April and similarly adjusted back one hour on the last Sunday of October. If <enter> is pressed at this display, the Control Board will enter the Daylight Savings Time Enable / Disable Mode. The display will show “dLt” and flash the current setting. Pressing <up> or <down> allows you to change the flashing setting back and forth between 0 and 1. If set to “1”, Daylight Savings Time will be enabled. If set to “0”, Daylight Savings Time will be disabled. Pressing <enter> anytime during the process will save any change and returns you to the start of the Display Time Mode where the display will show “dLt”. From this point, pressing <down> will take you to “dSt”. Pressing the <up> button will take you to the “yEAR” mode.

*Note: This is important if you are using the timer function set to “1”.*

## **FriG** Refrigeration Parameters Mode (FriG)

This mode is used to control the environmental aspects of the Vender. It controls the Refrigeration System by allowing you to program the cut in and cut out temperatures of the refrigeration unit. The “FriG” Mode also allows you to show the current inside cabinet temperature (on the LED during the greeting). The temperatures shown on the LED during the greeting and programming can be changed from Fahrenheit to Celsius. The “FriG” Mode has a relay mode allowing you to test any controlling relays in the Vender (evaporation fan, refrigeration, ballast, and heater). There is even a setting to disable the unit for safety reasons. Within the “FriG” Mode, there are several different functions listed below with a meaning and an example for each.

*Note: The “FriG” Mode is only applicable in venders using Electronic Refrigeration Mode. However, if the “FriG” setting is set to “1”, without the use of electronic control, the display will show unnecessary “FriG” errors.*

| Function | Program Meaning     | Display Example (After Entering Mode) |
|----------|---------------------|---------------------------------------|
| Cuti     | Cut In Temperature  | 41F                                   |
| Cuto     | Cut Out Temperature | 29F                                   |

- dEG Select Fahrenheit Or Celsius
- dSP Display Inside Cabinet (evap.) Temperature
- FrG Master Control On/Off
- rELY Relay Test Mode

OPERATION: If <enter> is pressed when the display shows “FriG”, the Controller will enter the Refrigeration Parameters Mode and the display will show “Cuti”. Pressing <up> or <down> allows you to cycle through all six (6) “FriG” functions. When completely finished with all programming in the “FriG” Mode, pressing <home>, while the display is showing any of the earlier listed “FriG” functions, will return you to the “FriG” display. From “FriG”, pressing <down> will take you to “tinE”. Pressing <up> will take you to “PAS”.

- Cut In Function (“Cuti”): If <enter> is pressed when the display shows “Cuti”, the Controller will enter the Cut In Setting “FriG” function and the display will show the current Cut In Temperature Setting (Factory setting: 41°F). Pressing <up> or <down> allows you to change the Cut In Setting. The setting can be adjusted between 39°F to 45°F (4°C to 7°C). Pressing <home> anytime during this process will save any change and returns you to the beginning of the “Cuti” “FriG” function where the display shows “Cuti”. From “Cuti”, pressing <down> will take you to “rELY”. Pressing <up> will take you to “Cuto”.
- Cut Out Function (“Cuto”): If <enter> is pressed when the display shows “Cuto”, the Controller will enter the Cut Out Setting “FriG” function. The display will show the current Cut Out Temperature Setting (Factory setting: 29°F). Pressing <up> or <down> will allow you to change the Cut Out Setting. The setting can be adjusted between 24°F to 34°F (-4°C to 1°C). Pressing <home> anytime during this process will save any change and returns you to the beginning of the “Cuto” “FriG” function where the display shows “Cuto”. From “Cuto” pressing <down> will take you to “Cuti”. Pressing <up> will take you to “dEG”.
- Select Degree Function (“dEG”): If <enter> is pressed when the display shows “dEG”, the Controller will enter the Degree Setting “FriG” function. The display will show “dEG” and flash the current degree setting. Pressing <up> or <down> will allow you to change the current setting. Program to “F” for Fahrenheit (Factory Setting) or “C” for Celsius. Pressing <home> anytime during this process will save any change and returns you to the beginning of the “dEG” “FriG” function where the display shows “dEG”. From “dEG”, pressing <down> will take you to “Cuto”. Pressing <up> will take you to “dSP”.
- Display Temperature Function (“dSP”): If <enter> is

## SECTION 3. VENDER PROGRAMMING

pressed when the display shows “dSP”, the Controller will enter the Display Temperature “FriG” function. The display will show “dSP” and flash the current setting. Pressing <up> or <down> allows you to change the current setting. Program to “1” to display the temperature on the LED display during the sales greeting or “0” to not display the temperature during the greeting. Pressing <home> anytime during this process will save any change and returns you to the beginning of the “dSP” “FriG” function where the display shows “dSP”. From “dSP”, pressing <down> will take you to “dEG”. Pressing <up> will take you to “FrG”.

- Unit Disable (Master On/Off) Function (“FrG”): If <enter> is pressed when the display shows “FrG”, the Controller will enter the Unit Disable “FriG” function. The display will show “FrG” and flash the current setting. Pressing <up> or <down> allows you to change the current setting. Program to “1” (Electronic Refrigeration Factory Setting) for the refrigeration unit to operate normally or “0” to disable unit. Pressing <home> anytime during this process will save any change and returns you to the beginning of the “FrG” “FriG” function where the display shows “FrG”. From “FrG”, pressing <down> will take you to “dSP”. Pressing <up> will take you to “rELY”.
- Relay Test Function (“rELY”): If <enter> is pressed when the display shows “rELY”, the Controller will enter the relay “FriG” function to allow you to test the various Vender relays. The display will show “Fan” (which is the test mode for the optional Evaporator Fan Motor Relay). Pressing <up> or <down> allows you to cycle through each relay test mode available.

| RELAYTEST MODEMENU | MEANING   |
|--------------------|---|
| Fan                | Evaporator Fan Relay Test (requires optional kit) |
| Htr                | Heater Relay Test (requires optional kit)         |
| LitE               | Illumination Relay Test (requires optional kit)   |
| CnPr               | Compressor Relay Test                             |

If <enter> is pressed at any of the four (4) relay test modes, the display will flash the name of the relay and then flash off. If the relay is currently off and you wish to enable it, <enter> here. If not, pressing either <up> or <down> allows the display to flash the name of the relay and then flash off. If the relay is currently off and you wish to test the circuit by turning it on, <enter> here. If the circuit tested does not work, you have five (5) minutes in Test Mode to check voltage. Pressing <home> from within any relay Test Mode (if after a test) will allow you to

return to the Relay Test Mode Menu (where the display will show the name of the relay menu you were just in). Pressing <home> from a point on the Relay Test Mode Menu returns you to the beginning of the Relay Mode (where the display shows “rELY”).

- Disable Health Sensor (“dHS”): If <enter> is pressed when the display shows “dHS”, the display will show “dHSX,” where X=the current setting. The “X” will be “0” if health-safety monitoring is currently *enabled*, or “1” if the health-safety monitoring control features are currently *disabled*. Disabling health-safety will prevent the machine from monitoring the cabinet temperature for health-safety violations. This prevents the machine from going to an “Out of Order” state, but it will not clear an already-existing “Out of Order” error state. A pre-existing error will have to be cleared in the standard manner via the “Error” menu. Pressing <up> or <down> will toggle the “X” between “0” and “1.” If the <exit> key is pressed in this mode, the controller will return to the “dHS” prompt.
- Defrost Frequency (“dFSt”): If <enter> is pressed at the “dFSt” prompt, the controller will display the current defrost frequency in hours. Pressing <up> or <down> will adjust the frequency in one-hour increments. It can be adjusted from 2 to 24 hours, with a default value of 12 hours. The timer will be reset to the set value at the start of each defrost cycle or whenever the door is opened. Pressing <exit> at this point will save the defrost frequency, and the controller will return to the “dFSt” prompt.



### External Menu Password Setting Mode (PAS)

With the Milk Merchandiser Vender, you have the capability to access both total historical and individual selection can counts externally. You are also able to read Vender errors externally (errors cannot be cleared externally). The “PAS” Mode gives you the option to change the external password to any of your select buttons in a four-digit combination, or you may decide it best to use the factory setting of **1 - 3 - 2 - 4**. If you do decide to set your own password and happen to forget it, just access this menu and the current password will be displayed.

#### HELPFUL HINTS

1. Password numbers range from 0 to 9.
2. If your Vender only has seven selections, you cannot use 8, 9, or 0 in your password or you will not be able to enter the password.
3. To disable the external password, set one of the four (4) digits to “0” or a selection that is not available (as described in Hint #2).

## SECTION 3. VENDER PROGRAMMING

OPERATION: If **<enter>** is pressed when the display shows “PAS”, the Controller will enter the External Password Setting Mode. The display will show the current external password with the first number of the four (to extreme left of display) flashing. Pressing **<up>** or **<down>** allows you to change the flashing digit. If **<enter>** is pressed, the second number from the left will start flashing. By doing this, you lock in any changes made to the first digit and you are now able to change the second digit. Follow the same process for every digit. If the fourth digit is flashing and **<enter>** is pressed, you will return to “PAS”. Pressing **<home>** any time during this process locks in your setting and returns you to the “PAS” display. From “PAS”, pressing **<down>** will take you to “FriG”. Pressing **<up>** will take you to “LAnG”.

### **LAnG** International Language Setting Mode (LAnG)

The Milk Merchandiser Vender gives you the opportunity to set an international languages of English, French, Spanish, Hebrew, or German to show vending messages, such as “sold out,” to the customer.

OPERATION: If **<enter>** is pressed when the display shows “LAnG”, the Controller will enter the International Language Setting Mode. The display will show the current language being used. Pressing **<up>** or **<down>** allows you to change the language to one of the following:

**EnGL** English Language  
**HEbr** Hebrew Language  
**FrEn** French Language  
**GEr** German Language  
**SPAn** Spanish Language

Pressing **<home>** anytime during this process saves any change and returns you to the “LAnG” display. From “LAnG”, pressing **<down>** will take you to “PAS”. Pressing **<up>** will take you to “rtn”.



### Return to Sales / Greeting Mode (rtn)

This mode is used to exit the Service Menu and return to the Sales Mode, where the display flashes the greeting along with any other display options.

OPERATION: If **<enter>** is pressed when the display shows “rtn”, the Controller will revert to the Sales Mode and the greeting will be displayed. From “rtn”, pressing **<down>** will take you to “LAnG”. Pressing **<up>** will take you to “CASH”.

## External Menu

By entering the correct four-digit password when Vender is in stand-by condition (display is showing the greeting, a credit is not established, and the Vender is not set for free vend), you will access the External Menu. This menu consists of three (3) menu items previously discussed in the Internal Menu. The External Menu is designed to give you access to a few features, such as total and individual (per selection) vend counts, Vender error diagnostics, and a clearing feature for individual vend counts. This menu may come in handy for a location manager who does not have access to the inside of the Vender but wishes to report problems and get vend counts. Programming CANNOT be done through this menu! *After five (5) minutes without activity, if money is inserted or if the coin return lever is actuated, the Control Board will revert to the Sales Mode (the LED will show the greeting).*



### Sale Counter Mode (SALE)

This mode is very similar to the Cash Counter Mode. The Sale Counter Mode allows you to manually extract the amount of product vended from your Vender (up to 99,999,999 vends). The Sale Counter Mode consists of a non-resettable total count and individual selection counts. These are resettable depending upon the proper configuration setting (see Configurations). The counts will be preceded by the count type and can be displayed in one (1) or two (2) sets of four (4) digits. Examples for both types of Sale Counters are as follows:

| Count Type           | Actual Count | 1st Display   | 2nd Display | 3rd Display |
|----------------------|--------------|---------------|-------------|-------------|
| Total Sale Count     | 5,678,910    | “SALE”        | “567”       | “8910”      |
| Selection Sale Count | 678,910      | “SL [number]” | “67”        | “8910”      |

## SECTION 3. VENDER PROGRAMMING

---

OPERATION: If **<enter>** is pressed when the display shows “SALE”, the Control Board will enter the Sale Counter Mode. The display will flash “SALE” and the total amount of sales made by the Vender, possibly in two (2) sets of four (4) digits (see Example 1 above). Using **<up>** or **<down>** will cycle through individual selection sale counts. The display will flash individual selection counts (see Example 2 above). If **<home>** is pressed anytime during this operation, the Controller will return to the “SALE” display. From “SALE”, pressing **<down>** will take you to “Error”. Pressing **<up>** will take you to “rtn” (if present).



### Return to Sales / Greeting Mode (rtn)

This mode is used to exit the External Menu and return to the Sales Mode where the display flashes the greeting (ICE COLD or PEPSI COLA) along with any other display options.

OPERATION: If **<enter>** is pressed when the display shows “rtn”, the Controller will revert to the Sales Mode and the greeting will be displayed. From “rtn”, pressing **<down>** will take you to “Sale”. Pressing **<up>** will take you to “Error”.



### Errors Mode (Error)

This mode was designed to help diagnose Vender problems. Upon entering this mode, the display will flash any possible error (for a list, refer to Section 6, Vender Maintenance: Error Codes). If there are no errors, the display will momentarily flash “none” and revert to “Error” on the External Menu. Errors cannot be cleared from this External Errors Menu. They have to be cleared from the Internal Menu.

OPERATION: If **<enter>** is pressed when the display shows “Error”, the Controller will enter into the Errors Descriptive Display Mode. At this point, the display will show any and all current Vender errors followed by the descriptions for each. If no errors exist, “none” will appear on the display. If **<home>** is pressed anytime during this operation, the Controller will return to the “Error” display. From “Error”, pressing **<down>** will take you to “rtn”.

CLEARING ERRORS: To clear an error, you must access the “Error” Mode from within the Password Protected Menus.

## SECTION 4. VEND CYCLE

# Vend Cycle

## Stand-By Condition

In a Stand-By Condition, the Vender will show the greeting and possibly the vend price (if set for a single price or if all prices are set to same) and a choice of other optional features on the LED display. If a select button is pressed prior to reaching the vend price (establishing a credit), the display will show the vend price for that selection. This will indicate to the customer more money is needed for that particular selection.

## Establishing Credit

As coins are inserted into the Coin Mechanism, a corresponding credit count will appear on the display. The Coin Mechanism will continue to accept coins until the highest vend price has been achieved. All coins in excess of the vend price will be returned to the coin cup. Once the vend price has been achieved, the Control Board will set up a credit enabling a vend to be made for any selection equal to or less than the established credit.

## Valid Selection

The Vender's Control Board constantly sends a logic level signal to the common position of each select switch. When a selection is made, the selection switch closes. This allows the low voltage signal to travel from the switches common position through the switch and out the normally open position of that switch to the select switch's harness connection on the Control Board.

## Vend Sequence

At this time (if there has not been a previous sold out), the Control Board distributes 24 volts DC through the door and cabinet wiring harnesses and directly to the coil of the chosen vend motor. Simultaneously the display will scroll. This is an indication to the customer a vend is in progress and to please wait. As the vend motor receives power, it will turn the rotor in an attempt to vend a can.

## Product Delivery

As the can or bottle drops onto the product delivery chute, the vibration from the impact will allow the delivery sensor to send a low voltage signal to the Vender's Control Board. This indicates that a product has been vended. After the Control Board receives the sensor's signal, it will take into account how the Vender is programmed (set depth) and will act accordingly. If the first can has just vended, the Control Board will kill all power to the vend motor at the exact same time that an impact is registered (this avoids a multiple vend of the next product to the rear of the cabinet). As the next can vends, the Control Board will cycle the vend motor to pick up another load of product. This allows a quick

vend, less than three (3) seconds, for the next customer.

*Note: The Control Board will go through a learning process known as the Learning Mode. It will be reset either on power down/up or a door opening/closing. This allows the Vender's Controller to decide which is the front or rear product. The Learning Mode acts in conjunction with the depth setting to allow for an automatic reload after the rear can has vended. How it works: The Controller will notice the first "long-timed out" vend cycle during the learning process. From this, the Controller will know the very next vend will be the front product.*

## Column Sequencing

If a selection has multiple columns assigned to it, the same column is vended each time the selection button is pressed until the number of times vended is equal to the depth of the column. Then, that selection proceeds to the next column assigned. This is to allow the columns to vend evenly.

## Sold-Out

Upon selection, the display will cycle to show the vend progress. After ten (10) to twelve (12) seconds (if a drop of product is not detected), the display will show "sold-out". A sold out may be due to:

1. The column attempted is jammed, therefore product does not drop,
2. The column attempted is genuinely sold out, or
3. The sensor is out of adjustment and does not detect the product drop.
4. If any or all selection, doesn't have a column assigned, it will read "Sold Out".

The digital display will indicate "sold out" and flash the sold out lamp. This signals to the customer to make another selection or push the coin return lever for a full refund. If set for forced purchase, the customer must make an initial selection. If the initial selection is sold out, the customer will be allowed a full refund or an alternate selection. If the Vender is totally sold out of a product, illumination of the "sold out" lamp and the "sold out" message on the digital display will be continuous. No money will be accepted into the Vender in a total sold out condition.

## Resetting Sold Out Selections

A sold out condition is only cleared by the Vender's door switch by opening the Vender's main door. If a sold out condition is not cleared, the Controller will not attempt to vend from that selection. The display will not cycle to indicate a vend is in progress. It will automatically show "sold-out" upon pressing the select button (either before or after reaching a vend price).

## SECTION 5: VENDER MAINTENANCE

---

# Vender Maintenance

## General Maintenance

### WHAT TO CLEAN

A routine cleaning schedule is the best way to insure the optimum possible operation and appearance from your MERLIN IV Vender.

| PART                           | CLEANING METHOD   |
|--------------------------------|---|
| Control Board*                 | The Vender's Control Board should always be enclosed inside its cover to protect it. Routine cleaning is not necessary but, if desired, the Controller's area may be blown out with compressed air.                           |
| Condenser and Evaporator Coils | For efficient operation, the Condenser and Evaporator Coils must be kept clear of any dirt or foreign materials. Clean dirt and lint from the Condenser and Evaporator Coils with a brush, vacuum cleaner, or compressed air. |
| Cabinet and Vend Mechanism     | Steam clean as required. <i>Never</i> use petroleum cleaners or submerge electronics in water.  |

*\* Note: Never use petroleum cleaners or submerge electronics in water. If the Controller is accidentally sprayed with water, be sure to allow it to dry thoroughly before powering up the Vender.*

### WHAT TO LUBRICATE

A routine cleaning schedule is the best way to insure the optimum possible operation and appearance from your MERLIN IV Vender.

| PART                 | CLEANING METHOD   |
|----------------------|---|
| Latch Strike Nut     | The Latch Strike Nut should be lubricated periodically with a petroleum base grease.  |
| Inner Door Gasket    | The door gasket comes from the factory pre-lubricated but should be lubricated periodically with a silicone base grease. Apply to the vertical piece of gasket on the hinged side of the inner door which touches the Vender's main door. This will help prevent any peel back of the gasket which can cause air leaks into the sealed cabinet resulting in freeze ups. |
| Refrigeration System | The Refrigeration System is a sealed unit and does not require any lubrication. Also, the Condenser and evaporator motors do not require any lubrication.   |

**IMPORTANT SAFETY NOTE:** *To prevent bodily injury or damaging the electronics, NEVER plug or unplug any electrical connectors with power applied.*

## SECTION 5: VENDER MAINTENANCE

### Using the Vender's Error Code System

The Milk Merchandiser Vender has a Built-in Error Code Diagnostic System that will help you troubleshoot and solve problems. This system is best used in conjunction with the Troubleshooting Section in the rear of this Manual. The error codes shown below consist of two codes: a Main Error and a Detailed Error. These errors are not a replacement for your knowledge of the Vender or its operation. They will only point you in the general direction of the problem. Most Vender parts are independent of one another. Because of this, most problems can be confined to the item in question (such as a LED Display, Coin Changer, or Select Switch), the harnessing connecting it to the Control Board, and the Control Board itself. Upon opening the Vender's main door, you will enter the Service Mode. The display will flash any Vender Error Codes or "none" if no problems exist. Errors can be cleared from the "Error" Mode within the Service Menu.

*Note: It is recommended the Error Codes be cleared after correcting any problem(s) to prevent confusion and unnecessary work in the future.*

### Error Codes

| MAIN | DETAILEDERROR   | CORRECTIVEACTION  |
|------|---|---|
| SELS | SS 1 thru SS 12 (sel. switch closed)                  | Fix stuck button/switch or replace switch   |
| CHAR | CC (Changer Communication)                            | Check changer harness connections   |
|      | TS (Changer Tube Sensor)                              | Consult changer manufacturer  |
|      | IC (Inlet Chute Blocked)                              | Check Vender's coin chute for blockage  |
|      | tJ (Changer Tube Jam)                                 | Check changer's coin tubes/tube sensors   |
|      | CrCh (Changer ROM Checksum)                           | Consult changer manufacturer  |
| ACCE | EE (Excessive Escrow)                                 | Check for stuck coin return lever   |
|      | nJ (Acceptor Coin Jam)                                | Check for blockage/dirty sensor in acceptor   |
|      | LA (Low Acceptance Rate)                              | Consult changer manufacturer  |
| Chut | CS (Chute Sensor Always On)                           | Adjust Chute Sensor (refer to Section 3)  |
| StS  | DAxx (Double Assigned Column)                         | Correct space to sales setting if necessary   |
|      | UAxx (Unassigned Column)                              | Correct space to sales setting if necessary   |
| bUAL | bS (Bill Validator Sensor)                            | Remove obstruction or clean sensors   |
|      | biLL (Bill Validator Motor)                           | Consult bill validator manufacturer   |
|      | bj (Bill Jam)   | Remove jammed bill or clean bill sensors  |
|      | bOPn (Bill Validator Cash Box Open)                   | Close bill acceptor cash box  |
|      | bFUL (Bill Validator Cash Box Full)                   | Remove bills from cash box  |
|      | bC (Bill Validator Communications)                    | Check bill validator harness connections  |
| FrG  | SEnS (Temperature Sensor)                             | Check for a cut/disconnected temperature sensor   |
|      | *CoLd (Sensing Temperature 3 Degrees below Cutout)    | Check for a welded contact in refrigeration relay or shorted wire from board to Refrigeration Relay                                     |
|      | *CnPr (Not Cooling Within 30 Minutes Of Cut in)       | Check "FrG" in programming and check all wiring connections from board to refrigeration unit  |
|      | HS (Health-Safety temperature limit)                  | Check for proper operation of temperature sensor and of refrigeration unit (refer to decal on the inner door for Troubleshooting steps) |
|      | ACLo (Less Than 95 Volts For Greater Than 30 Minutes) | Check voltage at wall outlet during the peak of the load with all units (if any others are present in circuit) running.                 |

# SECTION 5: VENDER MAINTENANCE

## MILK MERCHANDISER

### Troubleshooting

Use the following section to troubleshoot your Milk Merchandiser vender in the case you have a problem in one of the following areas: power, acceptance (coin or bill), vending, or refrigeration. Although we have added what we felt are the most encountered problems, your specific problem may not be here. If this is the case please, contact your local Royal Vendors' service representative.

#### COIN ACCEPTANCE

| TROUBLE   | POSSIBLE CAUSE   | CORRECTIVE PROCEDURE   |
|---|--|--|
| Coin mechanism will not accept coins              | No power to Vender's main door (lights not lit) or no power to transformer / Control Board | Check to make sure the LED and the sign lighting are lit. If not, check power at transformer.  |
|   | Coin mechanism harness to Control Board is cut or disconnected                             | Repair or replace changer harness.   |
|   | Short in coin mechanism  | Unplug all harnessing from the Control Board except the transformer (power) connection, and the coin mechanism connection and test acceptance. If it accepts, replug each connection, one at a time, and test acceptance after each. |
| No acceptance or rejects percentage of good coins | Defective Control Board  | After a new coin mechanism has been tried and the harness has been checked for continuity, replace Control Board.  |
|   | Coin return lever  | Make sure changer is mounted correctly and a the coin return lever is in the proper position.  |
|   | Acceptor is dirty or foreign matter is in the path   | Check to ensure that the coin mechanism's acceptor is clean.   |
|   | Coin changer is improperly tuned (if tunable)  | Contact coin changer manufacturer.   |
| Accepts coins but gives erratic/no credit         | Defective Control Board  | Replace the Control Board and test.  |
|   | <i>If erratic or no credit:</i><br>Acceptor (coin mechanism)                               | Replace coin mechanism (acceptor) and test. If OK, check the following.  |
|   | If no credit, defective harness between coin mechanism and Control Board                   | Check harness for cut wires or wrong connections. If defective, replace it.  |
|   | If no credit, defective Controller   | Replace Control Board and test.  |

## SECTION 5: VENDER MAINTENANCE

| TROUBLE                       | POSSIBLE CAUSE   | CORRECTIVE PROCEDURE   |
|-------------------------------|--|--|
| Changer will not payout coins | Defective harness between coin mechanism and Control Board | Check harness for cuts or wrong connections. If defective, replace it.   |
|                               | Defective coin mechanism                                   | Replace coin mechanism and test. If it pays out test the Control Board.  |
|                               | Defective Controller                                       | Test Vender's manual coin payout. If Vender pays out using the CPO mode but not during sales, check the coin mechanism or coin mechanism harness. The Control Board is more than likely not the problem. |

### BILL ACCEPTANCE

|  |   |   |
|--|---|---|
| Validator will not pull in a bill                    | Make sure that the validator harnessing is correct for your style of validator and it is plugged in properly                  | Replace defective or wrong validator harness.   |
|  | Acceptance disabled by coin mechanism or bad harnessing (validator status light is on)  | Make sure that the coin mechanism is plugged in (accepts coins) and the tubes are full of coins.                      |
|  | Make sure that the changer harnessing is correctly connected  | Repair or replace faulty harnessing.  |
|  | If validator accepts, replace coin mechanism and test.  | Replace defective validator.  |
|  | If validator accepts, replace validator and test  | Replace defective validator.  |
|  | If validator accepts, replace Controller and test   | Replace defective Controller.   |
| Validator takes a bill and not establishing a credit | Defective (wrong, cut or miswired) validator harnessing. (credit not getting from validator to Control Board via credit wire) | Make sure that the validator harnessing is correct for your style of validator and it is plugged in / wired properly. |
|  | Defective validator   | Replace validator and test acceptance.  |
|  | Defective Controller  | Replace Controller and test acceptance.   |
| Validator takes a bill and not erasing credit        | Validator switch settings (if any)  | Refer to validator service manual or validator representative.  |
|  | Defective validator interface harness   | Refer to validator service manual or validator representative   |
|  | Defective validator   | Replace validator and test acceptance and erasure of credit.  |
|  | Defective Controller  | Replace Controller and test acceptance and erasure of credit  |

## SECTION 5: VENDER MAINTENANCE

| TROUBLE  | POSSIBLE CAUSE                               | CORRECTIVE PROCEDURE   |
|--|--|--|
| Validator takes a bill and allows payback of coins without a selection | Controller's configurations not set properly | Access the Venders Configurations Mode and check the "Forced Attempt" setting. |

### VENDING PROBLEMS

|   |  |   |
|---|--|---|
| Multiple vending                              | If from all selections: delivery sensor cut, not properly grounded, disconnected, or improperly set                    | Set Venders delivery sensor by turning the adjustment screw: <ol style="list-style-type: none"> <li>1. clockwise until indicator lights</li> <li>2. counter clockwise until it goes out</li> <li>3. counter clockwise 1 full turn</li> </ol> If no progress is made by adjusting, replace sensor.<br><i>Note: Slight adjustments may be needed outside the factory set 1 1/2 turns. Turning the adjustment screw clockwise makes the sensor more sensitive and counter clockwise makes it less sensitive. Test vend after every 1/4 turn.</i> |
|   | Control Board sending power to motor when not supposed to  | Check power at vend motor during multiple vend (24 volts DC). If power is present, the Control Board is at fault.   |
|   | Mechanical error gearing within it is OK.  | Check the vend motor to ensure the  |
| Wrong product vending upon selection          | Misload by Vender loader   | Ensure all products within each column are the same.  |
|   | Space to Sales not set properly  | Enter Space to Sales and make sure the columns are set correctly according to the buttons.  |
|   | Miswired motor   | Check wiring at the each vend motor at the bottom of the Vender's main door and at the motor's connection of the Control Board.   |
|   | Miswired selection   | Check the wiring at each select switch and at the select switch's connection of the Control Board.  |
| No vend upon selection - Dry vend (no refund) | Delivery sensor  | Check to see if the delivery sensor adjustment LED is constantly on. If so, turn the adjustment screw counter clockwise until adjustment LED goes out.  |
|   | Check delivery sensor harness for cuts or pinches. The sensor adjustment LED will constantly be on, if a cut is found. | Replace defective sensor.   |

## SECTION 5: VENDER MAINTENANCE

---

| TROUBLE  | POSSIBLE CAUSE  | CORRECTIVE PROCEDURE  |
|--|---|---|
|  | Unplug the sensors connection from the Control Board, if the adjustment LED stays on                                | Replace defective controller.   |
| No vend from some but not all columns (allows refund or second choice) | Make sure the LED display acknowledges the selection switch.  | Check the select switch and trace the selections harness back to the Control Board. Replace if necessary.   |
|  | Individual wire that runs from the motor connection of the Control Board to the vend motor of the defective column. | If cut or pinched, check individual wire running from motor connection at Control Board to defective column.  |
|  | Control Board   | Measure voltage at vend motor's connection of the Control Board. Measure it on the individual wire for the motor attempted and the wire by itself next to the key (neutral). A selection must be made and "hold" must be displayed on the LED. You should register 24 VDC at the vend motor. If not, replace Control Board. |

---

### MISCELLANEOUS PROBLEMS

---

|             |   |  |
|-------------|---|--|
| LED not lit | If no power, check for 24 volts AC at the Control Board's power connection.                   | Check transformer and power to transformer.  |
|             | Press Controller's mode button. Does LED light? Power the Vender down and up. Does LED light? | If not, check LED lead.  |
|             | LED lead  | Check the lead for any sign of being pinched or cut. If so, change the LED.  |
|             | LED   | Remove all harnessing but LED lead and the power lead from transformer to Control Board. Check the new LED before mounting it in the Vender. If still bad, replace the Control Board and test. |

## SECTION 5: VENDER MAINTENANCE


| TROUBLE  | POSSIBLE CAUSE  | CORRECTIVE PROCEDURE   |
|--|---|--|
| Display shows sold out immediately upon pressing select button with column full of product (sold-out not clearing) | Door switch wiring incorrectly connected, cut, or pinched             | Check for cuts on the two (2) door switch wires going from the switch to the Control Board. Also check for bad connections at the door switch, the plug at the bottom of the Vender's main door, and at the Control Board's connection. Are any found? If not, check the door switch.  |
|  | Door switch   | Check the door switch to see if it is defective. If so, replace it.  |
|  | Control Board   | Check Control Board by shorting across the two (2) pins for the door switch wiring (Control Board's option connection) Does this clear the sold out condition? If so, replace the Control Board.   |
| LED shows "Out of Service"   | Corrupted control board   | Press the service mode button. After approximately 20 seconds, the control board will be reset to its default settings. Reprogram the control board.   |
| LED shows "Out of Order"   | Health Sensor error   | Clear "hS" error in programming menu. (See "Section 3: Vender Programming" for instructions on clearing errors.)   |
|  | Power loss, more than 15 minutes with cabinet temperature above 41° F | Enter into "Error" in programming menu. At "FriG," press <enter>. Press <enter> again at "hS." The display will show "tinE," followed by a number, then "tEnP," followed by a temperature. The number represents the number of minutes the power was lost; the temperature shown is the temperature inside the cabinet at the time power was restored. To return to normal operation, clear the "hS" error. (See "Section 3: Vender Programming" for instructions on clearing errors.) |

### REFRIGERATION PROBLEMS

|                                    |                               |   |
|------------------------------------|-------------------------------|---|
| Refrigeration unit runs constantly | Defective manual cold control | Replace manual cold control.  |
|                                    | Short in main wiring harness  | Replace main wiring harness.  |
| Refrigeration unit will not run    | Unit itself is defective      | Unplug the refrigeration unit from the top of the main wiring harness and plug it into a direct power source. If it does not run, replace the refrigeration unit. <b><i>(DANGER: ELECTRIC SHOCK HAZARD. When plugging in the refrigeration unit directly to a wall outlet or other power source, always ensure that the vender itself is also plugged in to a grounded electrical outlet. Failure to do so could cause an electrical shock, possibly resulting in severe injury or even death.)</i></b> |
|                                    | Defective manual cold control | Replace manual cold control.  |
|                                    | Defective main wiring harness | Replace main wiring harness.  |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Control Board and Wiring

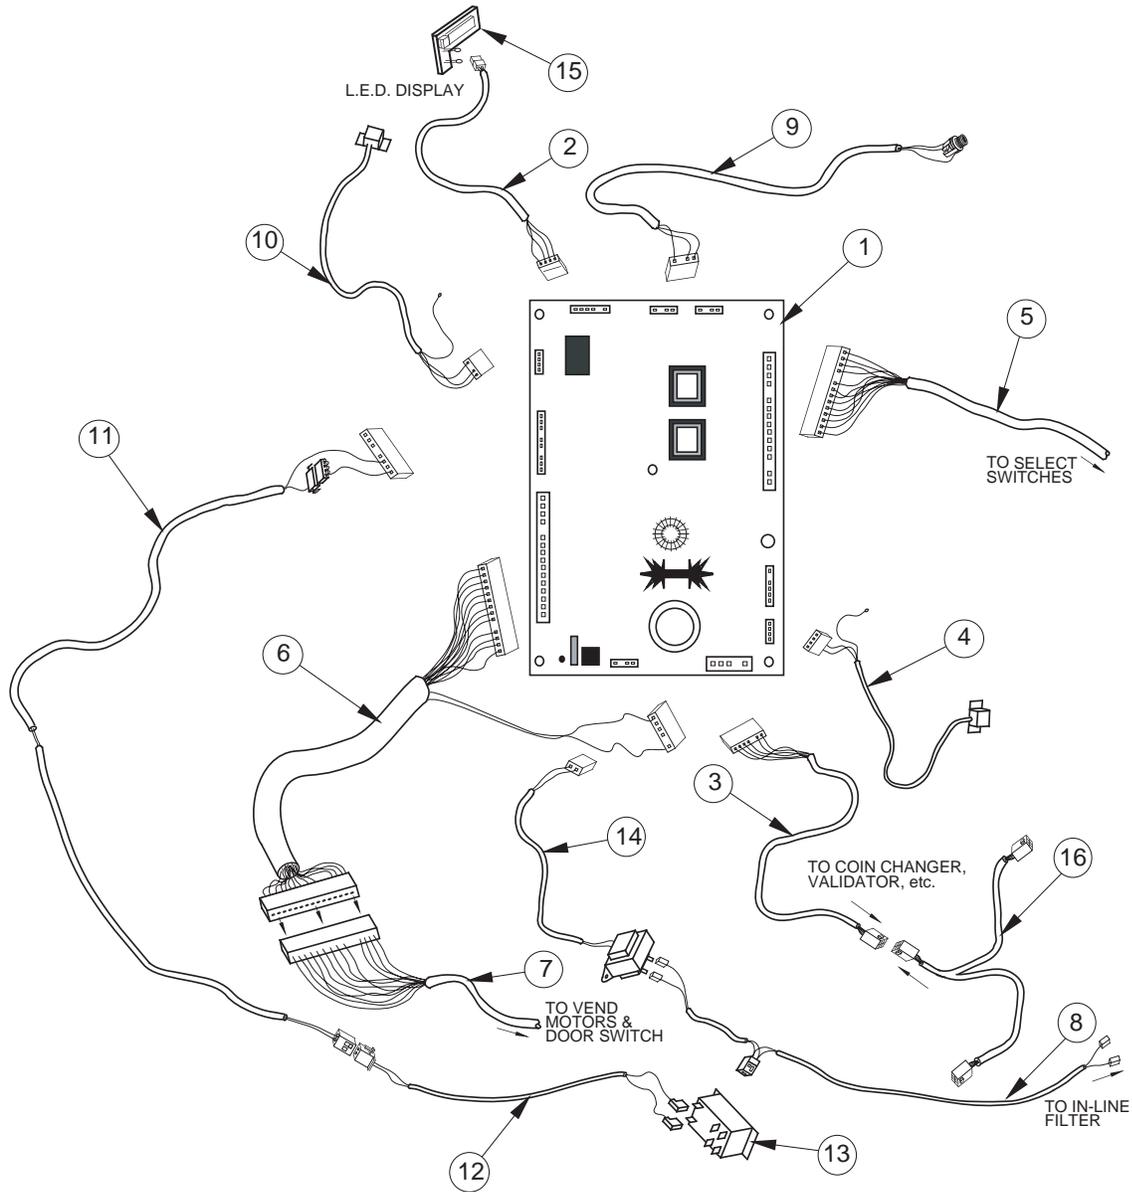

# exploded views

I.D. #A235,083,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS


---

### Control Board and Wiring

| ITEM # | DESCRIPTION   | PART NUMBER |
|--------|---|-------------|
| 1      | Control Board .....                                     | 836139      |
| 2      | LED Display Lead .....                                  | 842081      |
| 3      | Serial Changer Harness .....                            | 842079      |
| 4      | Delivery Sensor (includes harness) .....                | 836004      |
| 5      | Select Switch Harness, 10 Select .....                  | 842243      |
|        | Select Switch Harness, Live Display Vender .....        | 842192      |
| 6      | Main Door Harness (vend motor/door switch wiring) ..... | 842169      |
| 7      | Cabinet Harness, 12 Column Mechanism .....              | 842230      |
| 8      | 117V Line Transformer Harness .....                     | 842151      |
| 9      | Internal HH. Phone Jack and Harness .....               | 842099      |
| 10     | Temperature Sensor Door Side .....                      | 822057      |
|        | Cabinet Side .....                                      | 822055      |
| 11     | Evap Relay Harness, Door Side .....                     | 842377      |
| 12     | Evap Relay Harness, Cabinet Side .....                  | 842282      |
| 13     | Relay (to Evap fan) .....                               | 836065      |
| 14     | Transformer Assembly .....                              | 842147      |
|        | Harness, Transformer and Fuse to Board .....            | 842210      |
|        | Fusebox Assembly .....                                  | 842219      |
| 15     | LED Display .....                                       | 836012      |
| 16     | MDB Harness .....                                       | 842116      |
|        | Refrig Control Relay Harness Door Side .....            | 842236      |
|        | Refrig Control Relay Harness Cabinet Side .....         | 842237      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Port Assembly

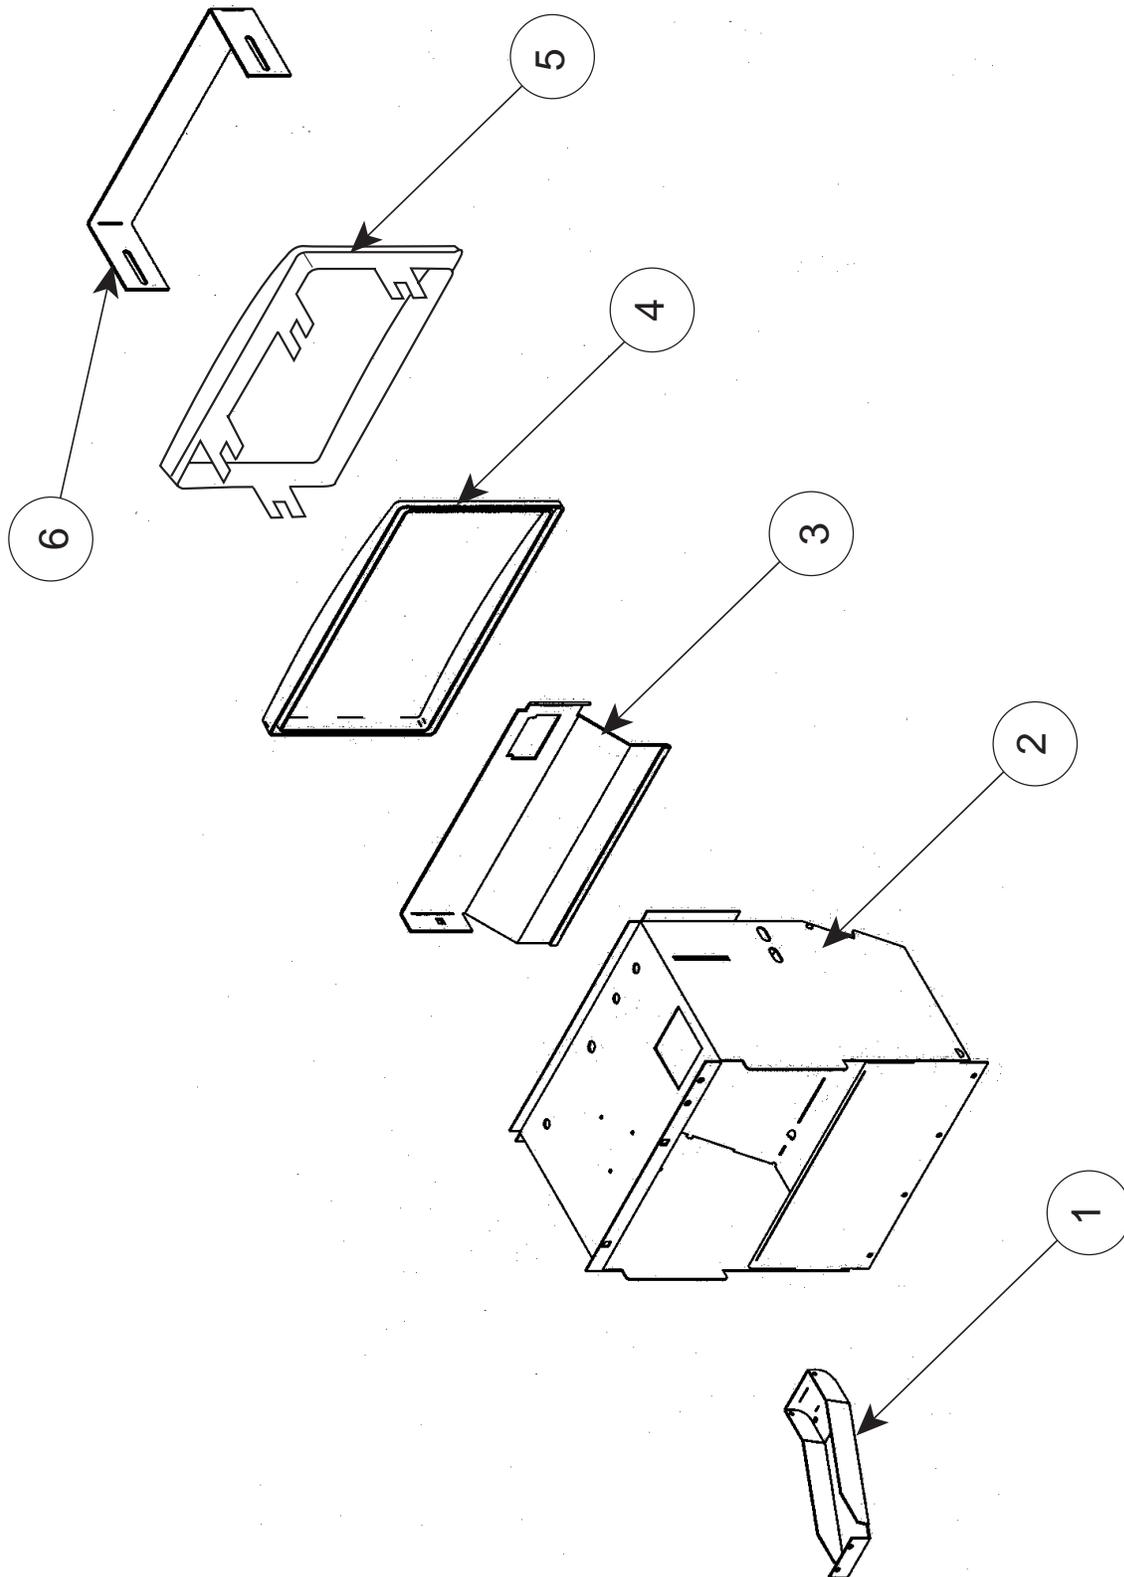

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS


---

### Port Assembly

| ITEM # | DESCRIPTION                   | PART NUMBER |
|--------|-------------------------------|-------------|
| 1      | Coin Cup .....                | 231505      |
| 2      | Port Body Weld Assembly ..... | 303510      |
| 3      | Anti-Theft Plate, CDC .....   | 303503      |
| 4      | Port Spacer .....             | 815248      |
| 5      | Port Trim .....               | 815249      |
| 6      | Can Stop .....                | 273508      |
| •      | Anti-Foaming Label .....      | 931355      |
| •      | Enclosed Coin Cup Kit .....   | 303150      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Inner Door Assembly

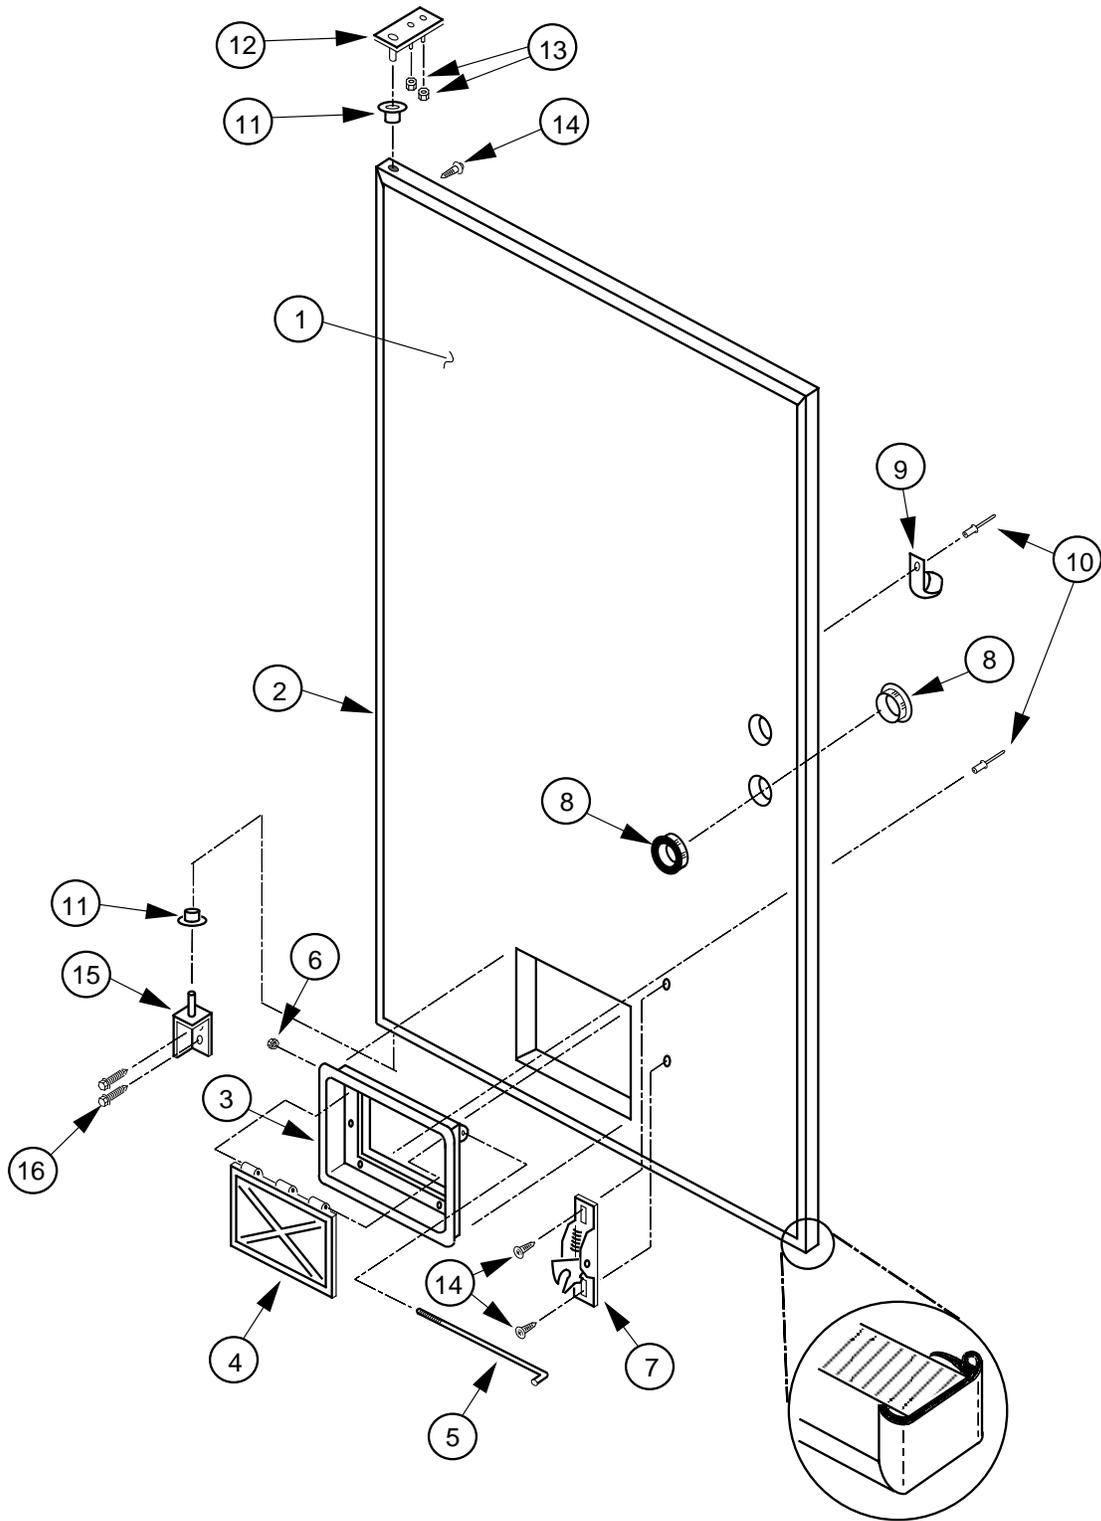

I.D.# A235,043,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS


---

### Inner Door Assembly

| ITEM # | DESCRIPTION                                   | PART NUMBER |
|--------|---|-------------|
| 1      | Inner Door Assembly 72" Wide Venders .....    | 332610      |
| 2      | Inner Door Gasket 72" Wide Venders .....      | 815032      |
| 3      | Port Door Frame .....                         | 815191      |
| 4      | Port Door .....                               | 815192      |
| 5      | Port Door Rod .....                           | 811028      |
| 6      | Elastic Stop Nut .....                        | 905006      |
| 7      | Burst Open Latch .....                        | 812002      |
| 8      | Bushing, 1.37" .....                          | 916003      |
| 9      | Cable Clamp .....                             | 916004      |
| 10     | 1/8" Rivet .....                              | 908002      |
| 11     | Inner Door Bushing .....                      | 815026      |
| 12     | Inner Door Hinge (Top).....                   | 010520      |
| 13     | Nut, 8-32 .....                               | 905001      |
| 14     | Self Drilling Screw W/ Washer .....           | 902001      |
| 15     | Inner Door Hinge, Bottom .....                | 010550      |
| 16     | Self Tapping 1/4 - 20 X 1" .....              | 901003      |
| •      | Space to Sales Decal (12 column vender) ..... | 931302      |
| •      | Interconnect Decal .....                      | 931477      |
| •      | Loading Decal .....                           | 931478      |
| •      | Controller Decal .....                        | 931479      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Main Door Hinge, Lifter & T-Handle Assemblies

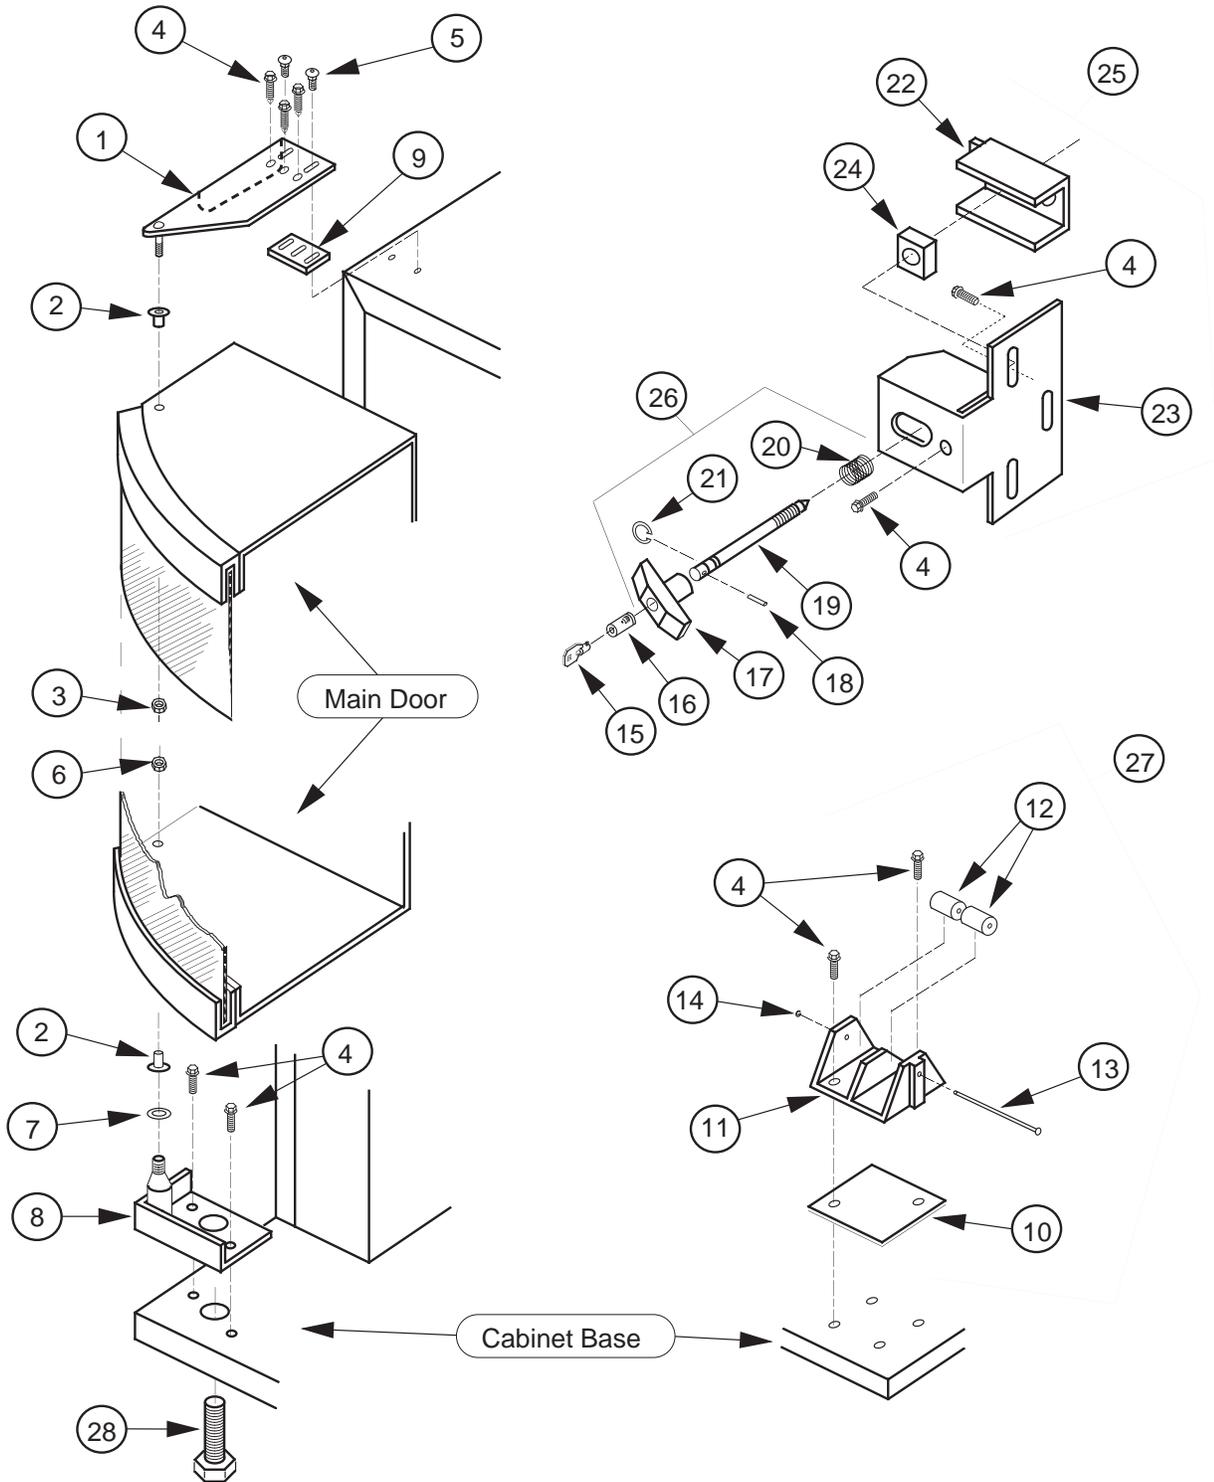

I.D.# A235,044,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

### Main Door Hinge, Lifter & T-Handle Assemblies


| ITEM # | DESCRIPTION                                    | PART NUMBER |
|--------|--|-------------|
| 1      | Universal Hinge .....                          | 164550      |
| 2      | Bearing Nyliner .....                          | 916012      |
| 3      | 5/8" Keps Nut .....                            | 905016      |
| 4      | Self Tapping 1/4 - 20 X 1" .....               | 901003      |
| 5      | Carriage Bolt 1/4 - 20 X 1 1/4" .....          | 901008      |
| 6      | Keps Nut 1/4 - 20 .....                        | 905002      |
| 7      | Flat Washer .....                              | 904002      |
| 8      | Bottom Hinge Bracket W/A .....                 | 010040      |
| 9      | Top Hinge Spacer .....                         | 010016      |
| 10     | Door Roller Spacer .....                       | 010015      |
| 11     | Door Roller Bracket .....                      | SEE NOTE #2 |
| 12     | Door Roller .....                              | SEE NOTE #2 |
| 13     | Door Roller Pin .....                          | SEE NOTE #2 |
| 14     | Retainer Ring 5/32" .....                      | 906005      |
| 15     | Key .....                                      | SEE NOTE #1 |
| 16     | Lock .....                                     | SEE NOTE #1 |
| 17     | T-Handle Body .....                            | SEE NOTE #2 |
| 18     | Pin .....                                      | SEE NOTE #2 |
| 19     | "T" Handle Stud .....                          | SEE NOTE #2 |
| 20     | Spring .....                                   | SEE NOTE #2 |
| 21     | Retainer Ring .....                            | SEE NOTE #2 |
| 22     | Nut Retainer .....                             | 010028      |
| 23     | Latch Strike, Milk Merchandiser .....          | 010027      |
| 24     | Square Nut 3/4 X 1/2 - 13 .....                | 905005      |
| 25     | Latch Strike Assembly, Milk Merchandiser ..... | 281010      |
| 26     | T-Handle Assembly .....                        | 812289      |
| 27     | Door Roller Assembly .....                     | 141180      |
| 28     | Leveling Leg .....                             | 803002      |

NOTE #1: There are various parts. Please specify model and serial number at the time of order.

NOTE #2: This part is not available individually. It must be ordered as an assembly.

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Refrigeration System Assembly

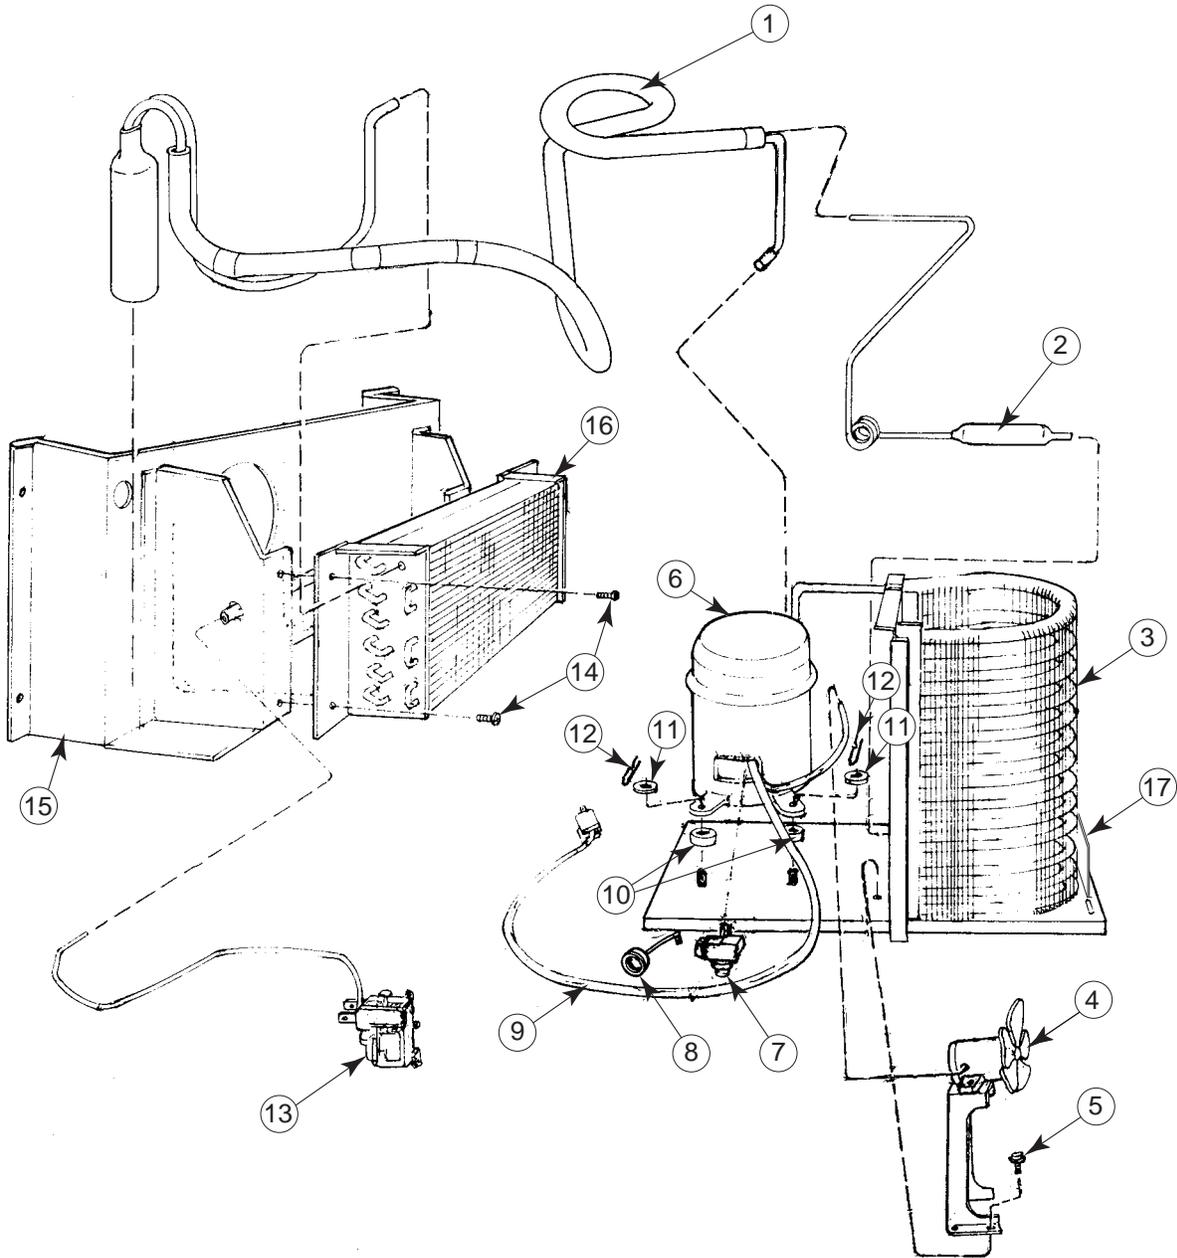

I.D.# A235,045,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

---


### Refrigeration System Assembly

| ITEM # | DESCRIPTION                                  | PART NUMBER |
|--------|--|-------------|
| 1      | Heat Exchange .....                          | 210425      |
| 2      | Dryer .....                                  | 824011      |
| 3      | Condenser .....                              | 820007      |
| 4      | Condenser Fan Motor Assembly (w/Blade) ..... | 839010      |
|        | Condenser Fan blade .....                    | 810014      |
| 5      | Screw, #8-32x1/2" .....                      | 901006      |
| 6      | 1/3+ H.P. Capacitor Start Compressor .....   | 819028      |
| 7      | Compressor Relay 1/3+ H.P. ....              | 822042      |
| 8      | Compressor Overload 1/3+ H.P. ....           | 822010      |
| 9      | Compressor Lead .....                        | See note #2 |
| 10     | Grommets, Compressor .....                   | 916015      |
| 11     | Grommets Plugs .....                         | 815017      |
| 12     | Clip, Compressor .....                       | 914002      |
| 13     | Thermostat .....                             | 822001      |
| 14     | Screw, #8x1/2" .....                         | 902004      |
| 15     | Evaporator Fan Shroud Assembly .....         | 256080      |
| 16     | Evaporator Coil .....                        | 820002      |
| 17     | Refrigeration System, 1/3+ H.P. ....         | 256420      |
| •      | Evaporator Cover .....                       | 256004      |

Note #2: This part is not available individually. It must be ordered as an assembly.

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Evaporator Fan Motor Assembly

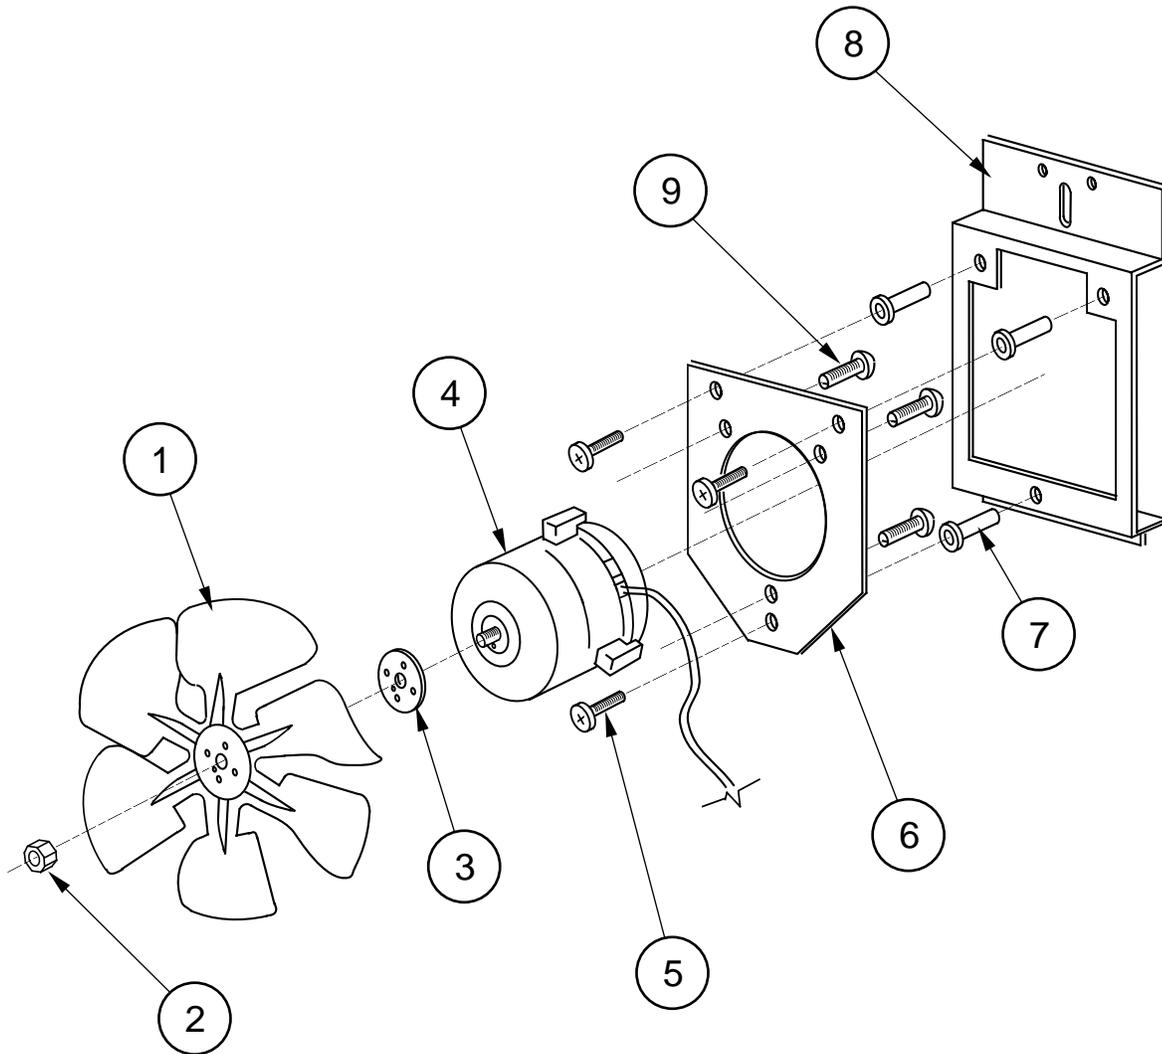

I.D.# A235,006,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS


---

### Evaporator Fan Motor Assembly

| ITEM # | DESCRIPTION   | PART NUMBER |
|--------|---|-------------|
| 1      | Fan Blade .....                                       | n/a         |
| 2      | Nut 1/4-20 .....                                      | 905002      |
| 3      | Silencer .....  | 939027      |
| 4      | Motor, 35w. / 115v. ....                              | n/a         |
| 5      | Machine Screw #8-32x1/2" .....                        | 901038      |
| 6      | Fan Plate .....                                       | 010058      |
| 7      | Well Nut .....  | 905026      |
| 8      | Fan Mounting Bracket .....                            | 010057      |
| 9      | Screw #8-32x3/8" .....                                | 901011      |
| •      | Evaporator Fan Motor Assembly, 35 w (all items) ..... | 303121      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Vend Mechanism Assembly

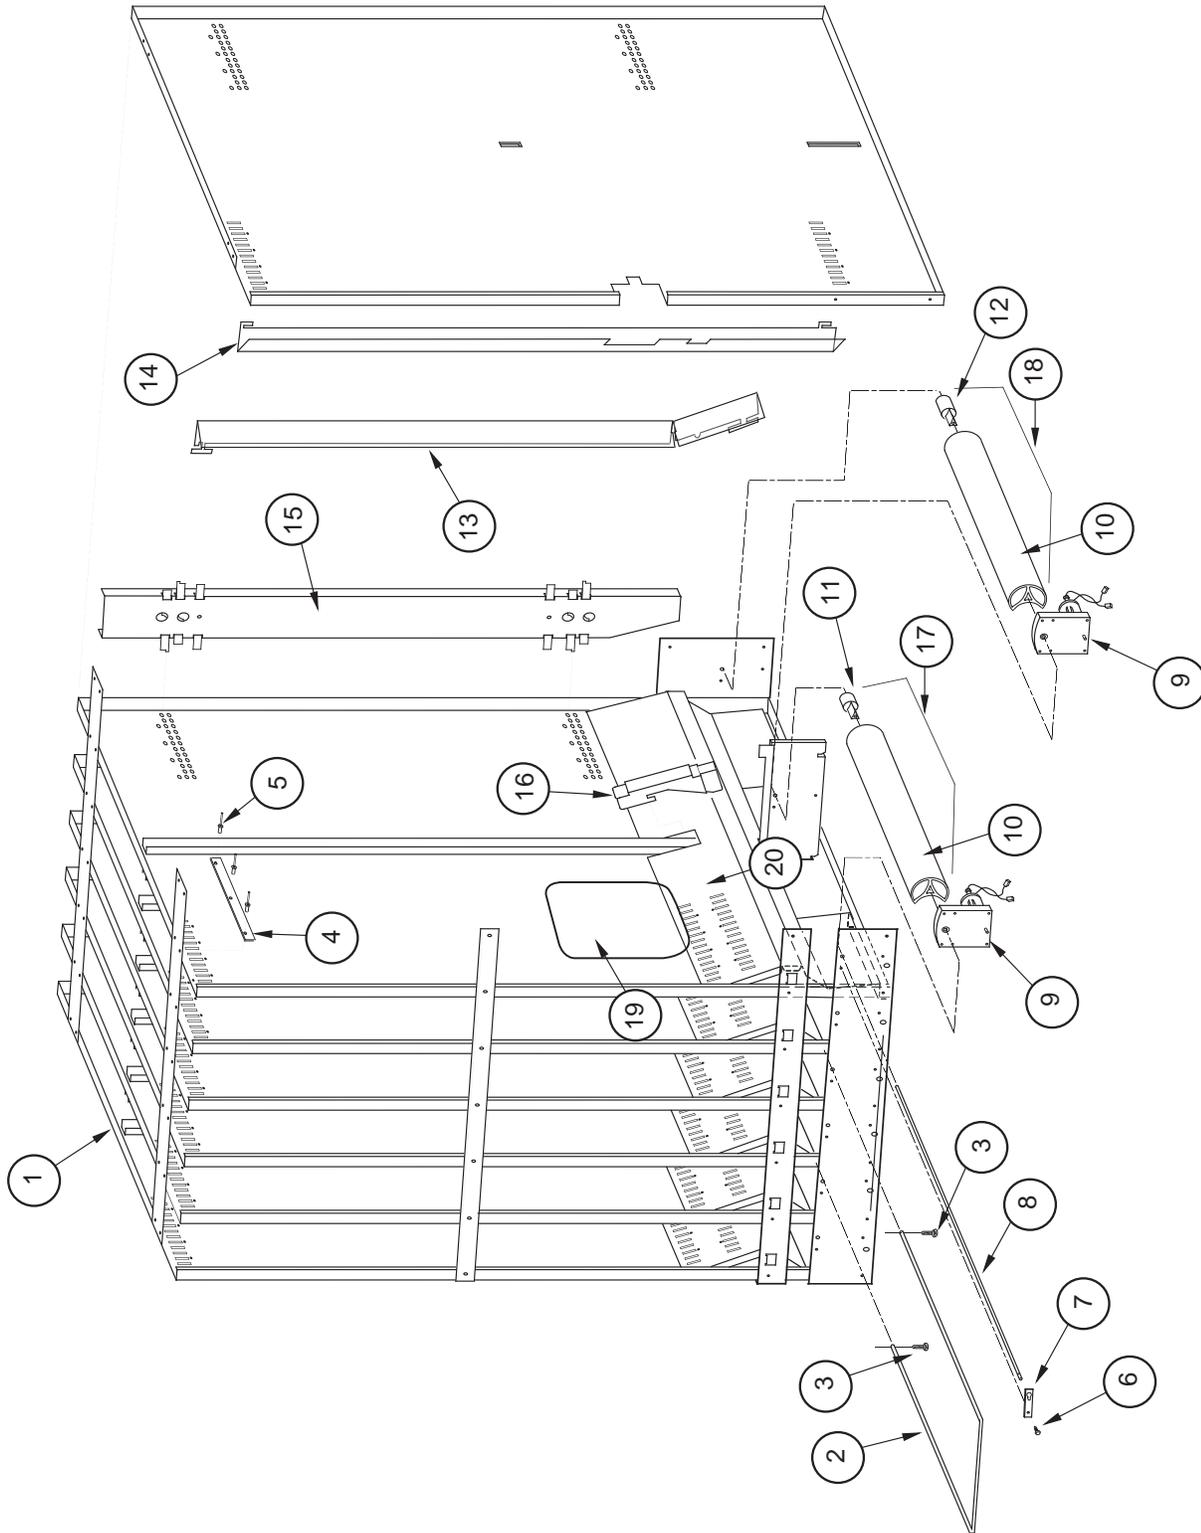

I.D.# A235,046,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS


---

### Vend Mechanism Assembly

| ITEM # | DESCRIPTION  | PART NUMBER |
|--------|--|-------------|
| 1      | Vend Mechanism Assembly, 12 Col. 72" Vender .....          | 332710      |
| 2      | Case Support, Wide .....                                   | 811026      |
| 3      | Self Drilling Screw .....                                  | 902004      |
|        | Hitch Pin Clip ( <i>some venders may have pins</i> ) ..... | 906023      |
| 4      | Rubber Strip .....   | 915199      |
| 5      | 1/8" Rivet .....   | 908002      |
| 6      | Screw, #8-32x3/8" .....                                    | 901011      |
| 7      | Rod Retainer .....   | 256714      |
| 8      | Rotor Rod .....  | 803055      |
| 9      | Vend Motor .....   | 839031      |
| 10     | Rotor .....  | 813027      |
| 11     | Front Rotor Bearing .....                                  | 915156      |
| 12     | Rear Rotor Bearing .....                                   | 915222      |
| 13     | Product Retainer, Left (72" Vender) .....                  | 257706      |
| 14     | Product Retainer, Right (72" Vender) .....                 | 257705      |
| 15     | Backspacer Assembly (72" Vender) .....                     | 332750      |
| 16     | Funnel Angle .....   | 256719      |
| 17     | Rotor Assembly, Front Column .....                         | 332730      |
| 18     | Rotor Assembly, Rear Column .....                          | 332740      |
| 19     | Anti-friction Sheet .....                                  | 915197      |
| 20     | Product Funnel .....                                       | 332702      |
| •      | Back Plate .....   | 332704      |
| •      | Sensor Bracket Tie Strip .....                             | 332705      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Miscellaneous Assemblies

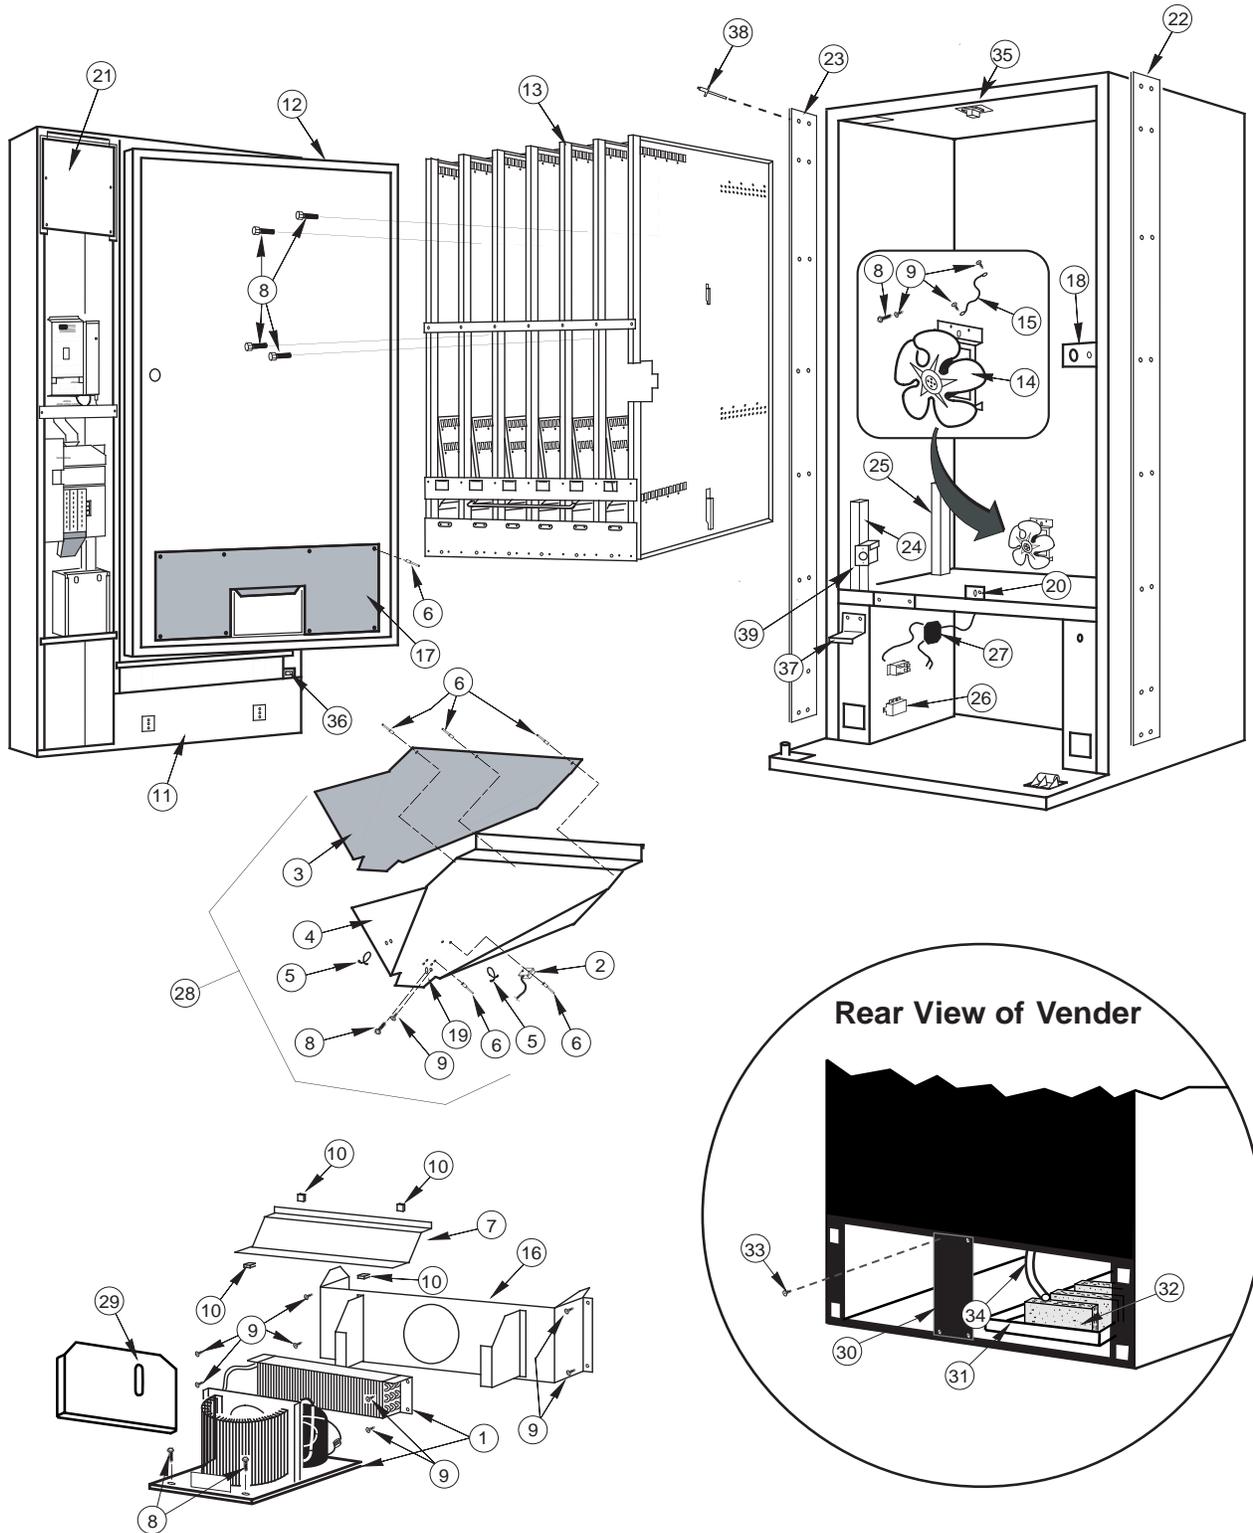

I.D.# A235,047,003RV


# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Miscellaneous Assemblies

| ITEM # | DESCRIPTION .....                                    | PART NUMBER |
|--------|--|-------------|
| 1      | Refrigeration System .....                           | 256420      |
| 2      | Delivery Chute Sensor .....                          | 836004      |
| 3      | Delivery Chute Liner .....                           | 815262      |
| 4      | Delivery Chute .....                                 | 256005      |
| 5      | Tension Clips .....                                  | 916059      |
| 6      | Rivets, 1/8" .....                                   | 908004      |
| 7      | Evaporator Cover .....                               | 332001      |
| 8      | Self Tapping Screw, 1/4-20x1" .....                  | 901003      |
| 9      | Self Drilling Screw, #8x1/2" .....                   | 902004      |
| 10     | "U" Clips .....                                      | 842236      |
| 11     | Door Weld Assembly, 10 Sel. 72" .....                | 906007      |
| 12     | Inner Door Assembly 72" .....                        | 274581      |
| 13     | Vend Mechanism Assembly, 12 Column 72" Vender .....  | 332710      |
| 14     | Evaporator Fan Motor Assembly .....                  | 303121      |
| 15     | Grounding Wire .....                                 | Misc.       |
| 16     | Evaporator Fan Housing, Wide Vender .....            | 256080      |
| 17     | Inner Door Cover Assembly, Wide Vender .....         | 815259      |
| 18     | Latch Strike Assembly .....                          | 281010      |
| 19     | Bracket, Chute Locator .....                         | 141014      |
| 20     | Can Chute Tie Bracket .....                          | 010017      |
| 21     | PC Board Cover .....                                 | 815349      |
| 22     | Right Cabinet Vandal Panel 72" (specify color) ..... | 011002      |
| 23     | Left Cabinet Vandal Panel 72" (specify color) .....  | 011001      |
| 24     | Mech. Support, W/A .....                             | 256013      |
| 25     | Mech. Support, 3 Deep .....                          | 058001      |
| 26     | In-Line Filter Assembly .....                        | 011124      |
| 27     | Main Wiring Harness .....                            | 842063      |
| 28     | Can Chute Assembly .....                             | 256070      |
| 29     | Condenser Baffle .....                               | 010403      |
| 30     | Rear Baffle .....                                    | 010037      |
| 31     | Condensate Pan .....                                 | 815368      |
| 32     | Sponge .....   | 815037      |
| 33     | Self Drilling Screw .....                            | 902004      |
| 34     | Drain Tube .....                                     | 815134      |
| 35     | Temperature Sensor Door Side .....                   | 822057      |
|        | Temperature Sensor Cab Side .....                    | 822055      |
|        | Temperature Sensor Bracket .....                     | 810085      |
| 36     | Door Switch .....                                    | 835019      |
| 37     | Door Switch Actuator .....                           | 231009      |
| 38     | Pop Rivet .....                                      | 908018      |
| 39     | Refrigeration Control .....                          | 822001      |
| •      | Caster Kit Assembly, Heavy Duty .....                | 256130      |
| •      | Mesh Cabinet Back .....                              | 141001      |
| •      | Steel Cabinet Back .....                             | 010215      |
| •      | Drain Hose Clip .....                                | 906025      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Door Assembly, Front

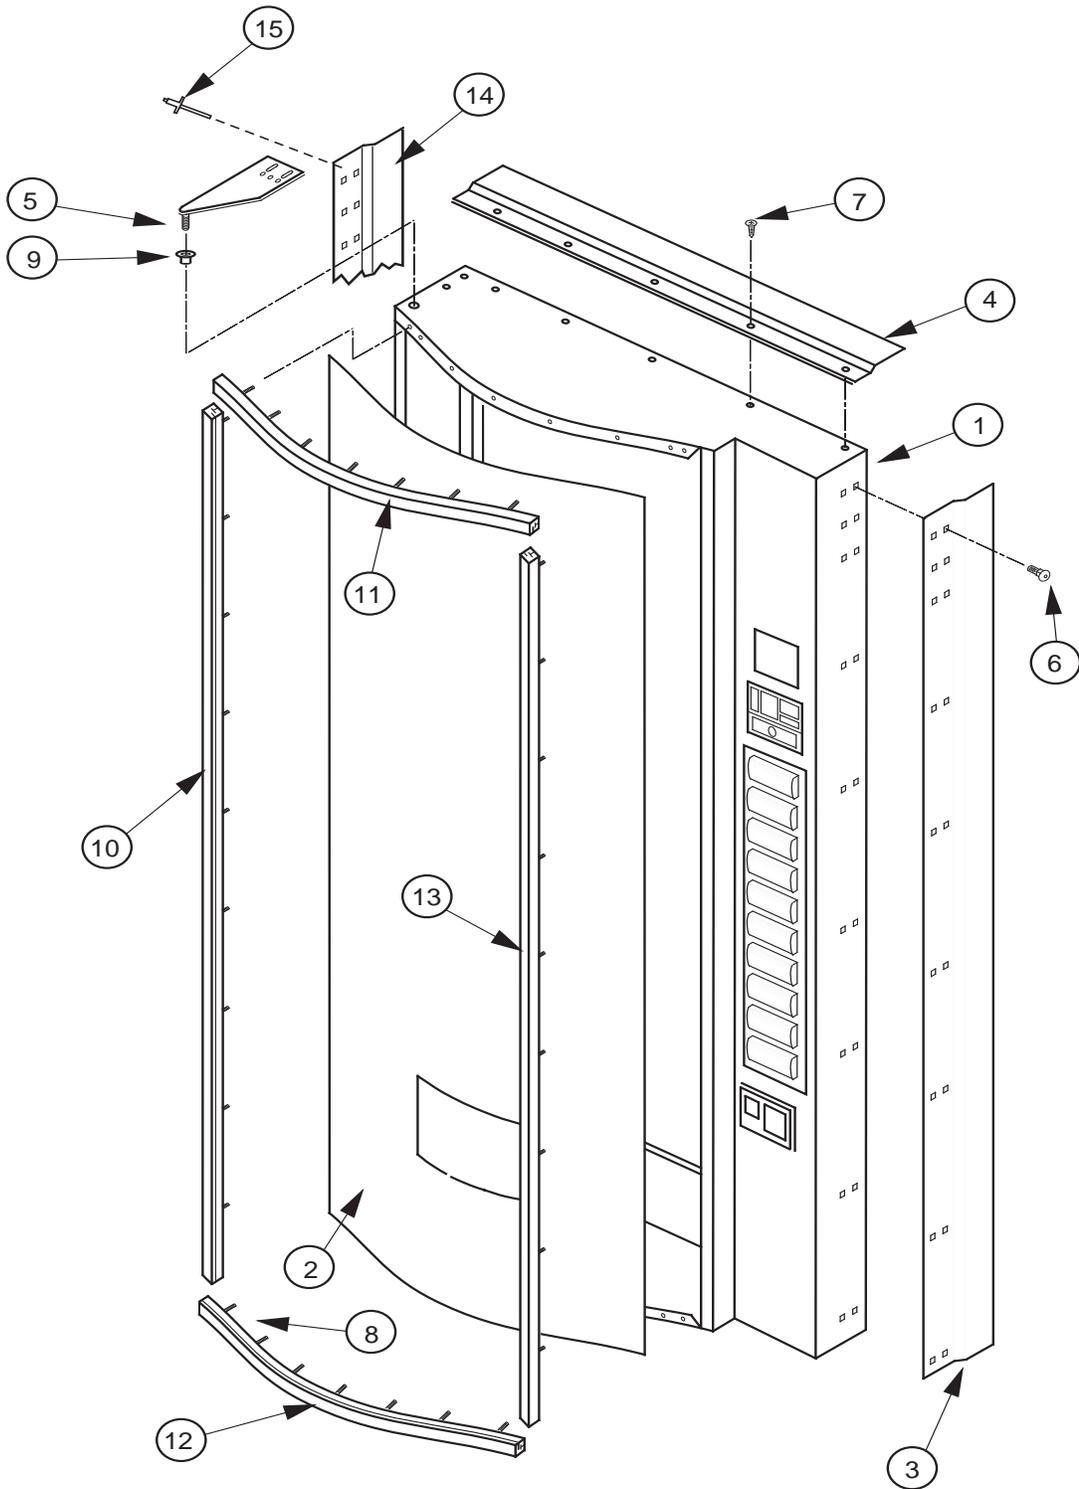

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

---

### Door Assembly, Front

| ITEM # | DESCRIPTION                                  | PART NUMBER |
|--------|--|-------------|
| 1      | Door Weld Assembly, 10 Sel. 72" .....        | 274581      |
| 2      | Sign .....                                   | SEE NOTE #1 |
| 3      | Right Vandal Panel 72" (Specify color) ..... | 011501      |
| 4      | Rain Guard .....                             | 258504      |
| 5      | Top Door Hinge .....                         | 810002      |
| 6      | Carriage Bolt, 1/4-20x1/2" .....             | 901007      |
| 7      | Self Drilling Screw, #8x1/2" .....           | 902004      |
| 8      | "T"-Screw 8-32 .....                         | 901001      |
| 9      | Top Door Bushing .....                       | 803003      |
| 10     | Left Side Trim 72" .....                     | 142502      |
| 11     | Top Trim .....                               | 012553      |
| 12     | Bottom Trim .....                            | 012553      |
| 13     | Right Side Trim 72" .....                    | 013507      |
| 14     | Left Vandal Panel, 72" (Specify color) ..... | 142022      |
| 15     | Pop Rivet .....                              | 908018      |
| •      | Christmas Tree .....                         | 916009      |

NOTE #1: There are various parts. Please specify model and serial number at the time of order




## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

### Door Assembly, Rear

| ITEM # | DESCRIPTION                                    | PART NUMBER |
|--------|--|-------------|
| 1      | Door Weld Assembly, 10 Sel. 72" .....          | 274581      |
| 2      | Port Body Welded Assembly .....                | 303510      |
| 3      | Lamp Guard .....                               | 012514      |
| 4      | Port Brace .....                               | 010515      |
| 5      | Lamp, Slimline For 72" Vender .....            | n/a         |
| 6      | Coin Box Housing .....                         | 273540      |
| 7      | Coin Box Welded Assembly .....                 | 815347      |
| 8      | Coin Hopper .....                              | 303502      |
| 9      | Changer Door .....                             | 010544      |
| 10     | Ballast Assembly, 72" CDC .....                | 195910      |
| 11     | Lamp Bracket .....                             | 010517      |
| 12     | Top Lampholder .....                           | 842003      |
| 13     | Bottom Lampholder .....                        | 842004      |
| 14     | Changer Door Hinge Assembly, Top .....         | 010570      |
| 15     | Changer Door Hinge Assembly, Bottom .....      | 010560      |
| 16     | Bottom Inner Door Hinge .....                  | 010550      |
| 17     | Latch Roller Bracket .....                     | 010516      |
| 18     | Burst Open Latch Strike .....                  | 812003      |
| 19     | Self Tapping Screw, 1/4-20x1" .....            | 901003      |
| 20     | Self Drilling Screw, #8-32 .....               | 902004      |
| 21     | Carriage Bolt, 1/4-20x1/2" .....               | 901007      |
| 22     | Keps Nut, 1/4-20 .....                         | 905002      |
| 23     | Sems Screw, #8-32x3/8" .....                   | 901011      |
| 24     | Pop Rivet, 1/8" .....                          | 908004      |
| 25     | Bottom Coin Chute Assembly (To Coin Box) ..... | 012593      |
| 26     | Hopper Chute Assembly (To Coin Cup) .....      | 012538      |
| 27     | Door Rod .....                                 | 811001      |
| 28     | Elastic Stop Nut .....                         | 905004      |
| 29     | Screw #8-32x1/2" with washers .....            | 901006      |
| 30     | Transformer Assembly .....                     | 842147      |
| 31     | Fusebox Assembly .....                         | 842219      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Select Panel Assembly, Rear

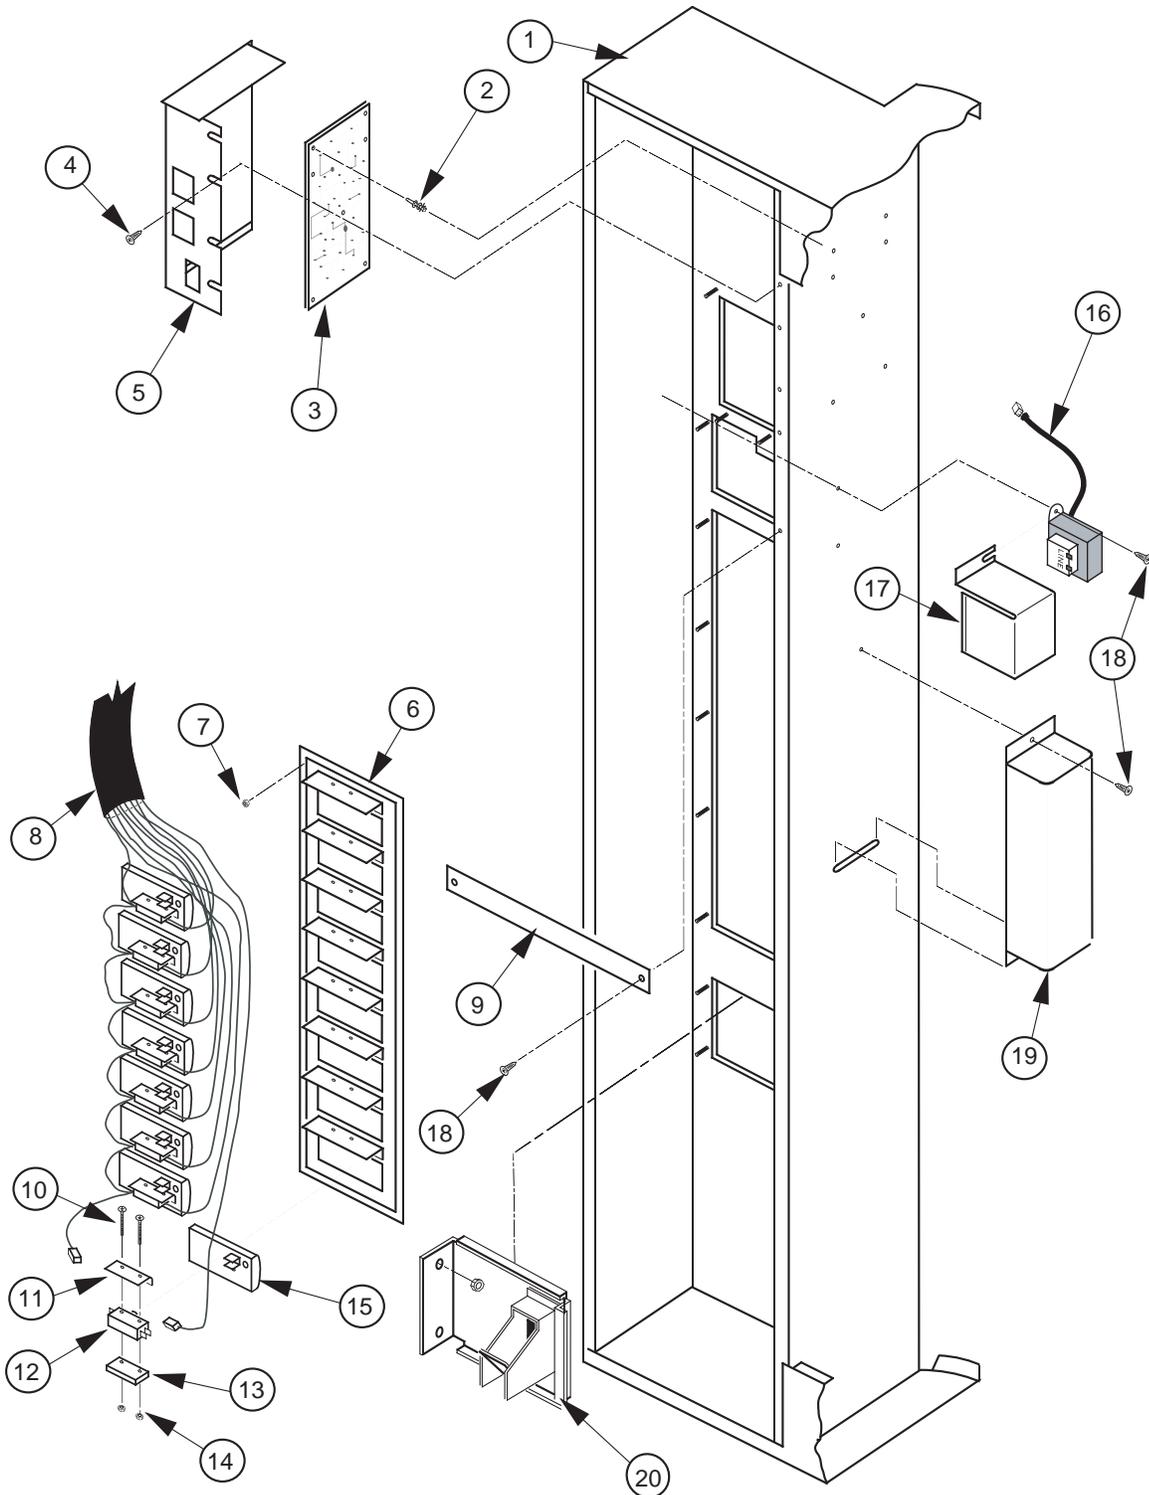

I.D.# A235,051,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

---


### Select Panel Assembly, Rear

| ITEM # | DESCRIPTION                                   | PART NUMBER |
|--------|---|-------------|
| 1      | Door Weld Assembly, 10 Sel. 72" CDC .....     | 274581      |
| 2      | PC Board Spacer .....                         | 916027      |
| 3      | Control Board .....                           | 836139      |
| 4      | Self Drilling Screw, #8-18x1/2" .....         | 902004      |
| 5      | Control Board Cover .....                     | 815349      |
| 6      | Button Panel Welded Assembly, 10 Select ..... | 017530      |
| 7      | Keps Nut, #8-32 .....                         | 905001      |
| 8      | Select Switch Harness .....                   | 842243      |
| 9      | Panel Strap (optional) .....                  | 010531      |
| 10     | Screw .....                                   | 901041      |
| 11     | Spring Shield .....                           | 815164      |
| 12     | Switch (large) .....                          | 835012      |
| 13     | Switch Spacer .....                           | 815018      |
| 14     | Keps Nut .....                                | 905018      |
| 15     | Button Assembly .....                         | 815025      |
| 16     | Transformer Assembly .....                    | 842147      |
| 17     | Transformer Cover .....                       | 010063      |
| 18     | Self Tapping Screw, #8-32x3/8" .....          | 901002      |
| 19     | Ballast, Slimline .....                       | 838002      |
| 20     | Coin Return Cup .....                         | 231505      |

*NOTE #1: There are various parts. Please specify model and serial number at the time of order.*

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## RVCD Vandal Resistant Door (CDC) Front

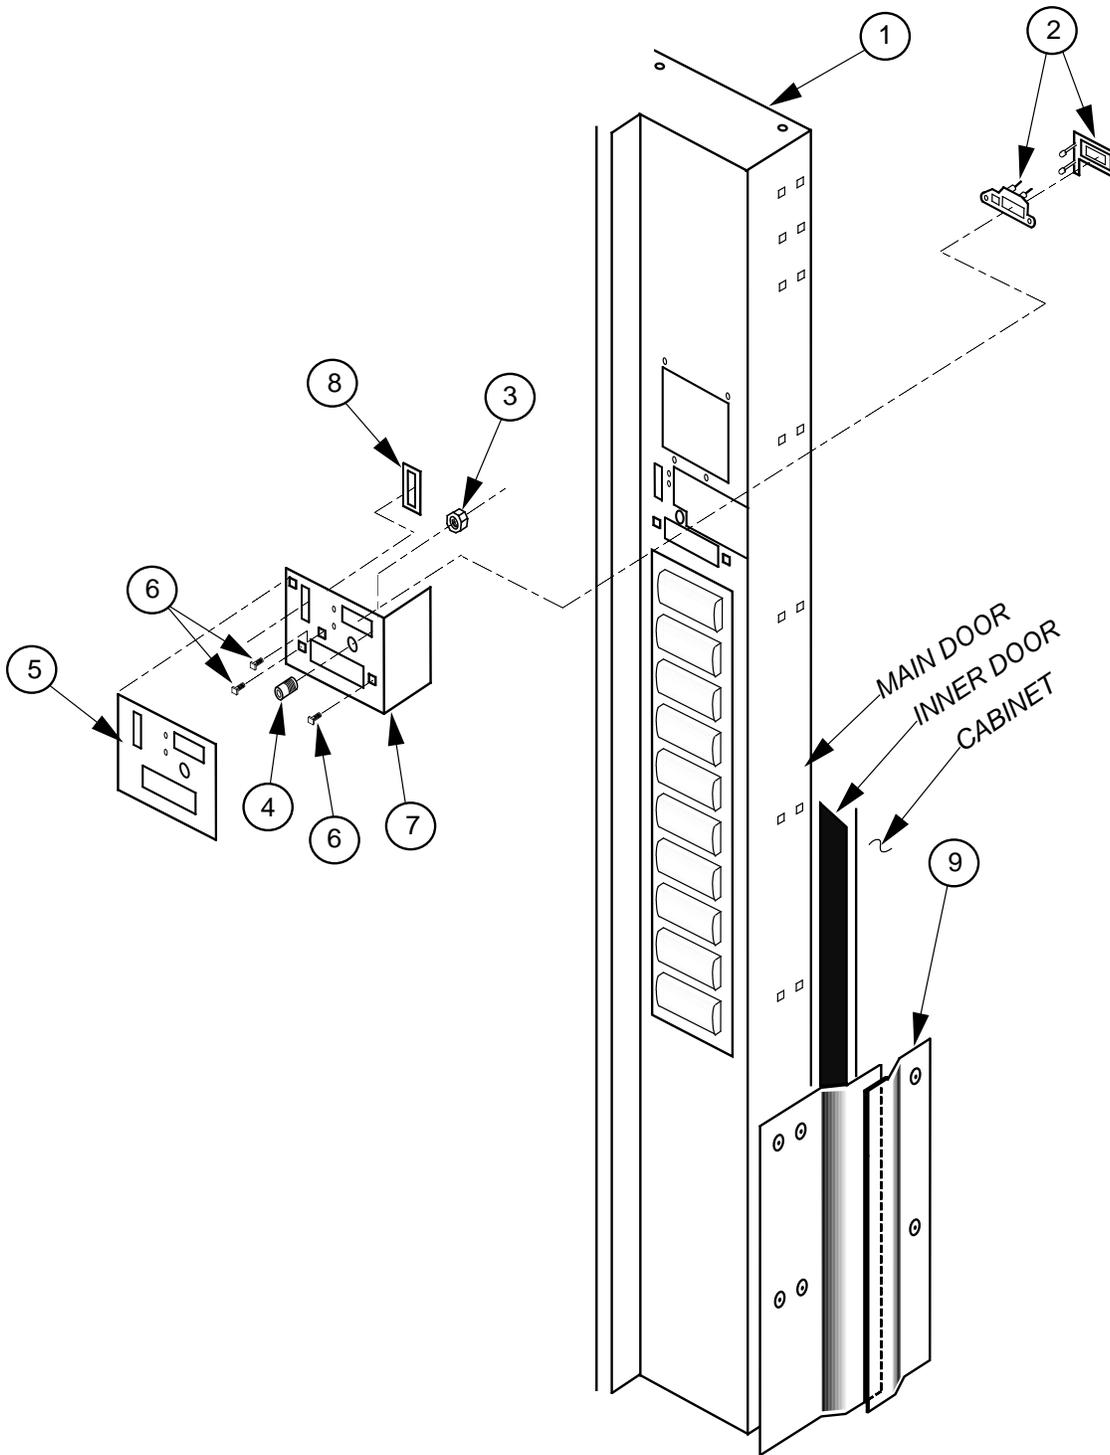

I.D.#A235,034,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

---


### RVCD Vandal Resistant Door (CDC) Front

| ITEM # | DESCRIPTION                               | PART NUMBER |
|--------|---|-------------|
| 1      | C.D.C. Door Weld Assembly 72" Wide* ..... | 274581      |
| 2      | L.E.D. Assembly .....                     | 010593      |
| 3      | Hex Jam Nut 9/16-18 .....                 | 905019      |
| 4      | Bushing (for coin return button) .....    | 803030      |
| 5      | Security Plate Decal .....                | 845530      |
| 6      | "T" Screw 1/4-20x1" .....                 | 901037      |
| 7      | Security Plate Weld Assembly .....        | 195510      |
| 8      | Coin Plate .....                          | 141516      |
| 9      | Vandal Panel Cover 72" .....              | 172001      |

\* Denotes that a color must be specified

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## RVCD Vandal Resistant Door (CDC) Rear

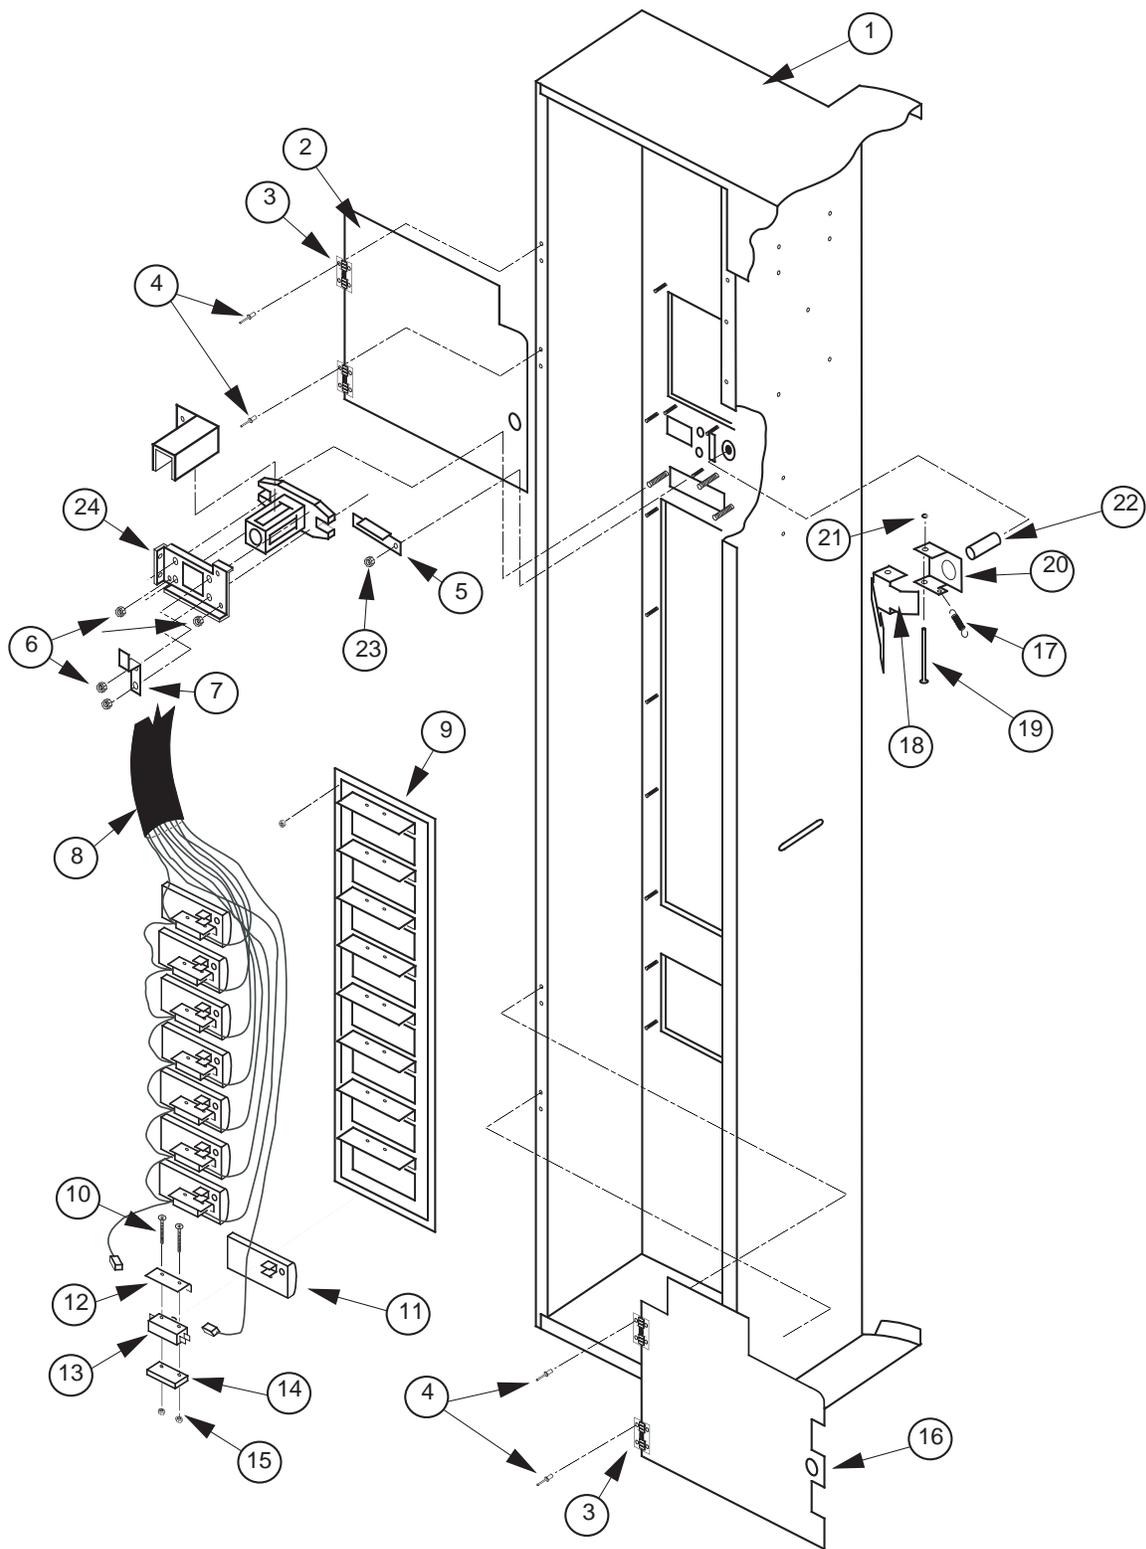

I.D.#A235,036,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

---

### RVCD Vandal Resistant Door (CDC) Rear





| ITEM # | DESCRIPTION                                   | PART NUMBER |
|--------|---|-------------|
| 1      | CDC Door Weld Assembly 72" Wide .....         | 274581      |
| 2      | Validator Security Door .....                 | 141521      |
| 3      | Spring Hinge (for Security Doors) .....       | 912156      |
| 4      | Pop Rivet 1/8" .....                          | 908004      |
| 5      | Coin Ramp .....                               | 141508      |
| 6      | Nut 1/4-20 .....                              | 905002      |
| 7      | Lever Stop .....                              | 141514      |
| 8      | Select Panel Harness .....                    | 842243      |
| 9      | Button Panel Weld Assembly-10 select .....    | 017530      |
| 10     | Screw .....                                   | 901041      |
| 11     | Button Assembly .....                         | 815025      |
| 12     | Spring Shield .....                           | 815164      |
| 13     | Switch, Large .....                           | 835012      |
| 14     | Switch Spacer .....                           | 815018      |
| 15     | Nut .....                                     | 905018      |
| 16     | Cash Box Guard (Security Door) .....          | 011147      |
| 17     | Coin Return Spring .....                      | 914023      |
| 18     | Button Lever (Coin Return Lever) .....        | 161509      |
| 19     | Roller Pin (5/32") .....                      | 811002      |
| 20     | Hinge, Button Lever .....                     | 161508      |
| 21     | Retaining Ring (for 5/32" Diameter Rod) ..... | 906005      |
| 22     | Button, Coin Return Lever .....               | 803031      |
| 23     | Nut #8-32 .....                               | 905001      |
| 24     | T-Handle Brace .....                          | 141513      |

\* Denotes a color must be specified

NOTE #1: There are various parts. Please specify model and serial number at the time of order.

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## RVCD Center Door Changer Vault

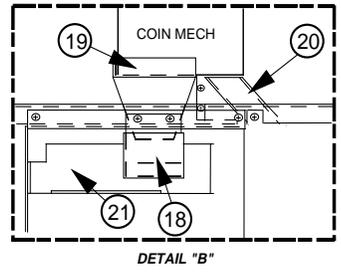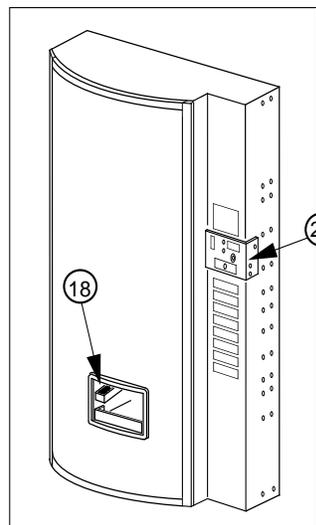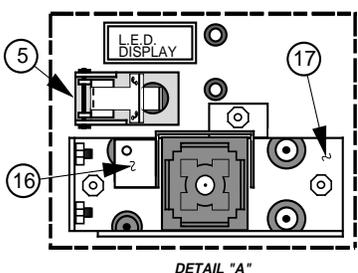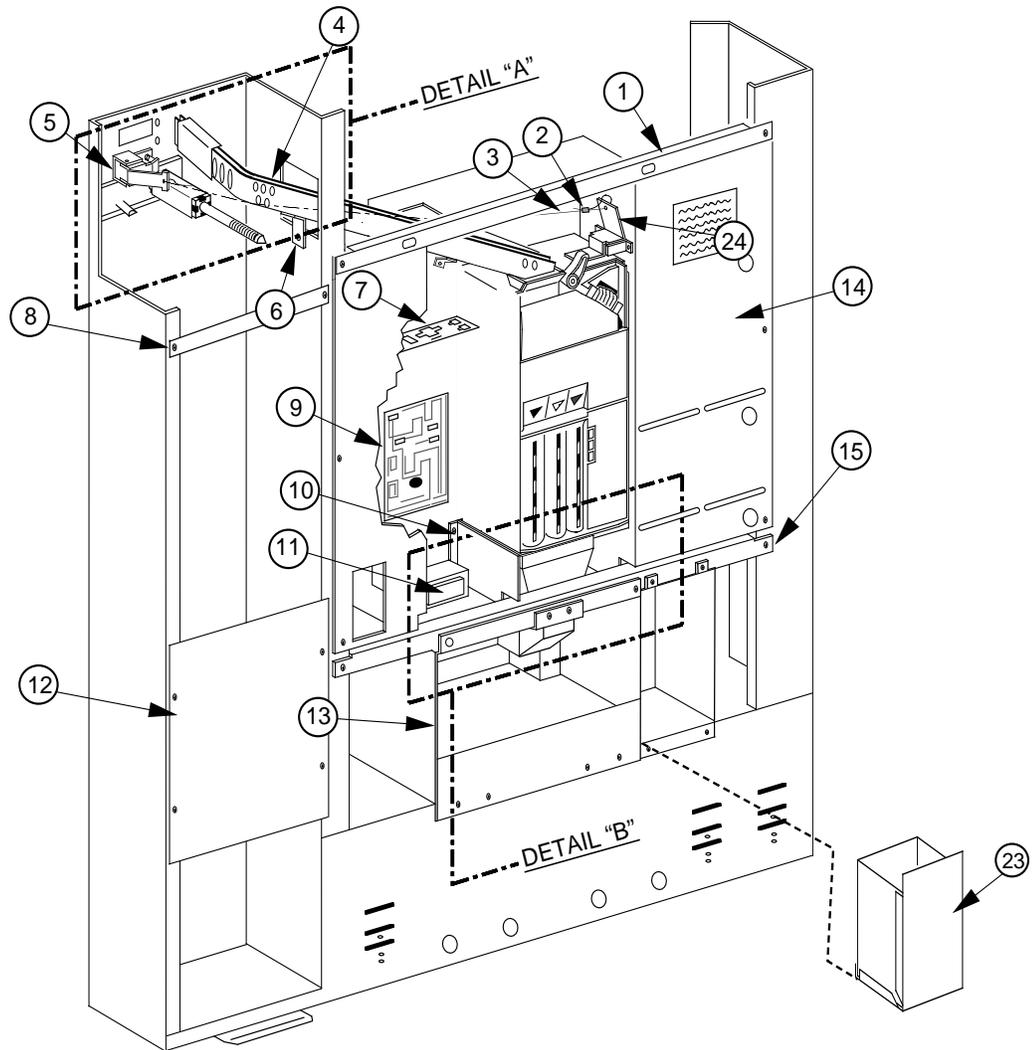

I.D.#A235,088,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS


---

### RVCD Center Door Changer Vault

| ITEM # | DESCRIPTION  | PART NUMBER |
|--------|--|-------------|
| 1      | Changer Vault Brace .....                                      | 161518      |
| 2      | Cable Sleeve (At Each End Of Cable) .....                      | 906015      |
| 3      | Cable .....  | 911032      |
| 4      | Coin Chute Assembly / CDC Wide Vender / 72" .....              | 162540      |
| 5      | Button Lever Assembly (see detail "A") .....                   | 161594      |
| 6      | Coin Chute Bracket 72" .....                                   | 162502      |
| 7      | Changer Plug Bracket .....                                     | 010561      |
| 8      | Panel Strap .....  | 010531      |
| 9      | Control Board .....  | 836139      |
| 10     | Hopper Mounting Bracket .....                                  | 161515      |
| 11     | Transformer Assembly .....                                     | 842147      |
|        | Milk Merchandiser Harness, Transformer and Fuse to Board ..... | 842210      |
|        | Fuse, 3.0 .....  | 942111      |
| 12     | Select Panel Plate .....                                       | 161512      |
| 13     | Port Body Welded Assembly .....                                | 303502      |
| 14     | Changer Vault Welded Assembly .....                            | 303506      |
| 15     | Port Brace Welded Assembly .....                               | 010515      |
| 16     | Lock Cylinder Cover (see detail "A") .....                     | 161532      |
| 17     | T-Handle Brace (see detail "A") .....                          | 141513      |
| 18     | Coin Cup, CDC .....  | 231505      |
| 19     | Coin Hopper .....  | 303502      |
| 20     | Coin Box Coin Chute .....                                      | 303501      |
| 21     | Anti-Theft Plate .....   | 303503      |
| 22     | Security Plate Welded Assembly .....                           | 195510      |
| 23     | Plastic Coin Box .....   | 815347      |
| 24     | Button Lever Assembly (Coin Return Lever) .....                | 303560      |
| •      | Changer Vault Door (Not Shown), Optional .....                 | 161534      |
| •      | Board Cover (CDC) .....  | 815349      |
| •      | Coin Deflector .....   | 161526      |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Flat Horizontal Display, Door Front

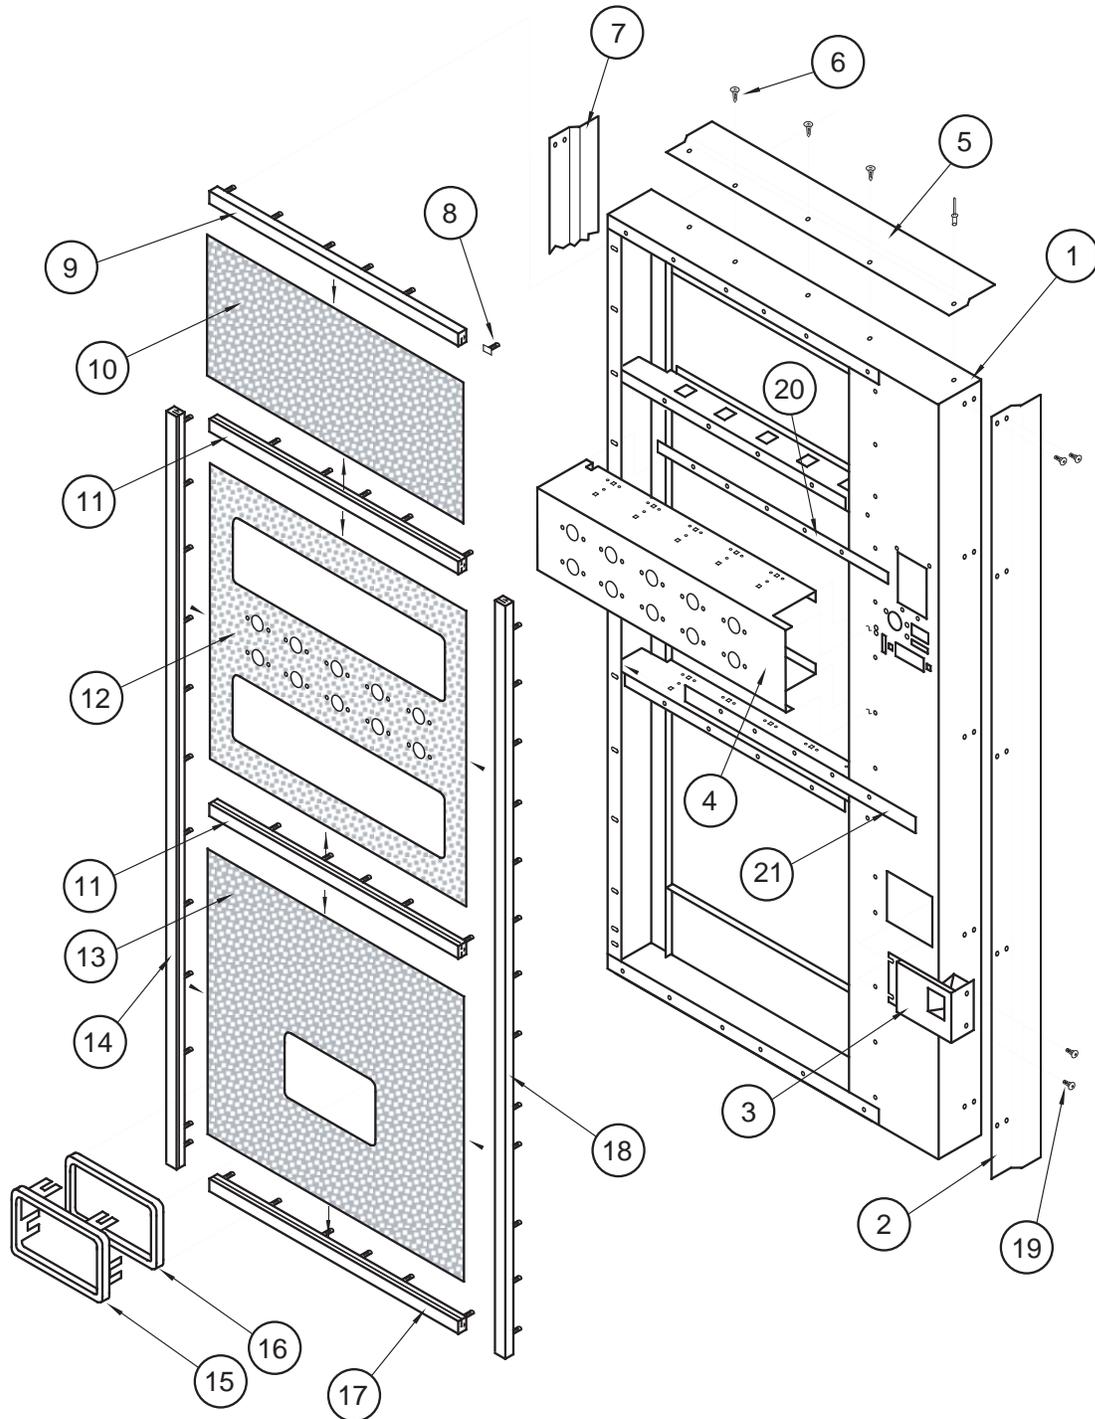

I.D.#A235,072,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

---


### Flat Horizontal Display, Door Front

| ITEM # | DESCRIPTION                                     | PART NUMBER |
|--------|---|-------------|
| 1      | Door Welded Assembly - Flat Display - 72" ..... | 278552      |
| 2      | Right Vandal Panel - 72" .....                  | 011501      |
| 3      | Coin Return Cup Welded Assembly .....           | 012595      |
| 4      | Button Panel - Flat Display - 10 Select .....   | 278502      |
| 5      | Rain Guard - Wide Venders .....                 | 010518      |
| 6      | Screw #8 x 1/2" .....                           | 902004      |
| 7      | Left Vandal Panel, 72" .....                    | 142022      |
| 8      | T-Screw #8-32 .....                             | 901001      |
| 9      | Trim, Top Side .....                            | 032807      |
| 10     | Sign, Top / Flat Display .....                  | SEE NOTE #1 |
| 11     | Trim, Center .....                              | 278511      |
| 12     | Sign, Center / Flat Display .....               | SEE NOTE #1 |
| 13     | Sign, Bottom / Flat Display .....               | SEE NOTE #1 |
| 14     | Trim, Left Side .....                           | 019507      |
| 15     | Port Trim, Wide Port .....                      | 815249      |
| 16     | Port Spacer, Wide Port .....                    | 815248      |
| 17     | Trim, Bottom Side .....                         | 032806      |
| 18     | Trim, Right Side .....                          | 019508      |
| 19     | Carriage Bolt 1/4-20 x 1/2" .....               | 901007      |
| 20     | Price Label Strip - Top .....                   | 278512      |
| 21     | Price Label Strip - Bottom .....                | 278515      |

NOTE #1: There are various parts. Please specify model and serial number at the time of order.

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Flat Horizontal Display, Door Rear

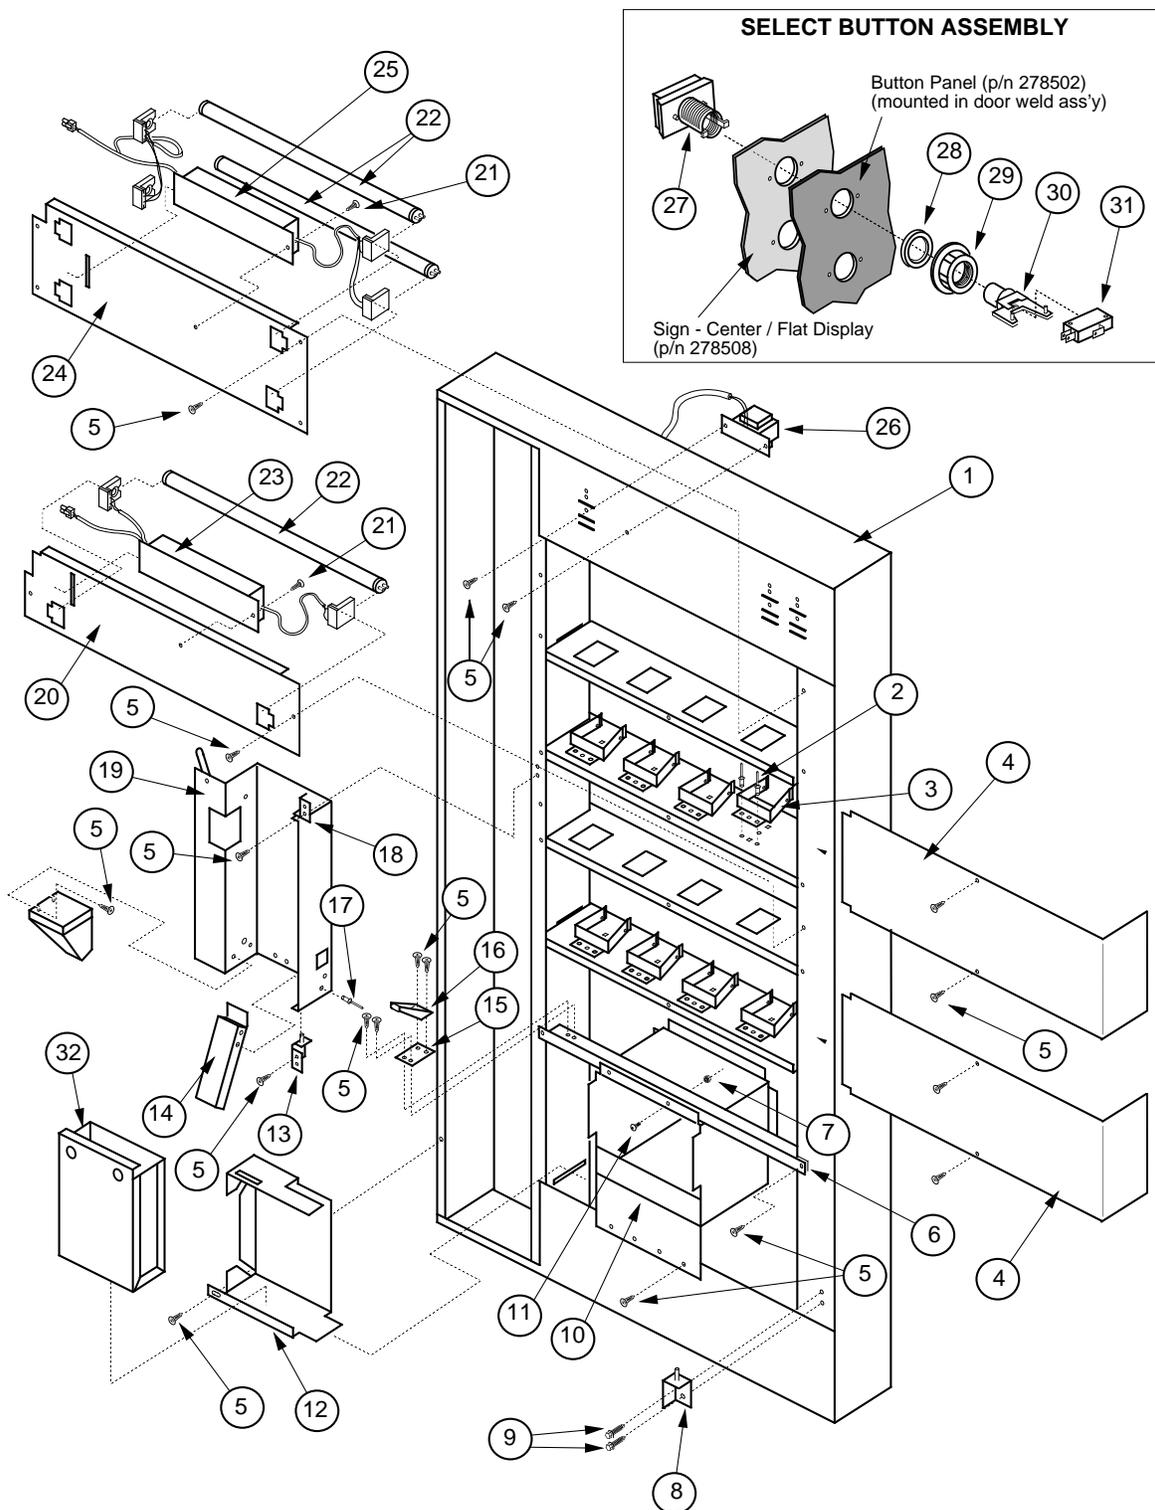

I.D.#A235,073,003RV


## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

### Flat Horizontal Display, Door Rear

| ITEM # | DESCRIPTION   | PART NUMBER   |
|--------|---|---------------|
| 1      | Door Welded Assembly - Flat Display - 72" .....       | 278552        |
| 2      | Pop Rivet 1/8" diameter .....                         | 908004        |
| 3      | Display Product Holder .....                          | 023107        |
| 4      | Display Back - Flat Display .....                     | 278505        |
| 5      | Screw #8 x 1/2" .....                                 | 902004        |
| 6      | Port Brace, Wide Vender .....                         | 010515        |
| 7      | Nut 1/4-20 .....                                      | 905002        |
| 8      | Inner Door Hinge, Bottom .....                        | 010543        |
| 9      | Self Tapping Screw 1/4-20 x 1" .....                  | 901003        |
| 10     | Port Body Welded Assembly - Flat Display .....        | 278520        |
| 11     | Carriage Bolt 1/4-20 x 1/2" .....                     | 901007        |
| 12     | Coin Box Housing .....                                | 010537        |
| 13     | Bottom Changer Door Hinge W/A .....                   | 010560        |
| 14     | Bottom Coin Chute Assembly (to Coin Box) .....        | 012593        |
| 15     | Latch Roller Bracket .....                            | 010516        |
| 16     | Burst Open Latch Strike .....                         | 812003        |
| 17     | Pop Rivet 1/8" dia. Stainless Steel .....             | 908001        |
| 18     | Top Changer Door Hinge W/A .....                      | 010570        |
| 19     | Changer Door .....                                    | 010544        |
| 20     | Lamp Panel - Bottom (Single Bulb) .....               | 278507        |
| 21     | Screw #8-32 x 1/2" w Flat Washer .....                | 901006        |
| 22     | Lamp 20 watt 24" long .....                           | 841012        |
| 23     | Ballast - Single Bulb .....                           | 838005        |
|        | Ballast Assembly - Flat Display (Single Bulb) .....   | 122518        |
| 24     | Lamp Panel - Top (Double Bulb) .....                  | 278506        |
| 25     | Ballast - Double Bulb .....                           | 838024        |
|        | Ballast Assembly - Flat Display (Double Bulb) .....   | 122528        |
| 26     | Transformer Assembly .....                            | 842147        |
| 27     | Button Assembly .....                                 | not available |
| 28     | Washer, Select Button .....                           | not available |
| 29     | Nut, Select Button .....                              | not available |
| 30     | Switch Holder .....                                   | not available |
| *      | Complete Button Assembly (items 27, 28, 29, 30) ..... | 816016        |
| 31     | Switch, Miniature .....                               | 835001        |
| 32     | Coin Box W/A .....                                    | 010580        |

# SECTION 6: EXPLODED VIEWS AND PART NUMBERS

## Flat Horizontal Display, Select Panel

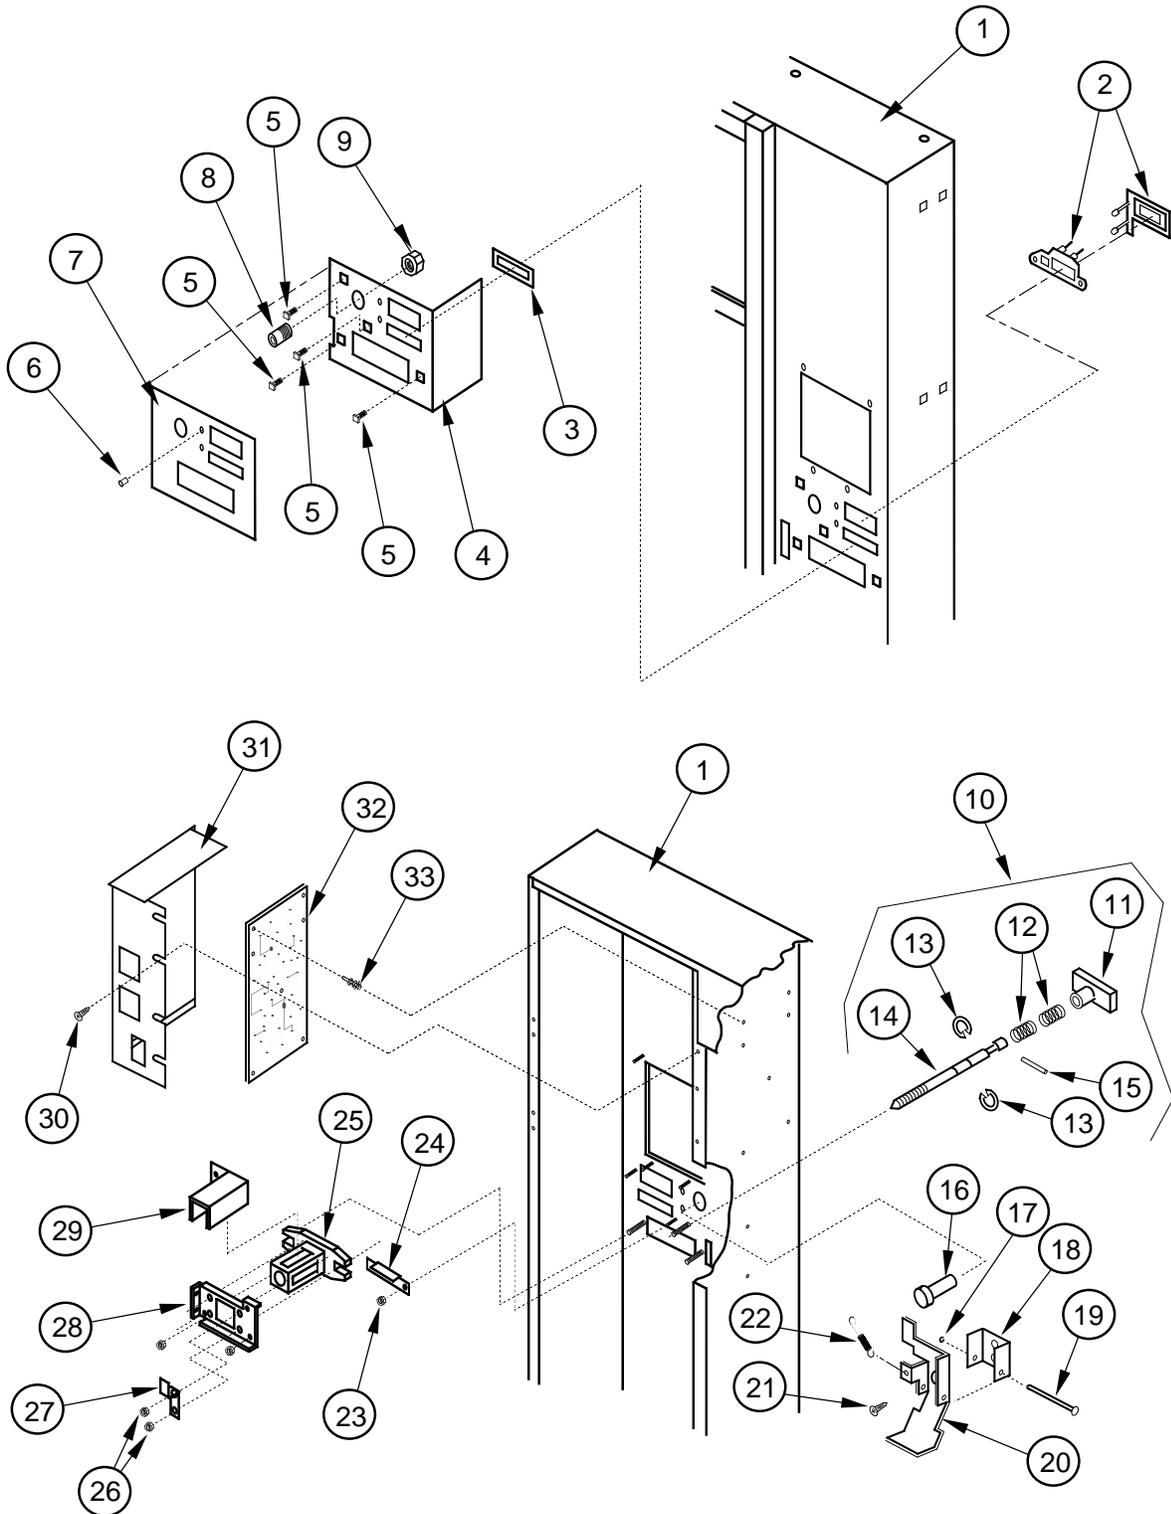

I.D.#A235,074,003RV

## SECTION 6: EXPLODED VIEWS AND PART NUMBERS

 
### Flat Horizontal Display, Select Panel

| ITEM # | DESCRIPTION   | PART NUMBER   |
|--------|---|---------------|
| 1      | Door Welded Assembly - Flat Display - 72" .....             | 278552        |
| 2      | LED Display Assembly .....                                  | 010593        |
| 3      | Coin Plate .....  | 141516        |
| 4      | Security Plate Welded Assembly .....                        | 216502        |
| 5      | T-Screw 1/4-20 x 1" .....                                   | 901037        |
| 6      | LED Lens (Part of LED Assembly) .....                       | 916032        |
| 7      | Security Plate Decal .....                                  | 845641        |
| 8      | Bushing (for coin return button) .....                      | 803030        |
| 9      | Hex Jam Nut 9/16-18 .....                                   | 905019        |
| 10     | T-Handle Assembly .....                                     | 812289        |
| 11     | T-Handle Body (part of T-Handle Assembly) .....             | not available |
| 12     | Spring, T-Handle Assembly (part of T-Handle Assembly) ..... | not available |
| 13     | Retainer Ring, T-Handle (part of T-Handle Assembly) .....   | not available |
| 14     | T-Handle Stud (part of T-Handle Assembly) .....             | not available |
| 15     | Pin, T-Handle (part of T-Handle Assembly) .....             | not available |
| 16     | Button, Coin Return .....                                   | 803031        |
| 17     | Retaining Ring 5/32" .....                                  | 906005        |
| 18     | Hinge, Coin Return Lever .....                              | 141506        |
| 19     | Pin, Coin Return Lever .....                                | 811002        |
| 20     | Coin Return Lever .....                                     | 141504        |
| 21     | Screw #8-32 x 3/8" .....                                    | 901011        |
| 22     | Spring, Coin Return Lever .....                             | 914003        |
| 23     | Nut #8-32 .....   | 905001        |
| 24     | Coin Ramp .....   | 141508        |
| 25     | T-Handle Housing .....                                      | 812190        |
| 26     | Nut 1/4-20 .....  | 905002        |
| 27     | Lever Stop .....  | 141514        |
| 28     | T-Handle Brace .....  | 141513        |
| 29     | Lock Cylinder Cover .....                                   | 161532        |
| 30     | Screw #8-18 x 1/2" .....                                    | 902004        |
| 31     | Control Board Cover .....                                   | 141903        |
| 32     | Control Board .....   | 836139        |
| 33     | PC Board Spacer .....                                       | 916027        |


# PROGRAMMING FLOWCHART



## External Menu





## Internal (Service) Menu

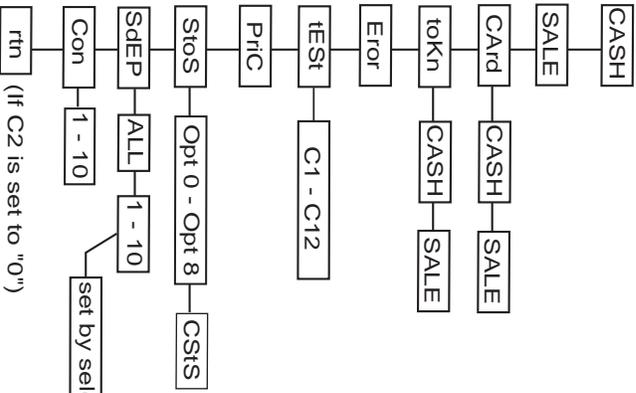

## Optional Menu Items

 (If C2 is set to "1")

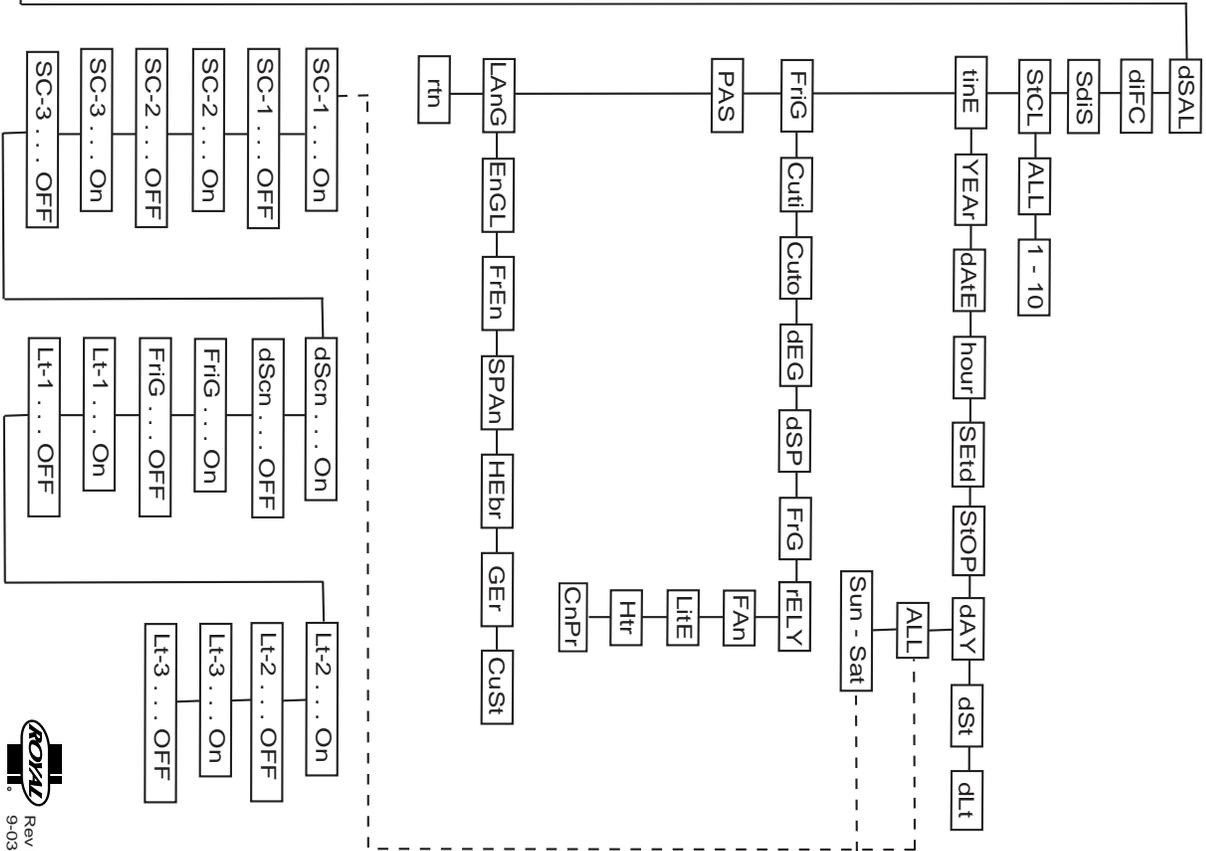



Printed in the  
United States of America



**Royal Vendors' Publication**  
833060  
Rev. B2 - Sept 2005