

# KIT NO. 1216062.033 - INSTALLATION INSTRUCTIONS

## 250 ML FRONT SPACER KIT



### USE THIS KIT FOR CB700, CB300 & COMBO:


To add the functionality of being able to vend 250 ml bottles from a front column of the vend rack.

### TOOLS NEEDED:

- Needle Nose Pliers

### KIT CONTENTS:

PART NUMBER	QTY	DESCRIPTION
4212988	1	Instructions, 250ml Spacer Kit
1216258	3	Common Spacer
1216263	1	Funnel Spacer, Front
4212931	4	Mounting Hook
4210183.001	4	Funnel Slide, Large (6.38 x 6.25)
4210183.002	1	Funnel Slide, Small (1 x 3.1)
4213090.000309	1	250ml Filler (Combo, CB700)
4213096.000309	1	250ml Filler (CB300)
4202255	5.25"	1/4x3/4 Foam
4208243	5.25"	1x1 Foam

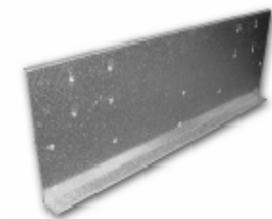

Common Spacer



Funnel Spacer, Front



Mounting Hook



Funnel Slides



Filler (CB300)



Filler (Combo/CB700)



1/4x3/4 Foam Tape




1x1 Foam Tape

### SAFETY & WARNING

Always turn OFF power before servicing.


- 1 Unlatch and remove Product Retainer (door). This will be re-installed at step 9.

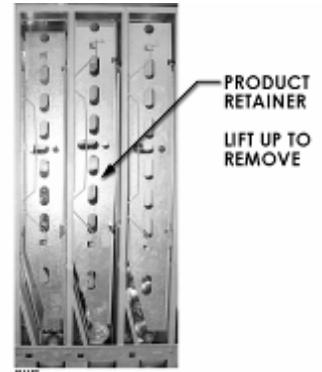

- 2 Install two (2) Mounting Hooks (4212931) on left side. One at top and one at bottom.



BEFORE

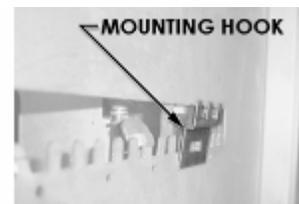

AFTER

MOUNTING HOOK (LEFT TOP)



BEFORE



AFTER


MOUNTING HOOK (LEFT BOTTOM)

# KIT NO. 1216062.033 - INSTALLATION INSTRUCTIONS


## 250 ML FRONT SPACER KIT




- 3** Install Funnel Spacer (1216263) on the bottom left inside wall. Install Common Spacer on the top left inside wall.

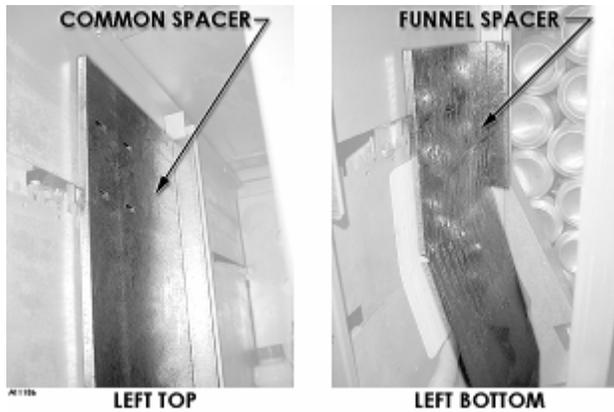


- 4** Install large (6.38 x 6.25) Funnel Slide between Common Spacer and Funnel Spacer. Install another large Funnel Slide on the Common Spacer just slightly below the first one.

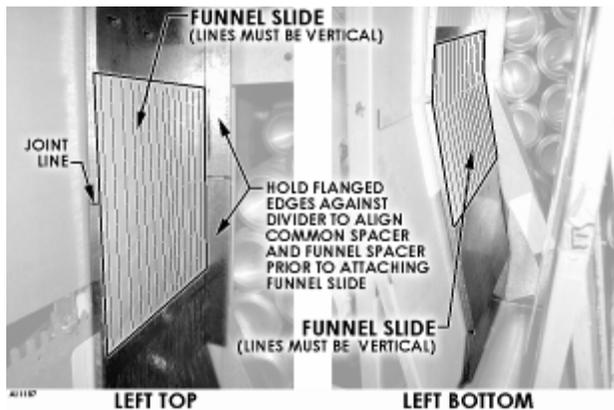


- 5** Remove Latch Striker from original position and relocate against Common Spacer and Funnel Spacer.

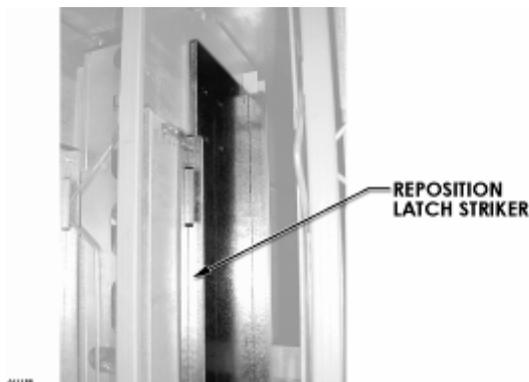

- 6** Install two (2) Mounting Hooks (4212931) on right side. One at top and one at the bottom.

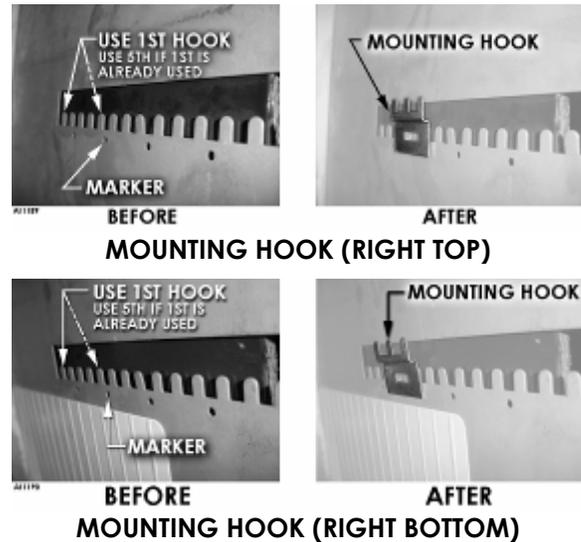

- 7** Install two (2) Common Spacers on right inside wall. One at top and one at bottom.

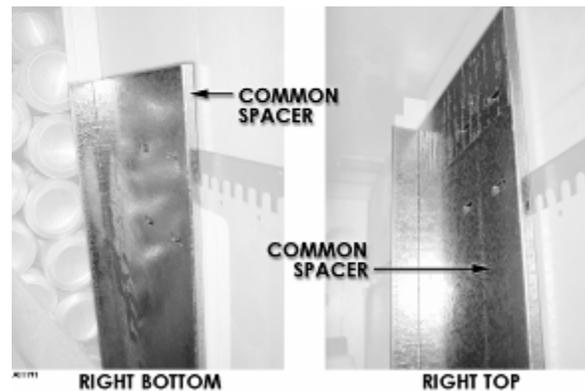


# KIT NO. 1216062.033 - INSTALLATION INSTRUCTIONS


## 250 ML FRONT SPACER KIT



- 8** Install large (6-3/8x6-1/4) Funnel Slide between both Common Spacers. Install another large Funnel Slide on the top Common Spacer just slightly below the first Funnel Slide. Install small (1-3-1/8) Funnel Slide on the inside edge of the Center Filler.

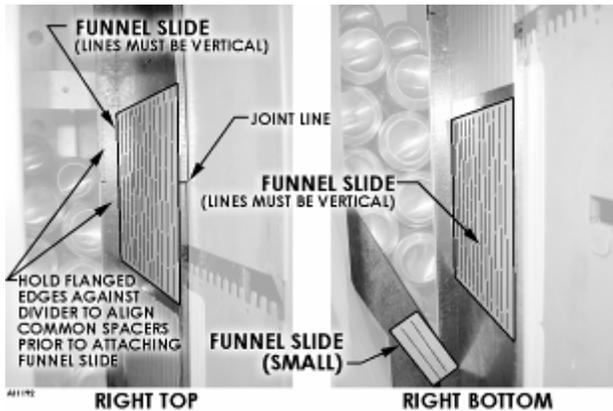

- 9** Install Front Product Retainer (door) against the Common Spacers. Close Product Retainer (door).

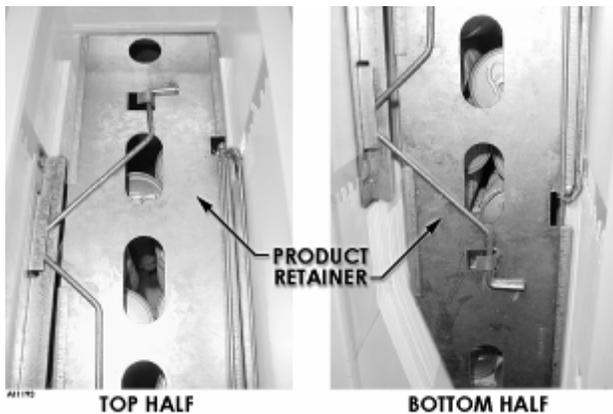


- 10** Install Fillers for product display.  
If CB300, go to step 11.  
If Combo or CB700, go to step 12.

### 11 Install Fillers on CB300 Product Display.

- 11a** Unlatch and open inner door. Place product inside Filler. Slide Filler and product into the matching selection letter slot of the product display.



- 11b** Rotate the product if product markings are not correctly shown.

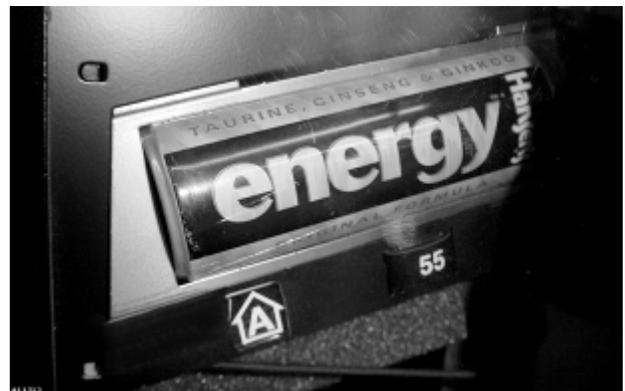

# KIT NO. 1216062.033 - INSTALLATION INSTRUCTIONS

## 250 ML FRONT SPACER KIT




### 12 INSTALL FILLERS ON COMBO OR CB700 PRODUCT DISPLAY.

**12a** Install 1/4" x 3/4" Foam to Filler as shown.

**Only for Combo:** Install additional 1" x 1" Foam on Filler. The additional foam is not necessary for CB700.

1" X 1" FOAM  
(FOR COMBO ONLY)

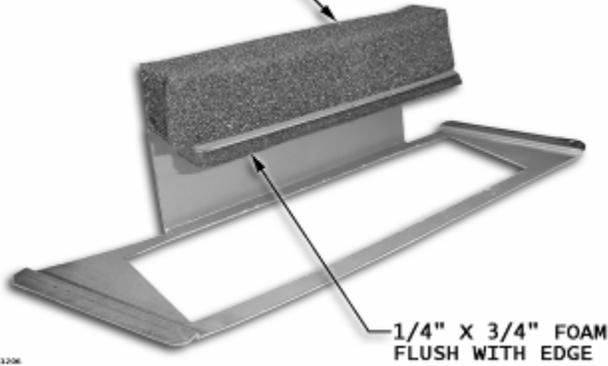

**12b** Slide product inside Filler with brand markings facing the customer.

SHOW PRODUCT LABEL



**12c** Open inner door. Gently pull open the product display back cover and slide the product and Filler into the product display slot.



**12d** Place product and filler deep inside the display slot.



**12e** Rotate the product if product markings are not correctly shown.

